



UNDERMOUNT SINK INSTALLATION GUIDE




INCLUDED	NEEDED	HARDWARE	
<ul style="list-style-type: none"> • Base cabinet • Countertop • Sink basin • Backsplash • Hardware 	<ul style="list-style-type: none"> • Permanent marker • Silicone - (Recommend Liquid Nails #LN-933 OR Loctite #PL530 OR GE Silicone II #M90010) • Epoxy - (Recommend Loctite #1365868 OR Gorilla Glue #4200101) • Caulking gun 	<p>A</p>  <p>Bolts (4)</p> <p>C</p>  <p>Washers (4)</p>	<p>B</p>  <p>Undermount clips (4)</p> <p>D</p>  <p>Wing nuts (4)</p>

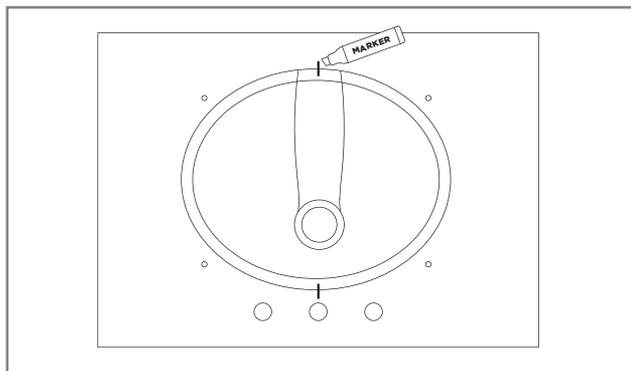


STEP 1 - PLACE & TRACE
Place the sink basin on the bottom of the countertop, making sure to center over the opening. Draw guide lines on the countertop and the basin in two locations.

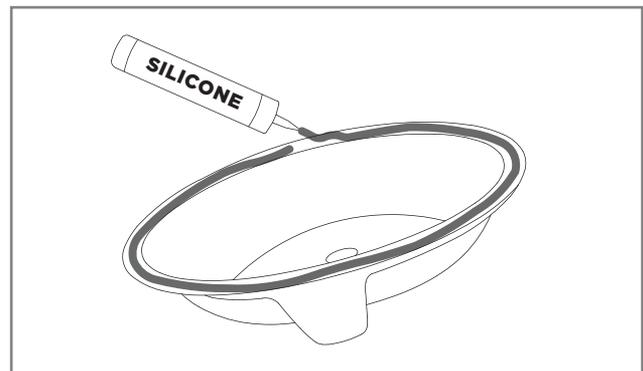

STEP 2 - PREPARE SINK BASIN
Using a caulking gun, apply a heavy amount of silicone of your choice on the top side of the sink basin edge.

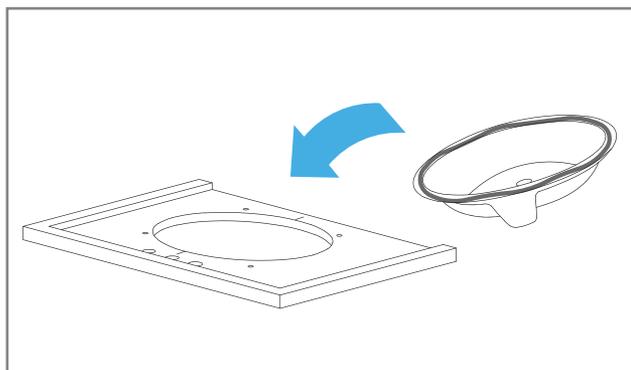


STEP 3 - FLIP & SET IN PLACE
Carefully flip the sink basin over and place it so the guide lines match up in both locations.

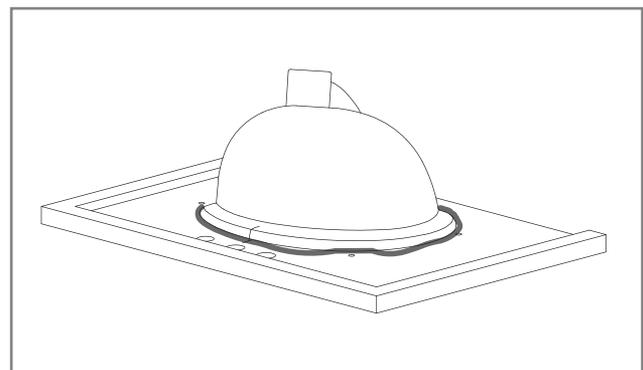

STEP 4 - DRY & SET
Press down on the sink basin to seal the silicone. Remove any excess. Follow dry time recommendations found on your product, typically 12 to 24 hours.


Need Further Assistance?

For more help, please contact us and one of our trusted experts will be more than happy to provide guidance.

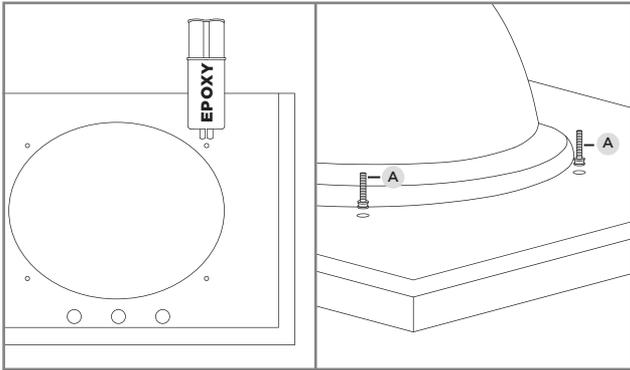

STEP 5 - PREPARE & SET BOLTS

Fill in the small holes surrounding the sink basin with epoxy. Immediately place the top of the bolt (PART A) in the hole with the epoxy. Allow sufficient dry time & follow the package directions on the epoxy before moving to the next steps, typically 12 to 24 hours.

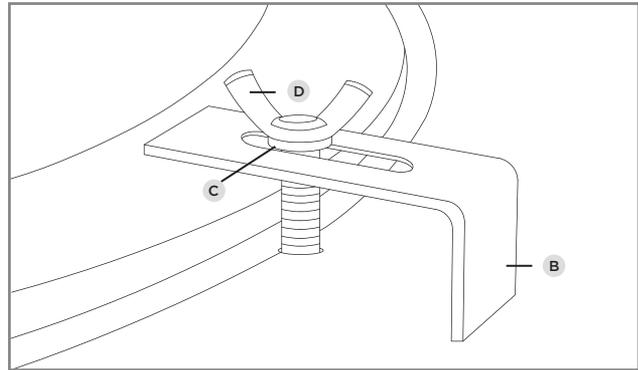


STEP 6 - ATTACH UNDERMOUNT CLIPS

After following recommended drying time, attach the undermount clips (PART B) facing down, place the washer (PART C) on the clips & use the wing nuts (PART D) to secure in place. Apply silicone to the wing nut for added stability.




STEP 7 - PREPARE BASE CABINET

Using a caulking gun, apply silicone around the top of the base cabinet.

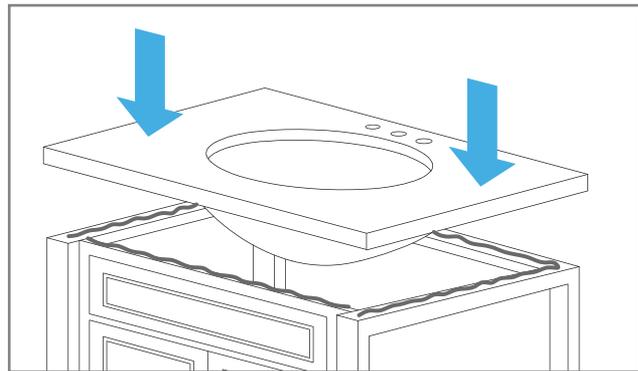


STEP 8 - SET COUNTERTOP IN PLACE

Carefully place the countertop, with the sink attached, onto the cabinet making sure to line up and center over the cabinet. There should be 1/2" overhang on each side of the cabinet and the front. The countertop edge does **not** wrap around the base cabinet, it sits on top. Press firmly down and wipe away any excess silicone immediately.

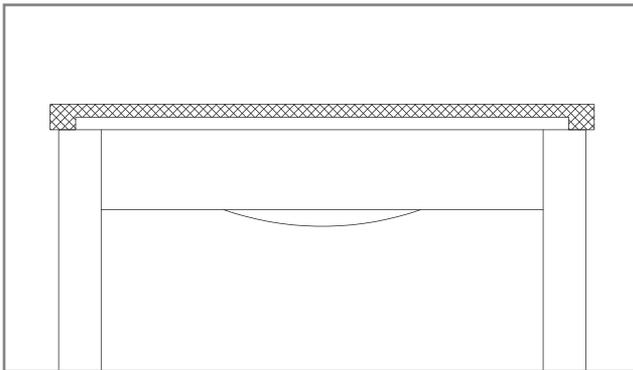

STEP 9 - VERIFY COUNTERTOP PLACEMENT

If installed correctly, the countertop should look like the image above.

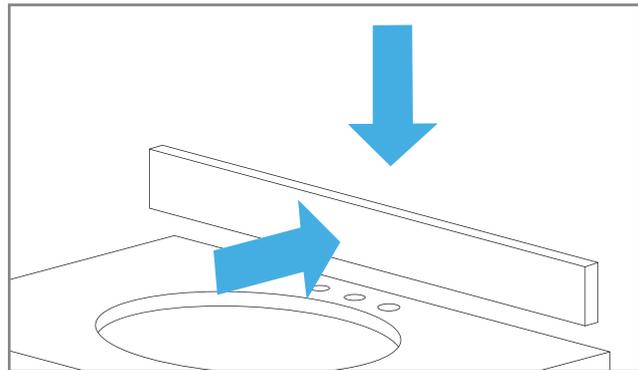

STEP 10 - SET BACKSPLASH

After the vanity is in place, use a caulking gun to apply silicone to the back and bottom unfinished sides of the backsplash. Press firmly down and back to set in place. Remove any excess silicone.

Need Further Assistance?

For more help, please contact us and one of our trusted experts will be more than happy to provide guidance.