


BIKE TREE - SOLO

BIKE TREE-SOLO MOUNTING INSTRUCTIONS

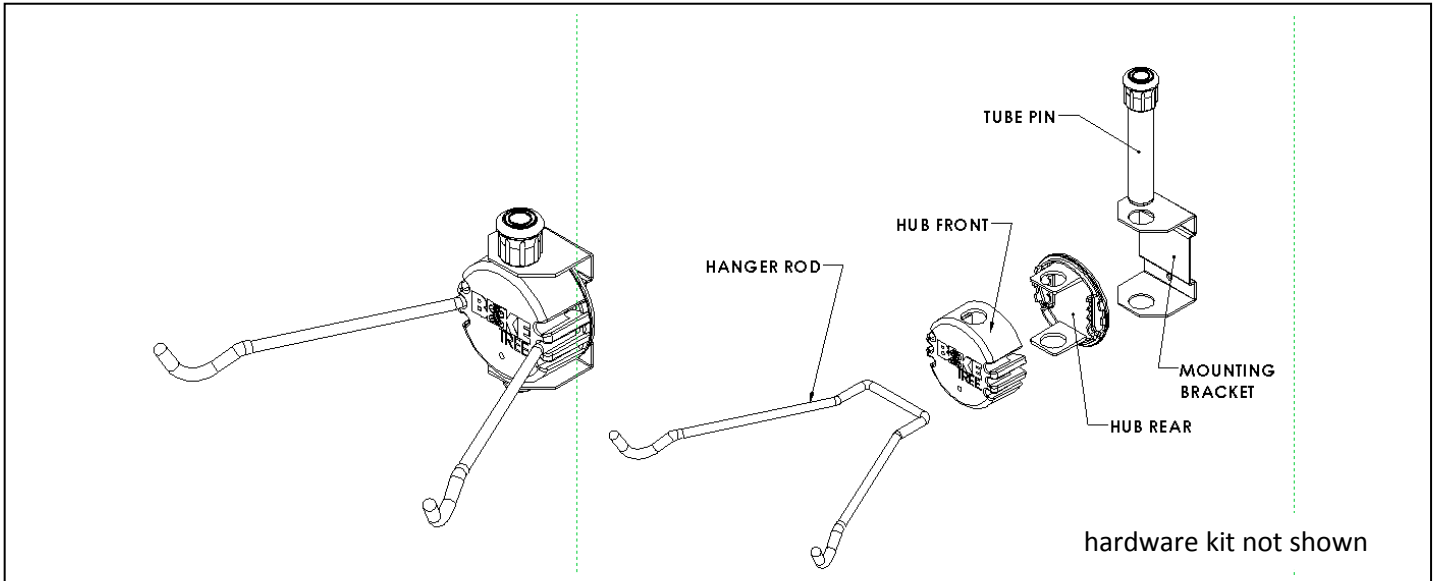

1. Determine location of the Bike Tree-Solo. Allow sufficient room to fit bicycle.
2. Check to see if mounting bracket will be mounted on a wall stud (go to step 3), or directly onto the drywall (go to step 4).
3. Wall stud mounting:
 - Use mounting bracket as a template to mark the screw locations. Make sure that the holes are vertical.
 - Drill pilot holes using an 1/8" drill bit.
 - Install mounting bracket using supplied screws and washers. Tighten until bracket is firm and secure.
4. Drywall mounting:
 - Use mounting bracket as a template to mark the screw locations. Make sure that the holes are vertical
 - Install supplied self-drilling drywall anchors with a phillips screwdriver. Install until anchor head is flush with the wall. Do not overtighten.
 - Install mounting bracket using supplied screws and washers. Tighten until bracket is firm and secure. You will hear a popping sound when you install the screws. This ensures that the anchor is firmly seated.
5. Hub assembly:
 - Determine hanger rod configuration (straight or angled) and insert to the hub front.
 - Close hub by inserting hub rear.
6. Place the hub assembly into the mounting bracket. Insert the tube pin to secure the hub. Make sure that the tube pin goes all the way thru the bracket.
7. Hang bicycle (50 lbs maximum).

Questions? Contact us:
Sure Trak Corp.
1701 W. 10th Street, #18. Tempe, AZ 85281 480-968-2656 www.bike-tree.com