



EDGE *your tiles*

1. Choose your profile shape - rounded edge straight edge or square edge tile trim.


Rounded edge

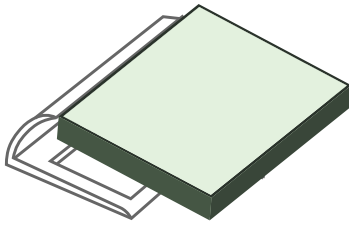


Straight edge

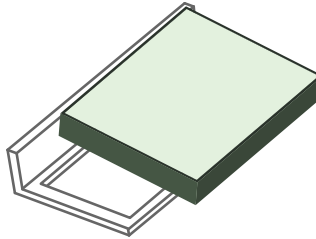


Square edge

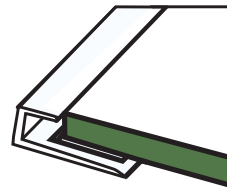

2. Measure the tile and select the correct tiletrim depth eg. Tiles up to 6mm in depth should use a 6mm tiletrim.

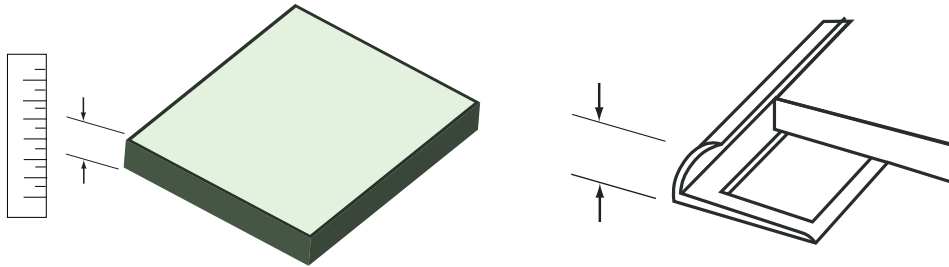

3. Measure length required, cut and mitre trim if necessary using a Homelux Mitre Box (this can be purchased online).

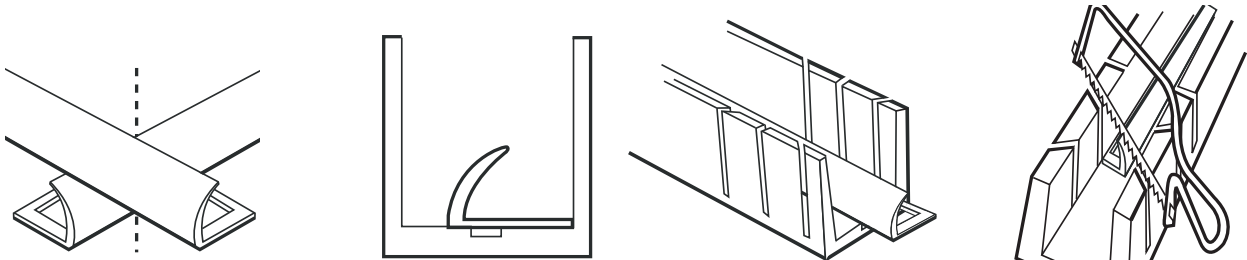

4. Press the trim into the tile adhesive ensuring that the adhesive passes through the anchor holes.
5. Tile over the rear leg of the tiletrim and continue to tile as per the tile manufacturer's fitting instructions. Ensure the top edge of the tiletrim is flush with the tile.
6. Grout the tiles and ensure that all excess grout and adhesive is removed immediately.

