

MOUNTING INSTRUCTIONS FOR MIRRORS AND PICTURE FRAMES


TOOLS REQUIRED




Safety Glasses



Tape Measure



Level



Power Drill




Hammer




Phillips Head
Screwdriver

STEP 1:

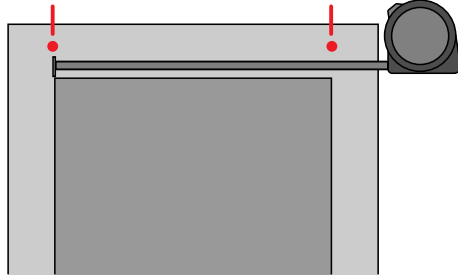


Measure the distance between the mounting hardware on the back of the frame with a tape measure.

STEP 2:

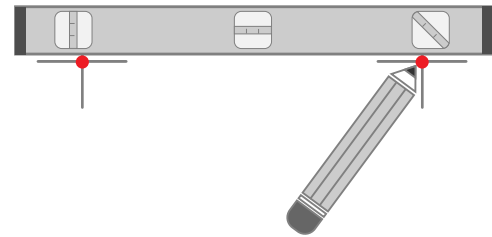

Using a pencil, mark the mounting hardware distance on your wall. Use a level to ensure that the two points are straight and level.


STEP 3:

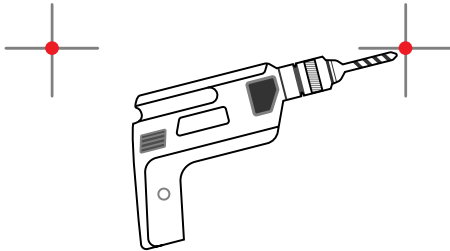

If using drywall anchors, use a power drill (follow anchor manufacturer instructions) to pre-drill pilot holes in each point.


DANGER: Ensure that you are not drilling into utility lines within the wall.

STEP 4:

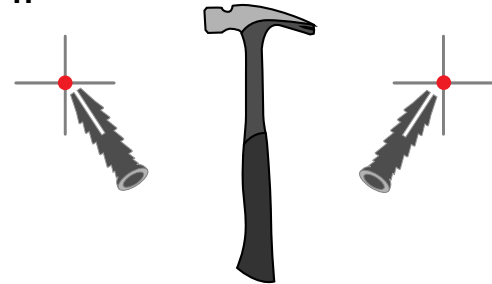


Lightly tap the drywall anchors into the pilot holes with a hammer until anchor head is flush with the wall.

STEP 5:

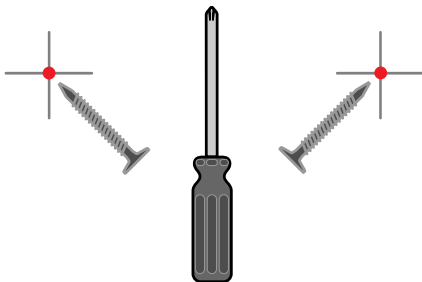

Use a Phillips head screwdriver to insert the screws into the stud or drywall anchors. Leave a gap between the screw head and wall to catch the frame mounting hardware.

STEP 6:

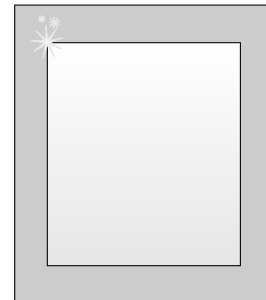

Insert frame mounting hardware onto the screws and enjoy.

! WARNING

- Read and follow instructions carefully.
- Keep small parts away from children.
- Consult a qualified professional if you are unsure about your wall type, whether utility lines are behind your wall or if you're unsure what mounting hardware to use.

THANK YOU

We appreciate the trust and confidence you have placed in Home Decorators Collection. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Decorators Collection!