
404G-6BB




## INSTALLATION INSTRUCTIONS

## Step 1: Drill Ø9/16" Holes into Glass Door

Determine your desired location for installation and make 2 marks for the location for mounting. Drill  $\emptyset$ 9/16" hole at each of the marks.

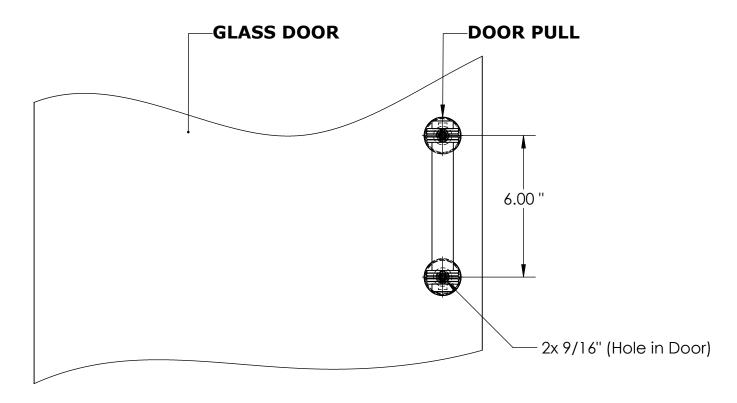

## Step 2: Shower Door Pull Mounting

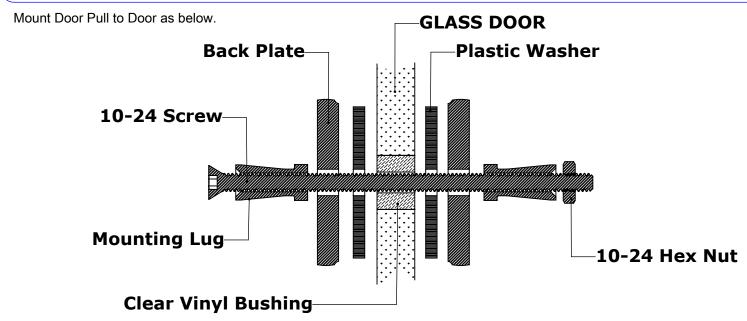

No portion of this document or any artwork contained herein should reproduced in any way without the written conset of ALLIED BRASS INC.