


DECORATIVE MDF PERFORATED SCREENING PANELS INSTALLATION

Things needed:

- 2 ft High x 6 ft Wide MDF screening panel
- Saw
- Wood Glue
- Nails
- Measuring Tape
- Paint or Paint Spray
- Paint Roller

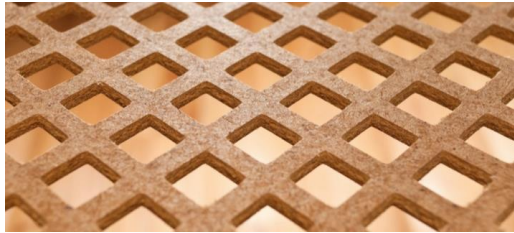

Prepare:

- MDF Screen Panels are sold **NATURAL UNFINISHED**. They might need some sanding.
- Panels are produced in “Landscape” position
- Measure the inside of the cabinet or opening where lattices will be inserted
- Make sure cabinets have a frame to attach and conceal panels
- Cut panels to desired size
- You **MUST PRIME** the panel before painting
- When painting the MDF panels, it is recommended to use a roller or spray paint. Using a paint brush is more difficult and tends to cause brush marks.
- The MDF panel may be painted on both sides, if desired, for the have smooth surfaces



Install: Once finished, MDF Screen Panels can be glued on or nailed to Cabinet Wall.