


IT'S AMAZINGLY EASY!


No shim or small board spacer needed

Step 1

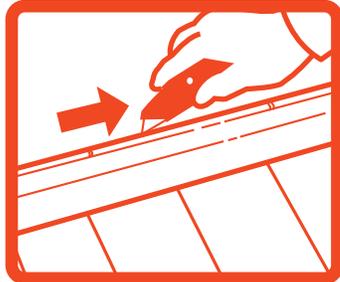


Use a utility knife or painters 5-in-1 tool to score top of seam where trim meets the wall.

Step 2

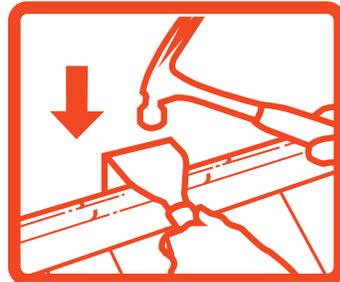

Position Trim Puller's front face against the wall with the sharp edge on the seam where trim meets the wall. For best results start at the end of baseboard strip.

Step 3

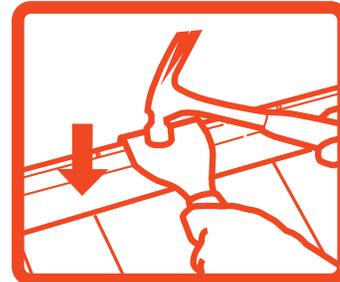

Strike top of Trim Puller with hammer or hard mallet driving the Trim Puller between the trim and the wall. The wedge will begin to separate the trim from the wall.

Step 4



Once the Trim Puller is wedged between the trim and the wall gently pry the trim away from the wall creating a gap of approximately 4" to 8". Repeat Steps 2 – 4 moving the Trim Puller along the wall in 12" increments or as needed. The gap in Step 4 will increase with each pull until removed.

ZENITH
INDUSTRIES