



Before



After



1

Tools for the job



2

Clean window thoroughly



3

Measure window



4

Use grid on backing paper as a guide




5

Cut the film 2mm smaller than the window



6

Spray glass with water

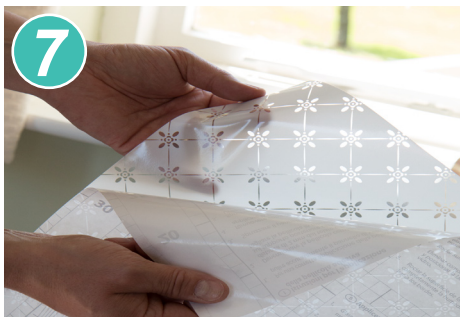

7

Peel away backing paper



8

Apply & smooth into place



9

Dry with a cloth