

Preparing Guide

For Natural Grass or Sod

Measure the Area



You will need to know exact measurement of the Area where you want to install. So you can have enough product to cover the installation Area.



If you are installing on a existing natural grass, mow shortest to the ground.



Find a Bare Ground spot and seed the area

For Bare Ground 1



Top Soil the ground first



Seed on top of the Top Soil.

For more information on installation, please visit our website or give us a call.

Tel: 201-343-3468

<http://ezhybridturf.com/video.html>

Installation Guide

2. Open the Package



Open the package using sharp box cutting knife. Be careful not to damage the turf.

3. Cut off Selvage




Cutting the selvage will prevent from wrinkling up. It will be much easier to pull and stretch out to get best installation.

4. Lay Down to the Ground



Lay down where you want to install. Make sure all the wrinkles are gone.

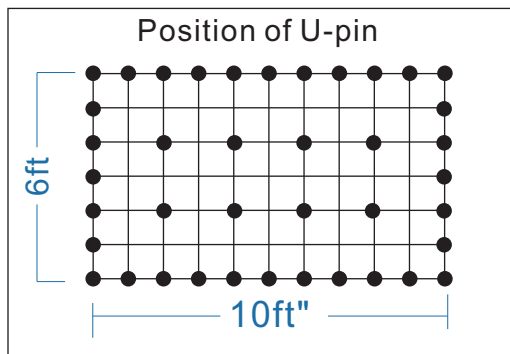

Black dots are the positions of U-Pins.
1 U-Pin for every 1ft for Out layer.
1 U-Pin for every 2ft for inner layer.

5. Nail Down U-Pin



Nail down one side first, this will make installation lot easy (after one side installed, be sure to pull and nail the other side for tight installation).
45degree angle inward recommended

6. Final look



For more information on installation, please visit our website or give us a call.

Tel: 201-343-3468

<http://ezhybridturf.com/video.html>