



www.fibatape.com to view our easy-to-follow “How-To” Videos!

Taping Drywall Joints



1. Simply apply self-adhesive tape to the length of the joint, pressing firmly. No precoating with drywall compound required.



MEETS
OR EXCEEDS
ASTM
C474 AND C475

2. Apply drywall compound in smooth light coats forcing compound through mesh into seam between drywall sheets.



3. Use a smaller drywall knife (6") for the first coat and a larger drywall knife (8" or 12") for finishing coats.



4. Sand lightly between coats. Sand final coat to a smooth finish using fine grit sandpaper.



FibaTape® products are a complete line of drywall finishing solutions backed by industry leading innovation.

Drywall
Tapes

Patch and
Wall Repair

Sanding
Products

Specialty
Products

Taping Drywall Corners with FibaTape®



1. Measure and cut to appropriate length. Fold and crease tape before applying. (If using Steel Reinforced Corner Tape, metal side is faced toward corner.)



2. Apply compound. Embed corner into compound.




3. Spread excess over corner and smooth. When dry, lightly sand and apply a thin finish coat of compound.




4. After drying, sand lightly. Additional finish coats may be required.

Project Tools

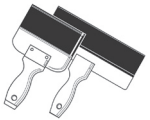

4" and 8"
Drywall Knife



Mud Pan



FibaTape®
Drywall
Joint Tape



FibaTape®
Corner Tape



Utility
Knife



Drywall
Compound



FibaTape®
Sand Paper or
Sanding Screen
and a Pole or
Hand Sander

Visit www.fibatape.com to view our easy to follow "How-To" videos!

FibaTape is a registered trademark of Saint-Gobain ADFORS

© 2011 SAINT-GOBAIN ADFORS

www.fibatape.com

#1412 11/11

