




Wiring Diagram for HT1

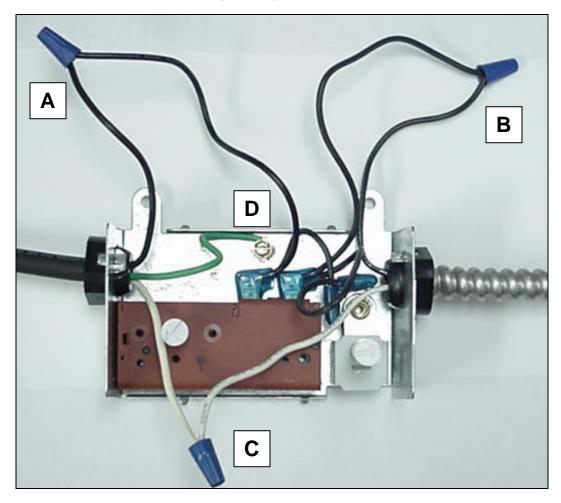

NOTE: MAKE SURE POWER IS SHUT OFF AT BREAKER BEFORE WIRING TO AVOID ELECTRIC SHOCK.

- Connect the black wire from the power source to one of the black wires on the HT1. (A)
- Connect the black wire from the fan motor to the other black wire on the HT1. (B)
- Connect the white wire from the power source to the white wire from the fan motor.
 (C)
- Connect the ground wire from the power source to the green ground screw on the HT1 housing. (D)



and Ventilation

Quality you Can Trust Since 1886... from North America's Largest Roofing Manufacturer