

# Installation Guide

Category 6 Jack

## PACKAGE CONTENTS

- A - (1) Category 6 Jack
- B - (1) Punch Down Tool
- C - (1) Plastic Dust Cover

## TOOLS NEEDED


- Wire Cutters

\*To meet TIA/EIA 568 standards, only use CAT 6 23AWG network cable.

## Installation


### 1 PLACING THE WIRES

- Wiring scheme **A** is for residential.
- Wiring scheme **B** is for commercial.

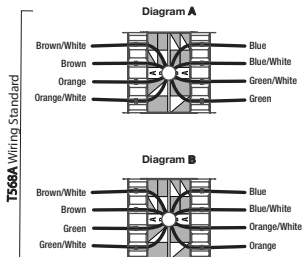


### 2 TERMINATING THE JACK

- Remove 2 1/2" of cable jacket and insert cable into Cat 6 Jack using the wiring standards on the diagram in Step 1.
- Punch down all wires on the jack (A) using the included plastic punch-down tool (B).

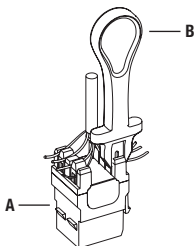

### 3 TRIMMING THE WIRES


- Use wire cutters to remove the excess wire.

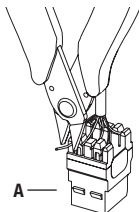

\*NOTE\* Do not twist or break off excess wire.

### 4 INSTALLING THE DUST COVER

- Place Dust Cover (C) over jack and snap into place.

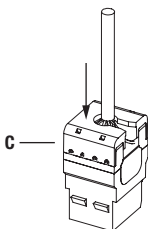

\*NOTE\* Dust Cover (C) cannot be used to punch-down wires.

## Safety Information

Please read all instructions and safety information before use. Retain this manual for future reference.

**CAUTION:** When using tools always follow the manufacturer's safety guidelines.

