
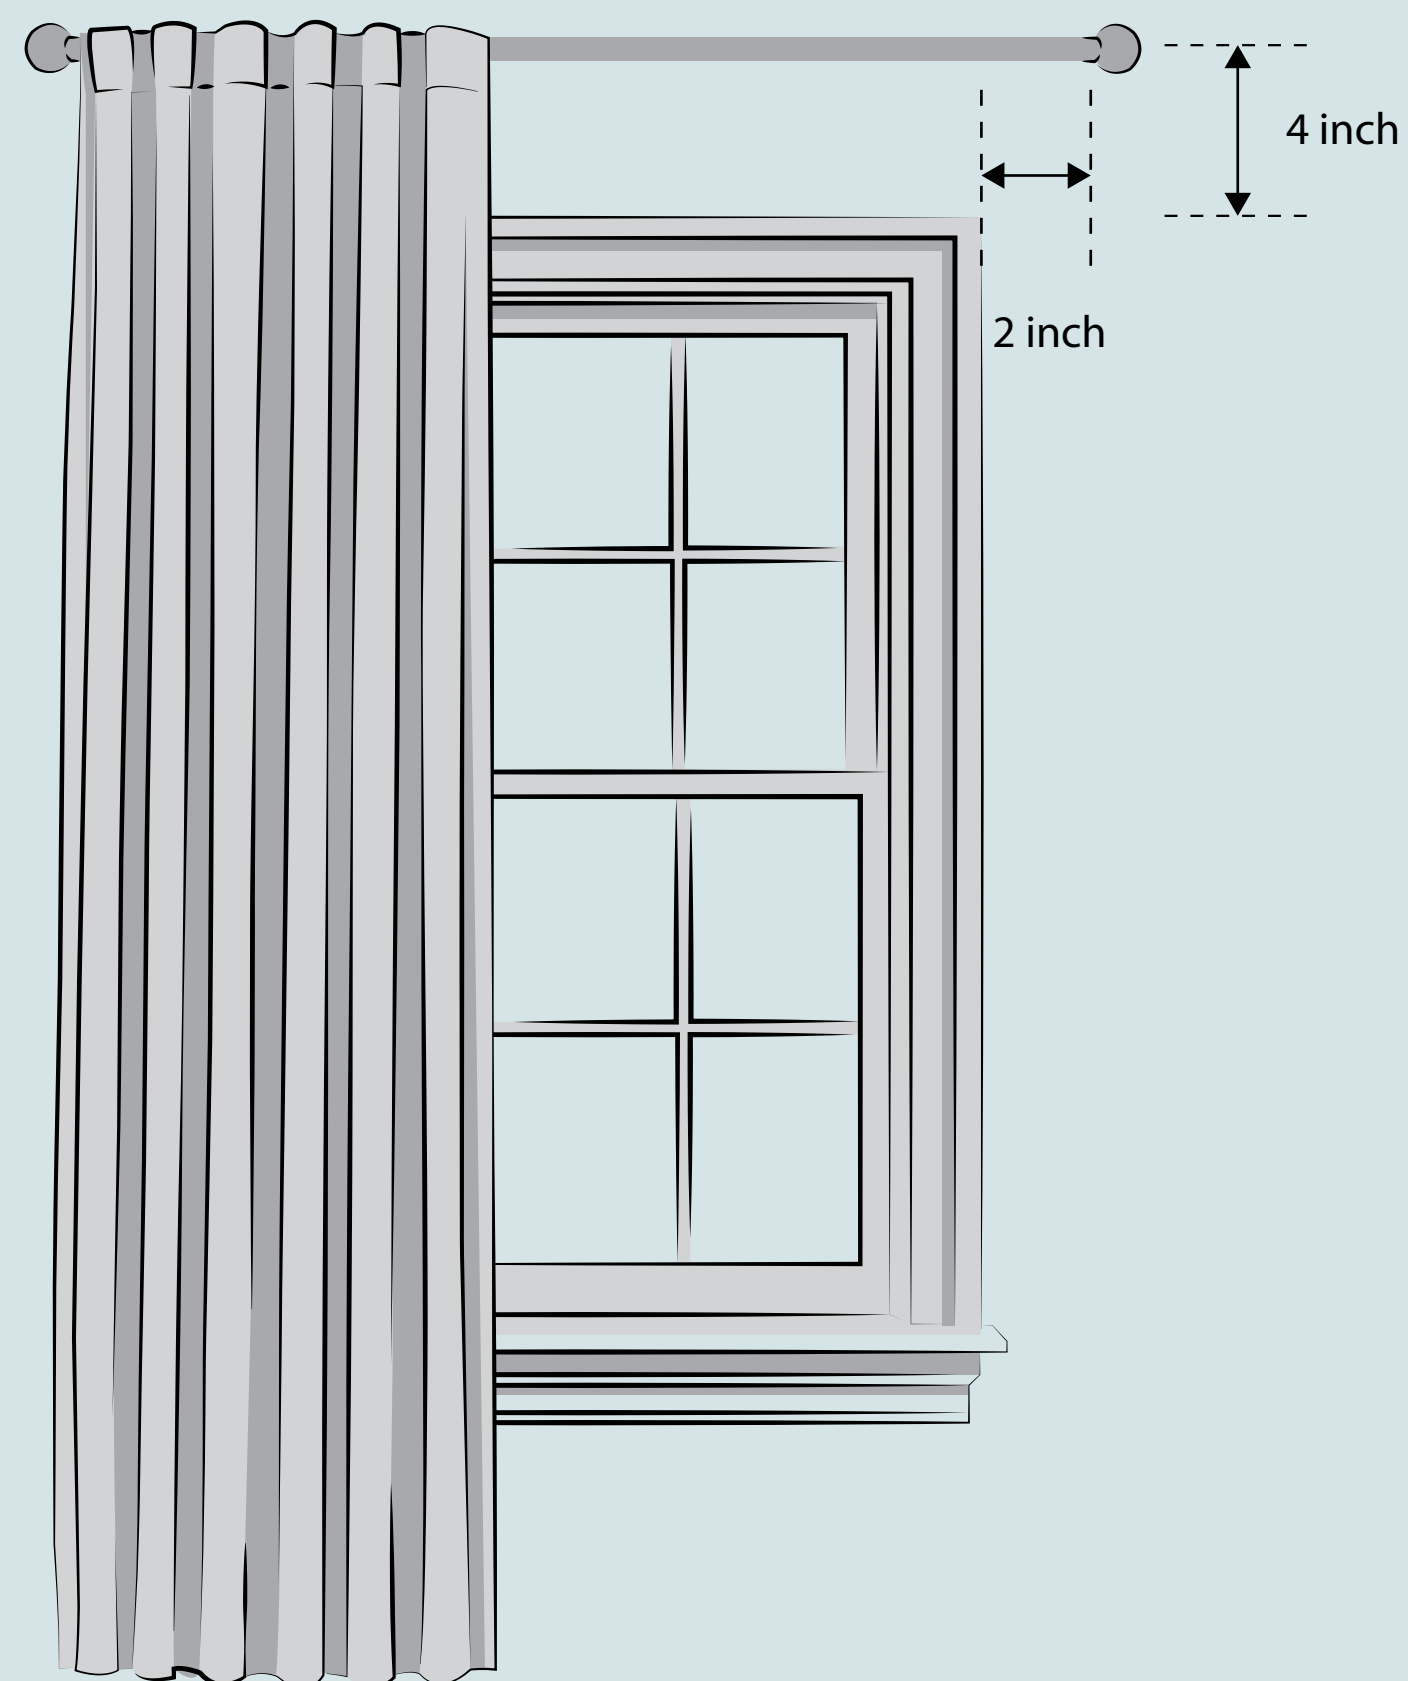


Measuring Tips

Before purchasing your window treatments you will want to decide how you want them to hang. They may hang on the inside or the outside of the window. To measure you will need a pencil, steel measuring tape and paper.

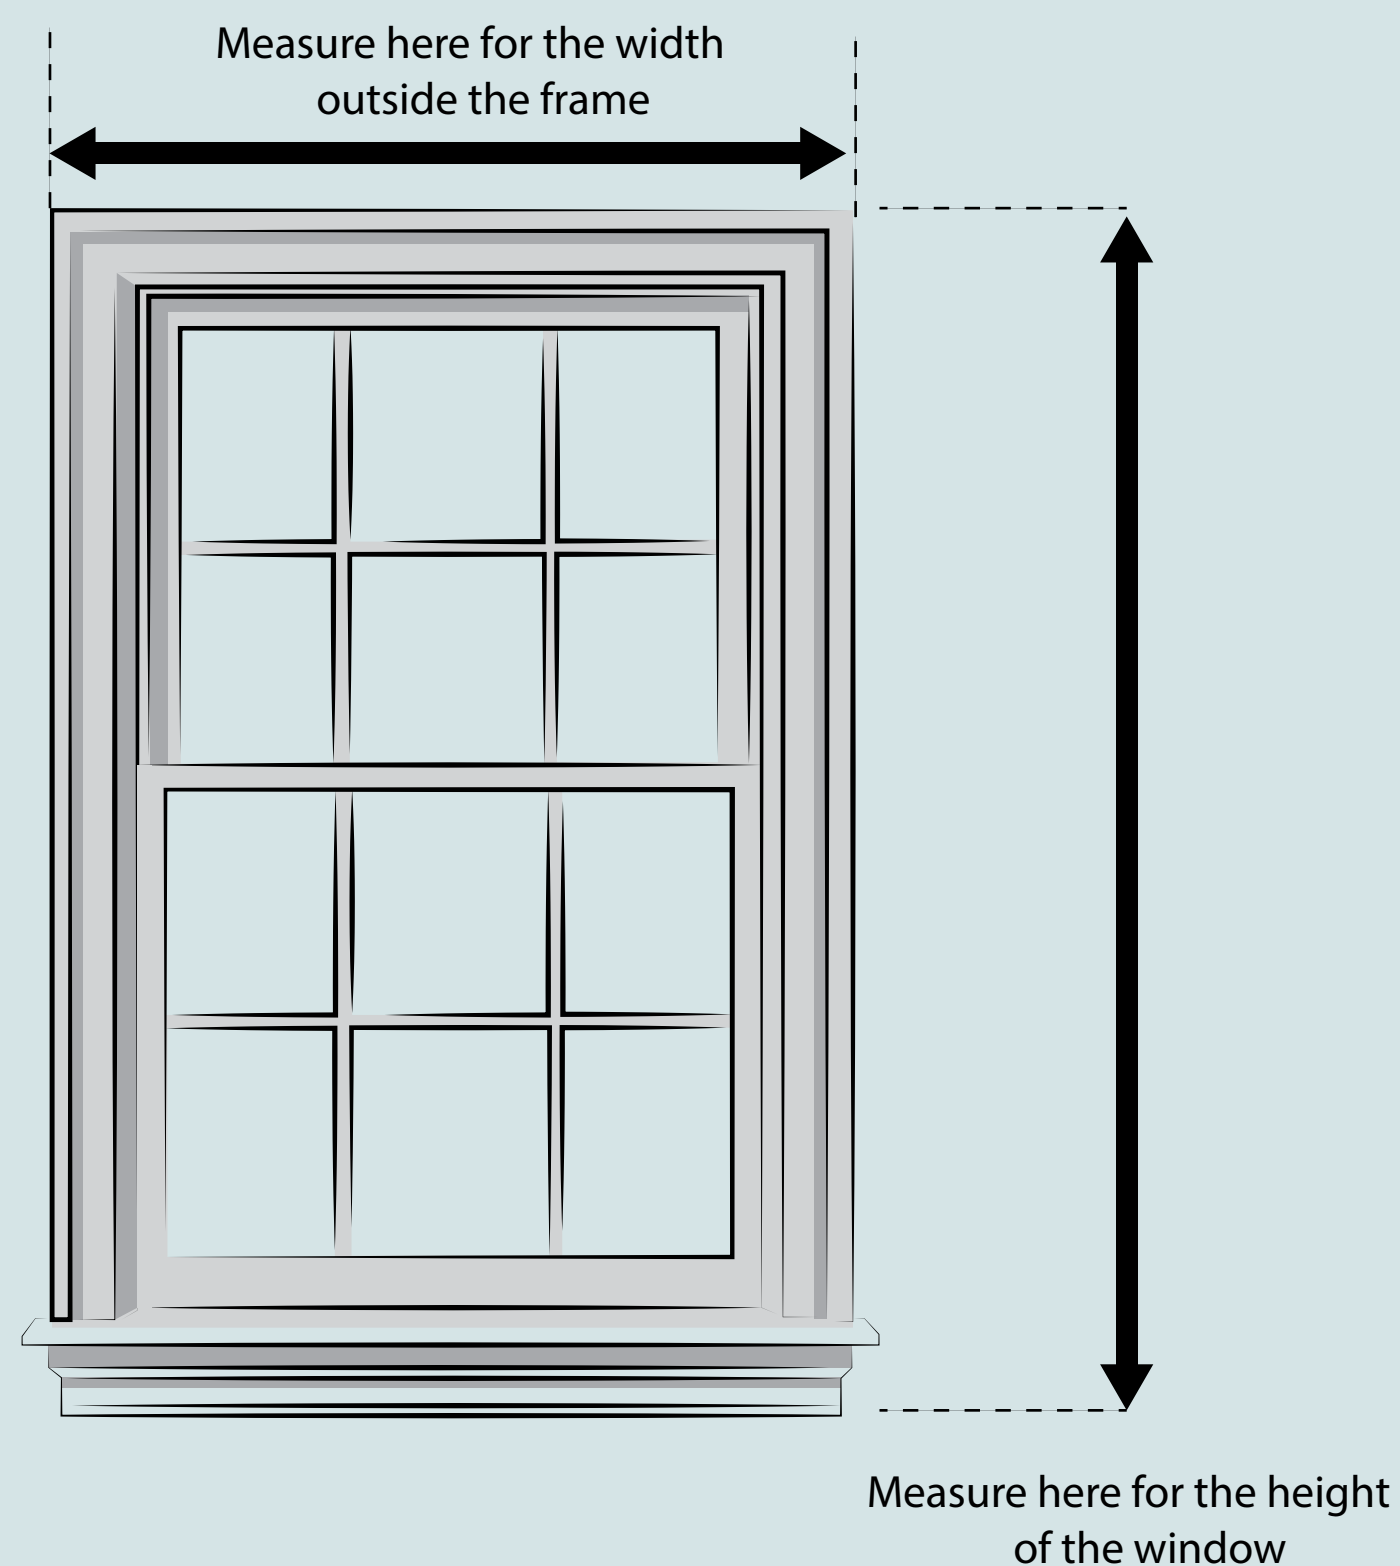

- Hardware will generally extend 4 in. beyond the window frame (2" in. on either side)
- A curtain rods length doesn't include the decorative finial.
- While many curtain rods are expandable, wooden poles come in standard lengths of 4 ft., 6 ft. and 8 ft. and may be customized.
- For a full look, plan on two to four times the fabric width to the width of your window.

For Panels the height includes the tip of the tab or ring to the bottom of the panel

- Panels are ususally hung 4 in. above the window frame (commonly 96 in.)
- Shorter panels are meant to hang 4 in. below the window sill. (commonly 63 in.)
- You'll typically want to use an even number of panels (four per window creates a full, gathered look.)

For Windows Measuring	
Width	You will need
Up to 29"	1 Panel
30" - 39"	2 Panels
40" - 48"	2 - 3 Panels
49" - 72"	3 - 4 Panels
73" - 96"	4 - 5 Panels
97" - 120"	5 - 6 Panels
121" - 144"	6 - 7 Panels