

COLUMN WRAP INSTALLATION

SLATESTONE 30" COLUMN WRAP

Step 1


Build out the desired column to be wrapped at no more or less than 13 7/8" x 13 7/8" .

Note:

The Slatestone 30" Column Wraps are made up of 4 pieces, MARKED 1-4, and interlock using the designed finger joints.


Step 2

Place the first panel, #1, against the column. Be sure to place all panels with the top arrow pointing up. Slide in panel #2 and #3 on the right and left side. This will center panel # 1 around the enclosure. (fig. 1)

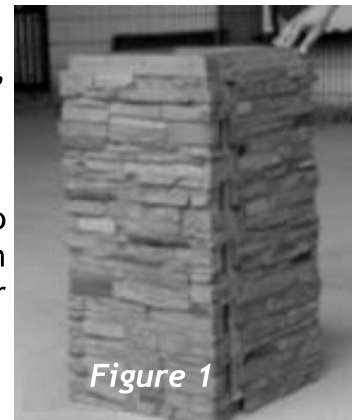

Step 3

Interlock and dry fit all 4 sides at the finger joints. (fig. 2)

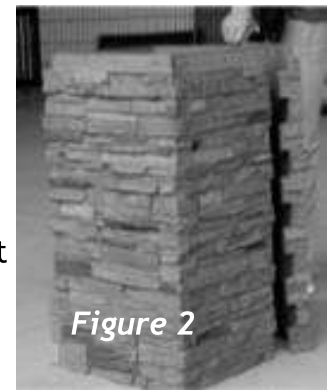

Step 4

Attach each panel starting at the bottom using three (3) 2" exterior screws. Place the screws in the grout lines to best hide screw heads and minimize touch up work.

Note:

For additional stability, place screws in the grout line about 15 1/2" above the base. This screws through the inner landing of the panel.

Step 5

To make columns higher than 30", simply stack the next course using the tongue and groove attachment for the bottom and the screw hem at the top of the first column. (fig. 3)

