




# GROMMET TOP DESIGN

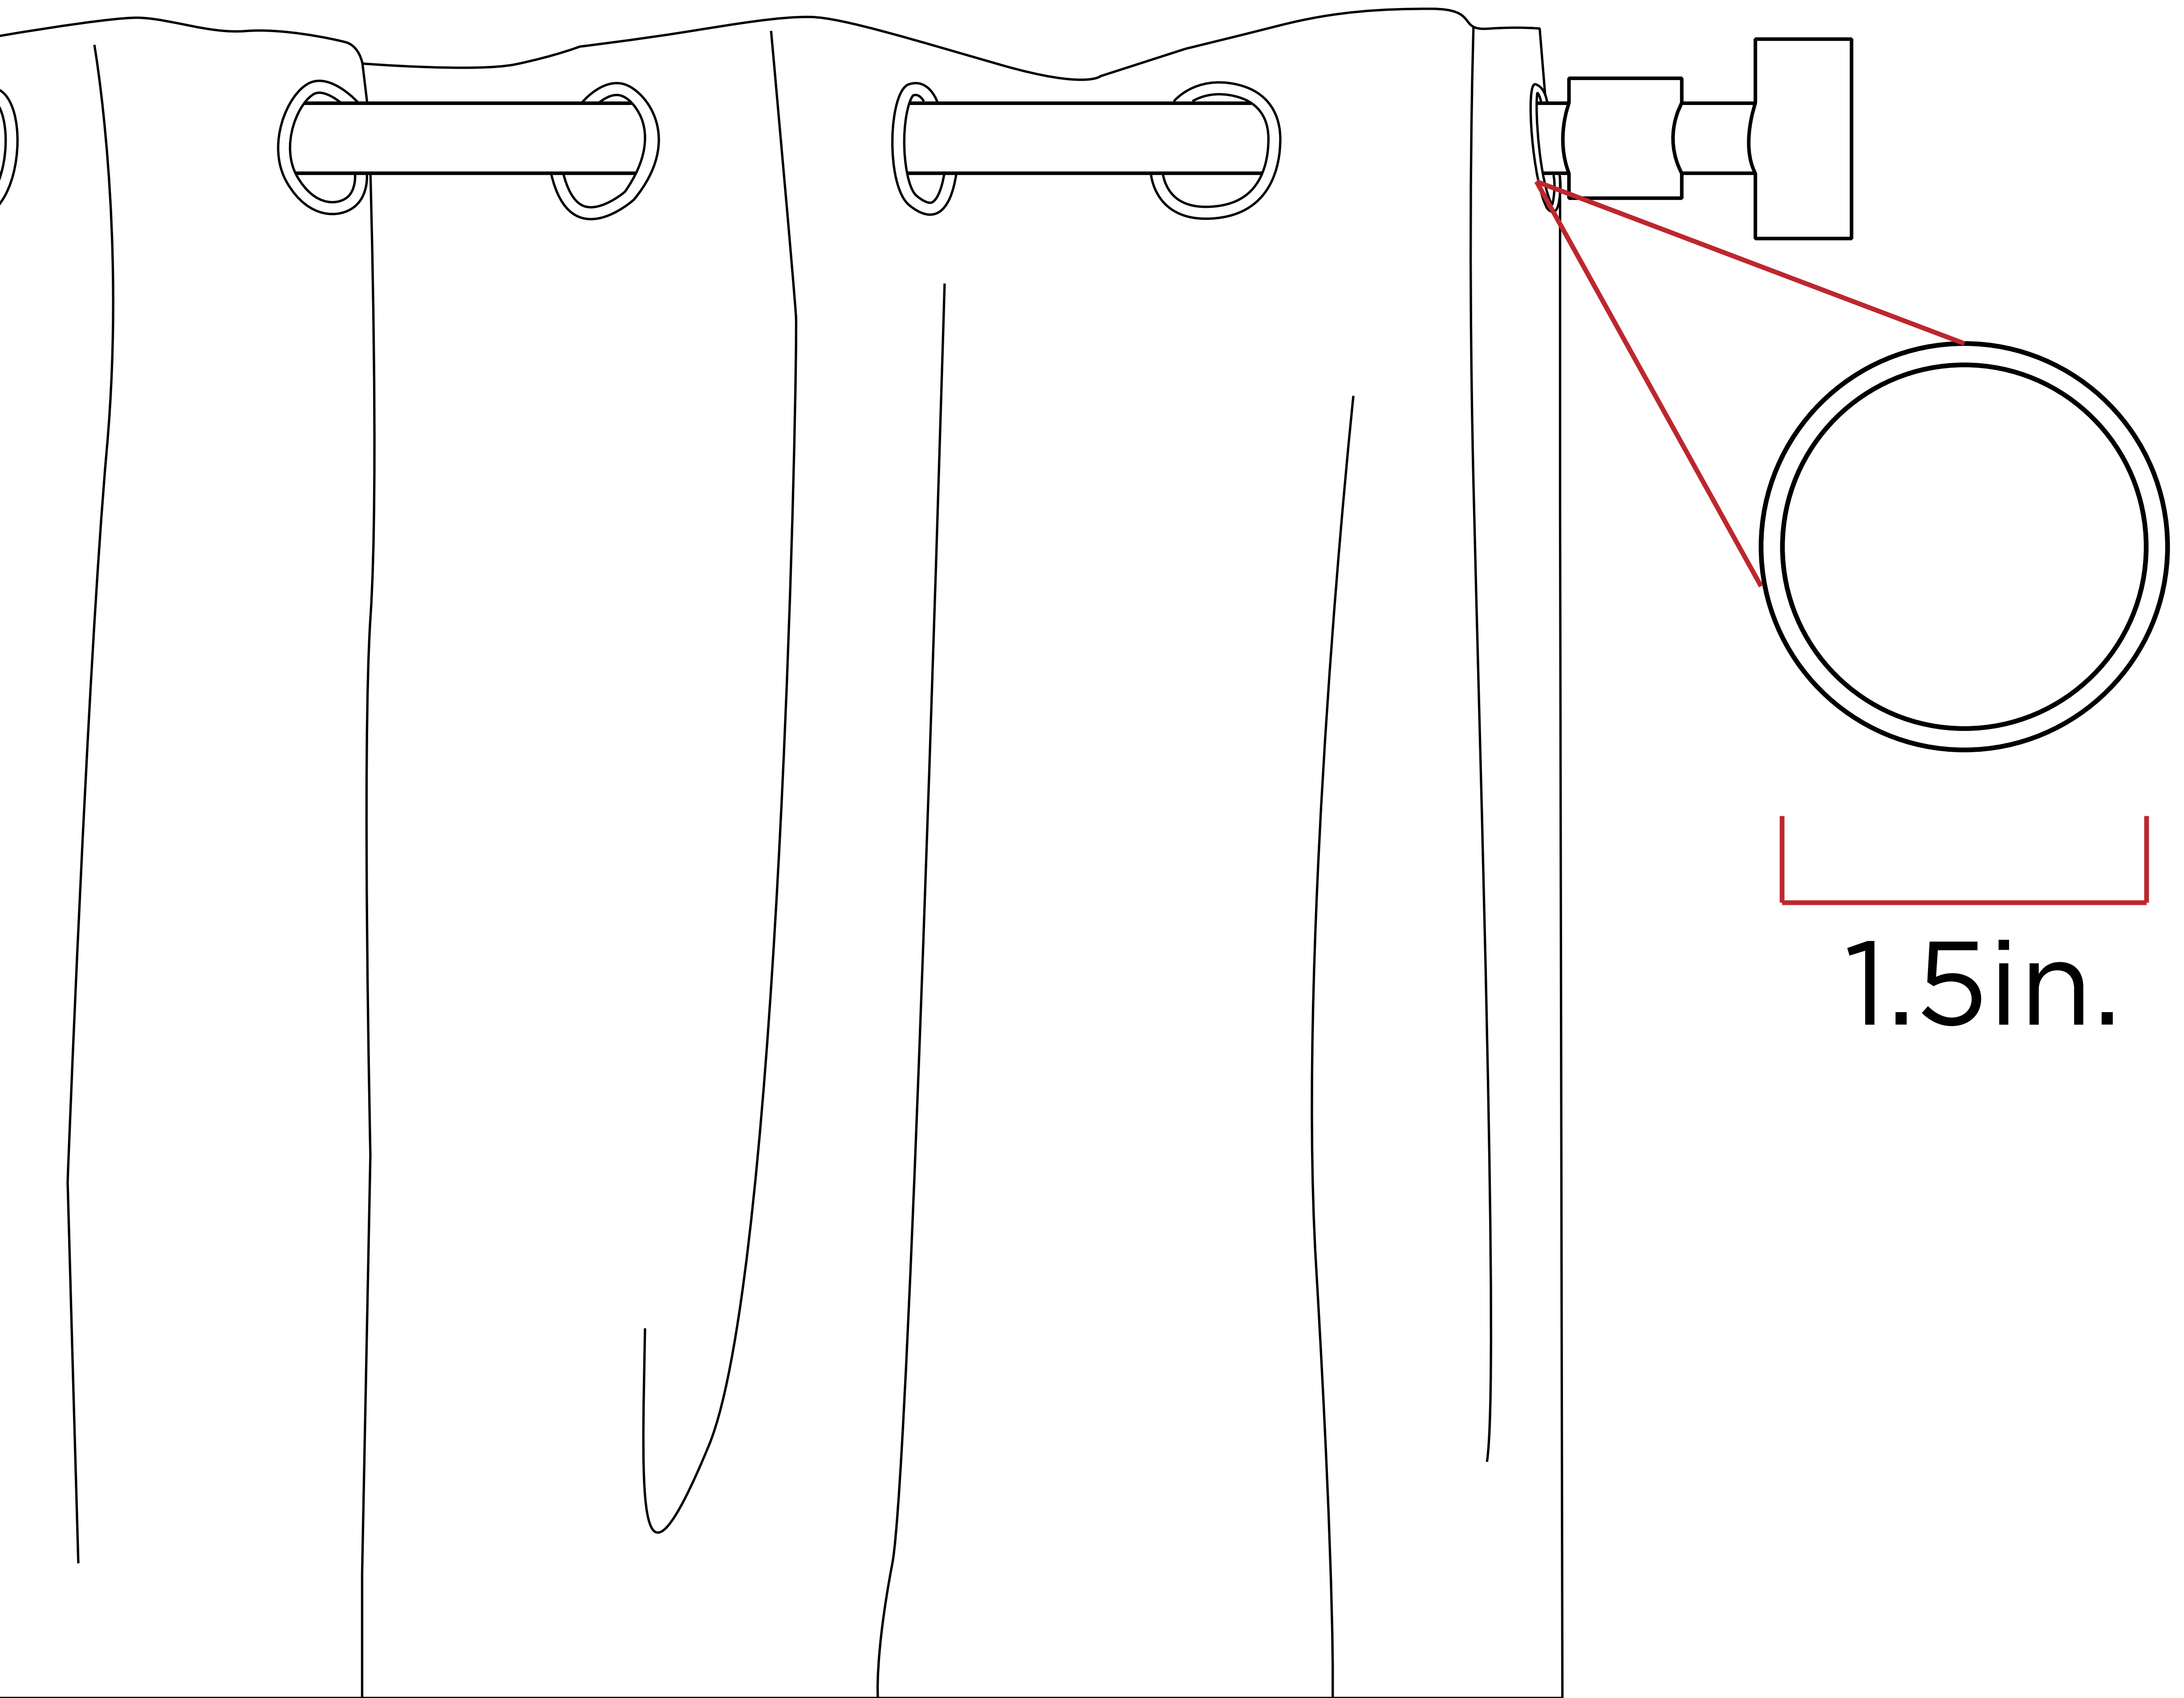


# ROD POCKET DESIGN

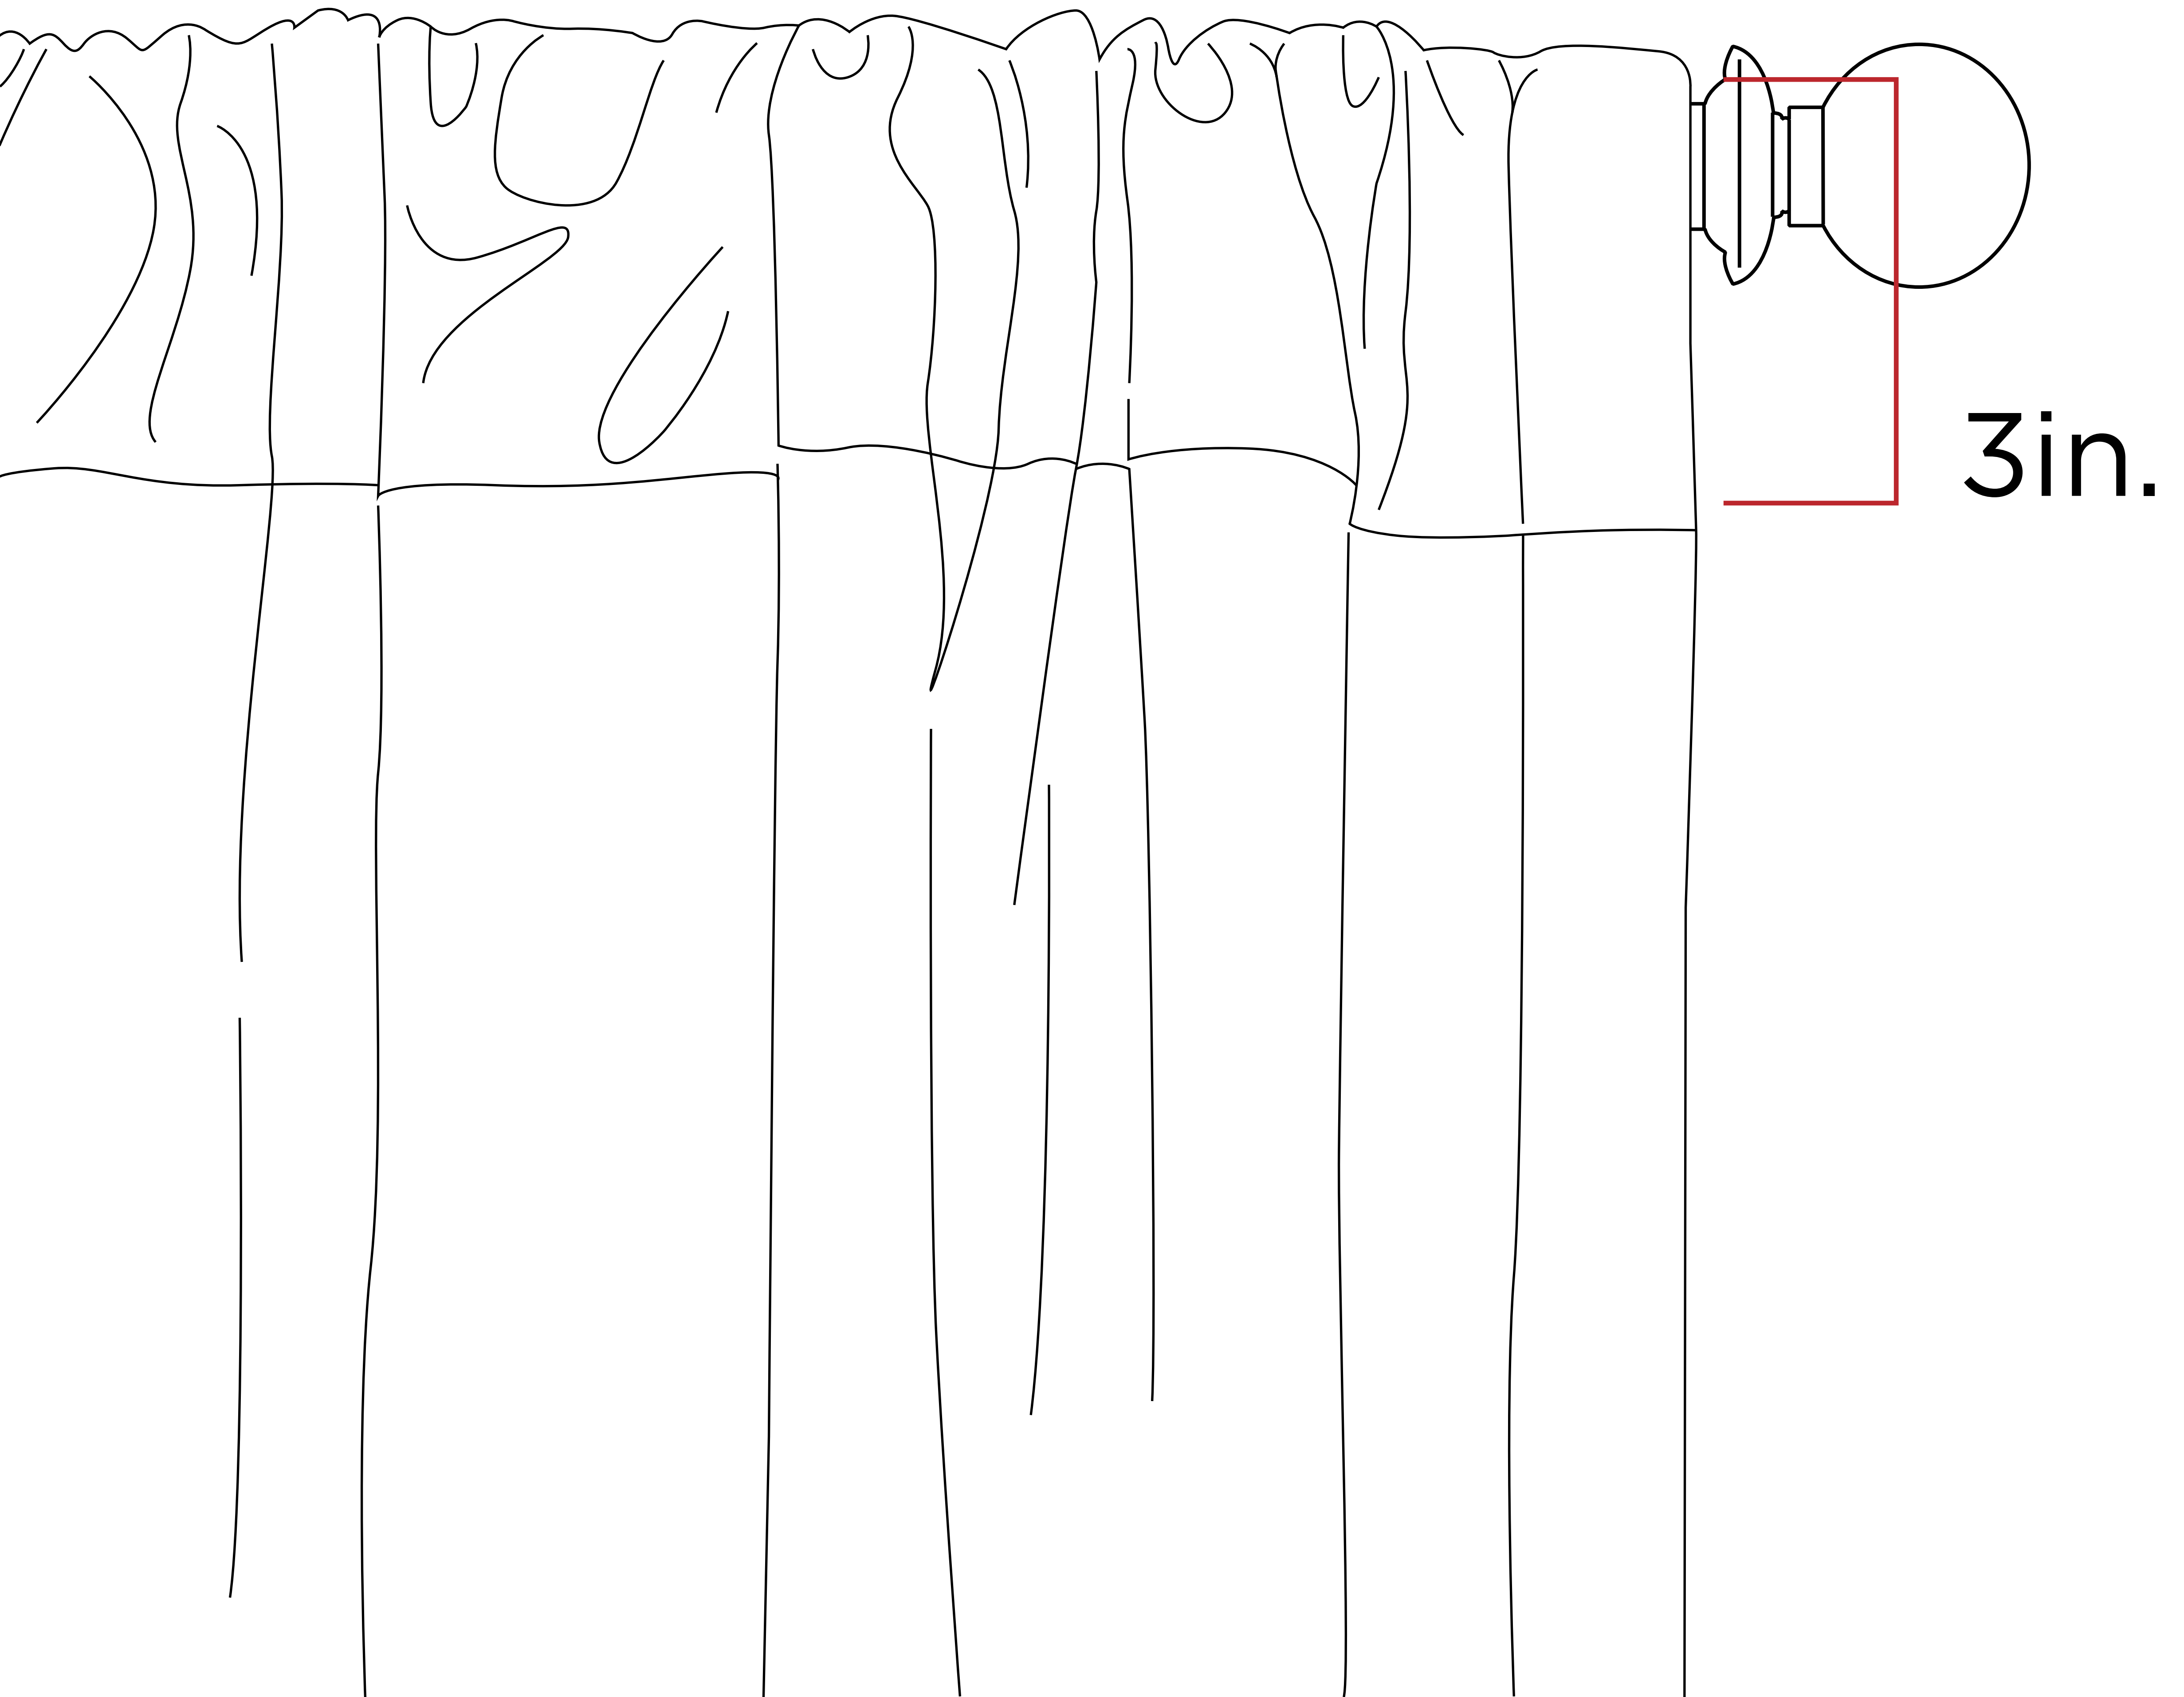


# BACK TAB/ ROD POCKET DESIGN

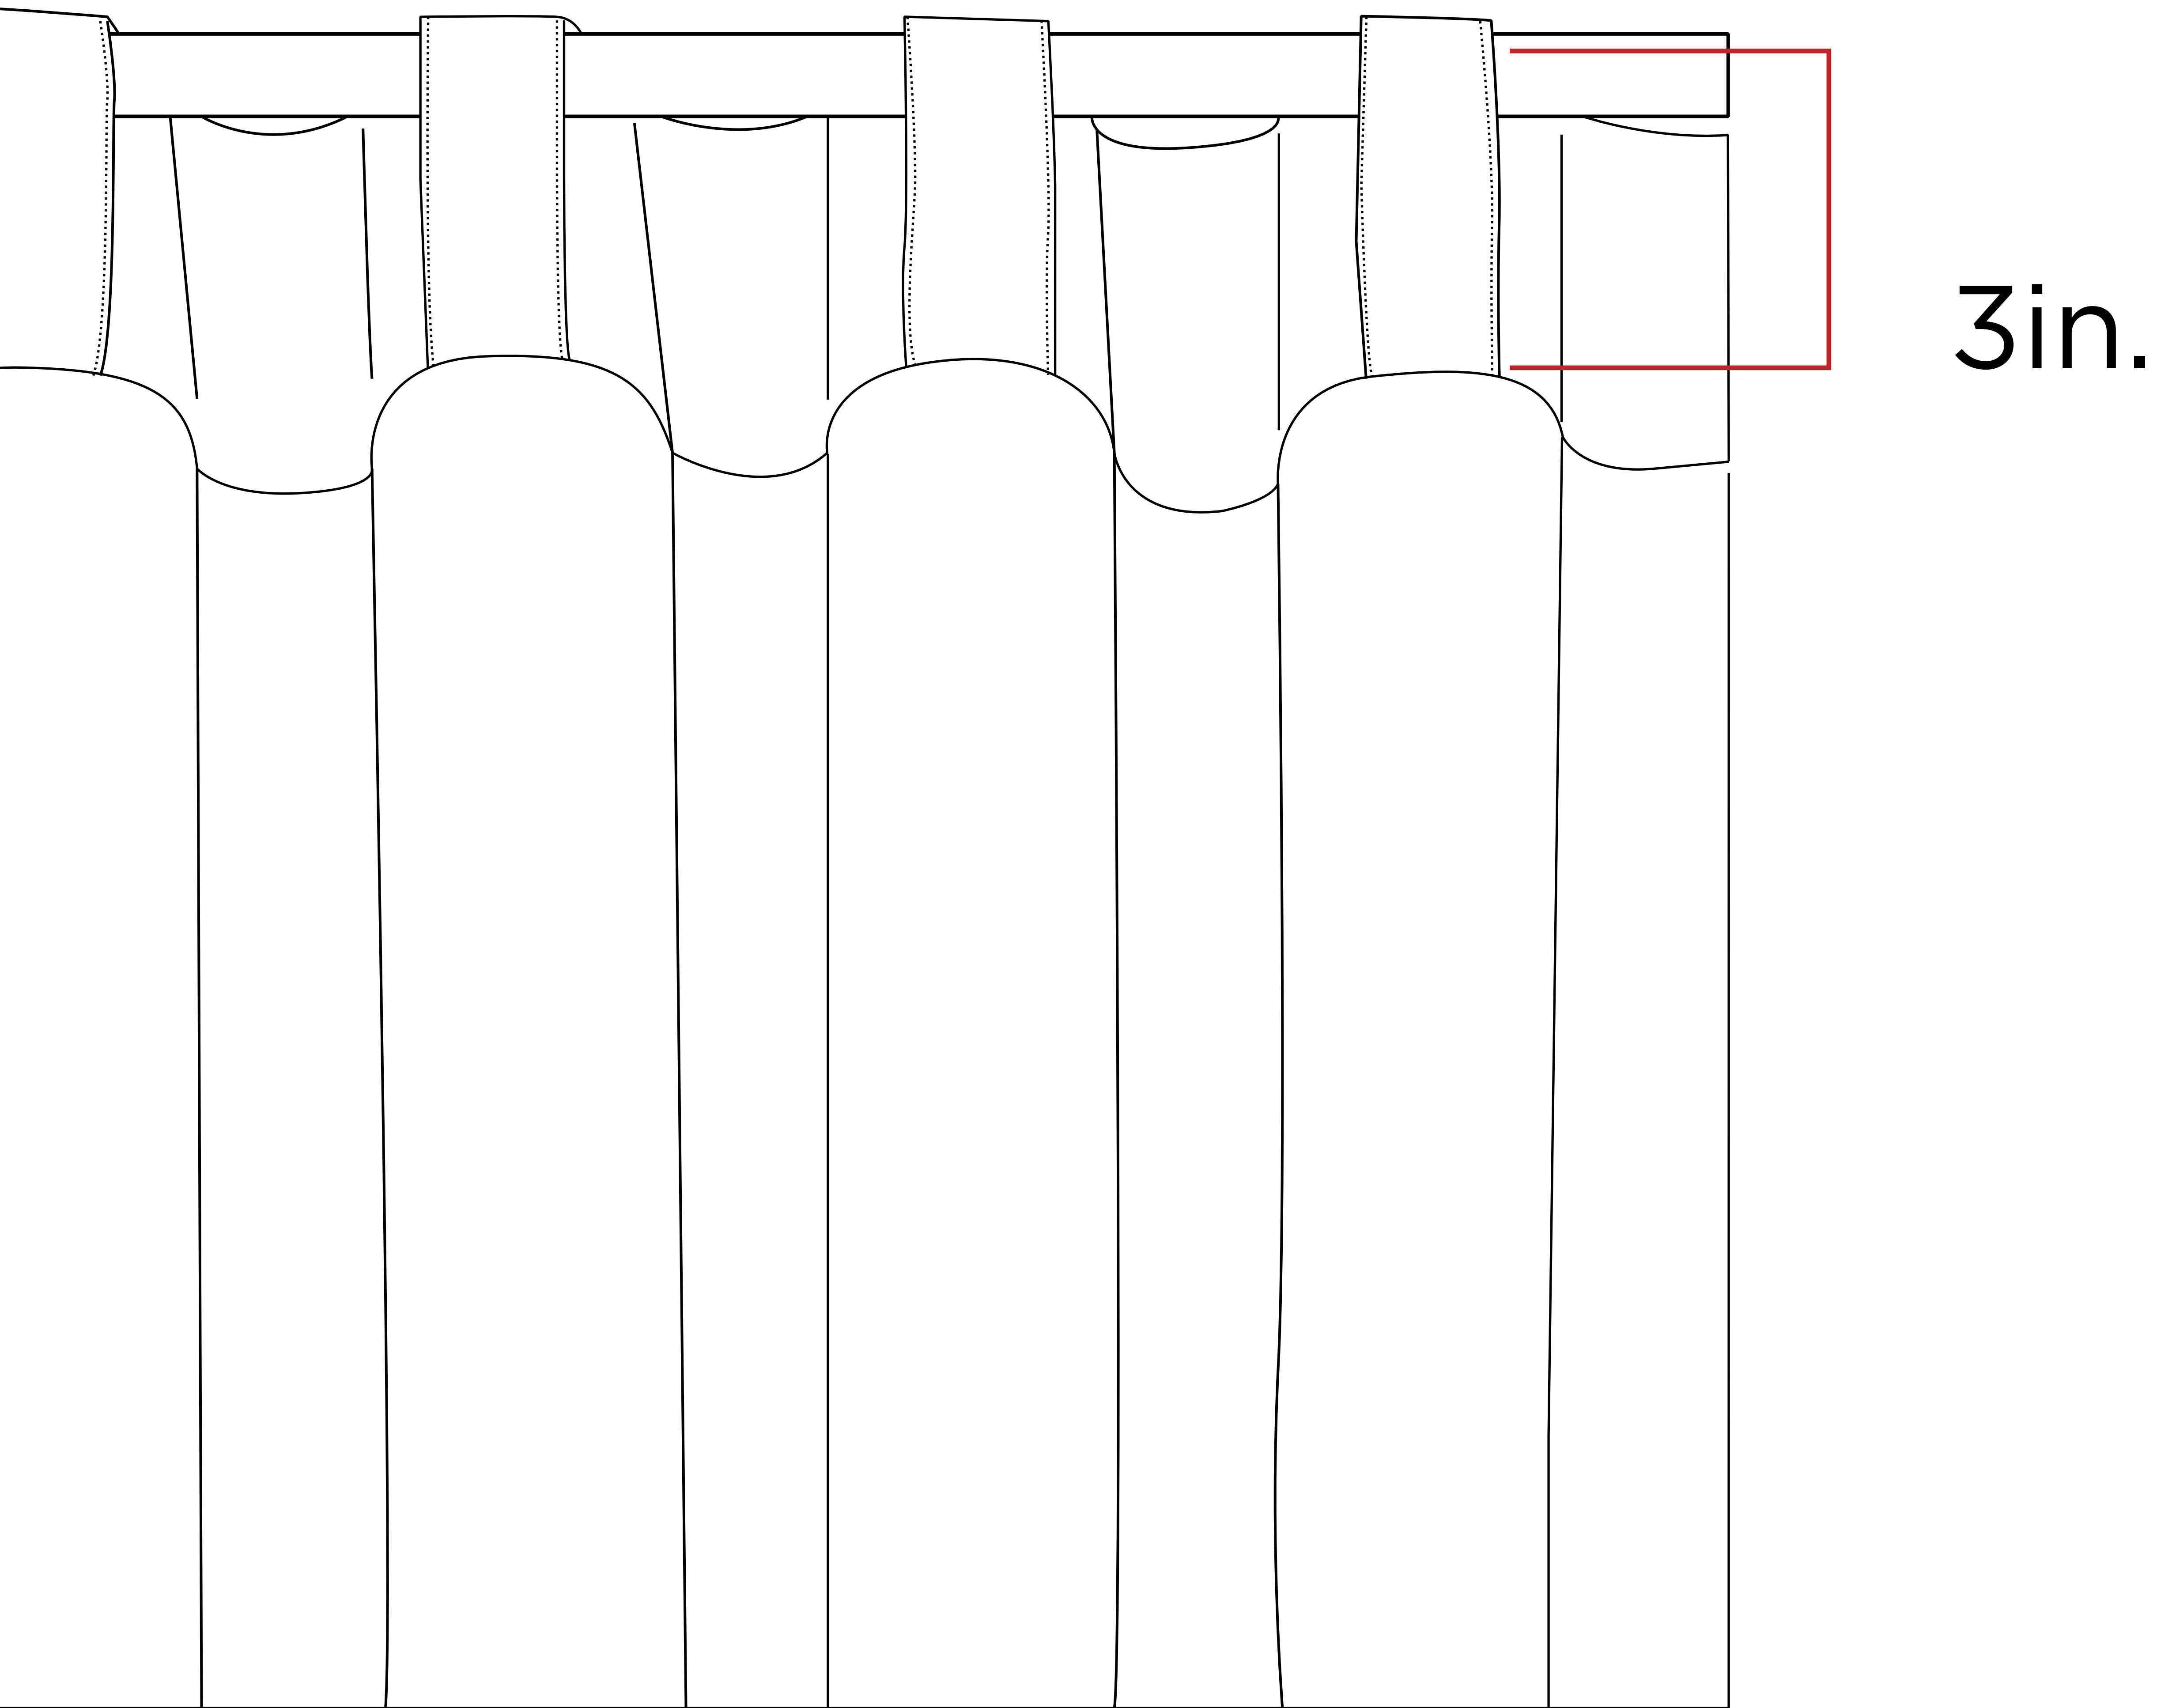

# TAB TOP DESIGN

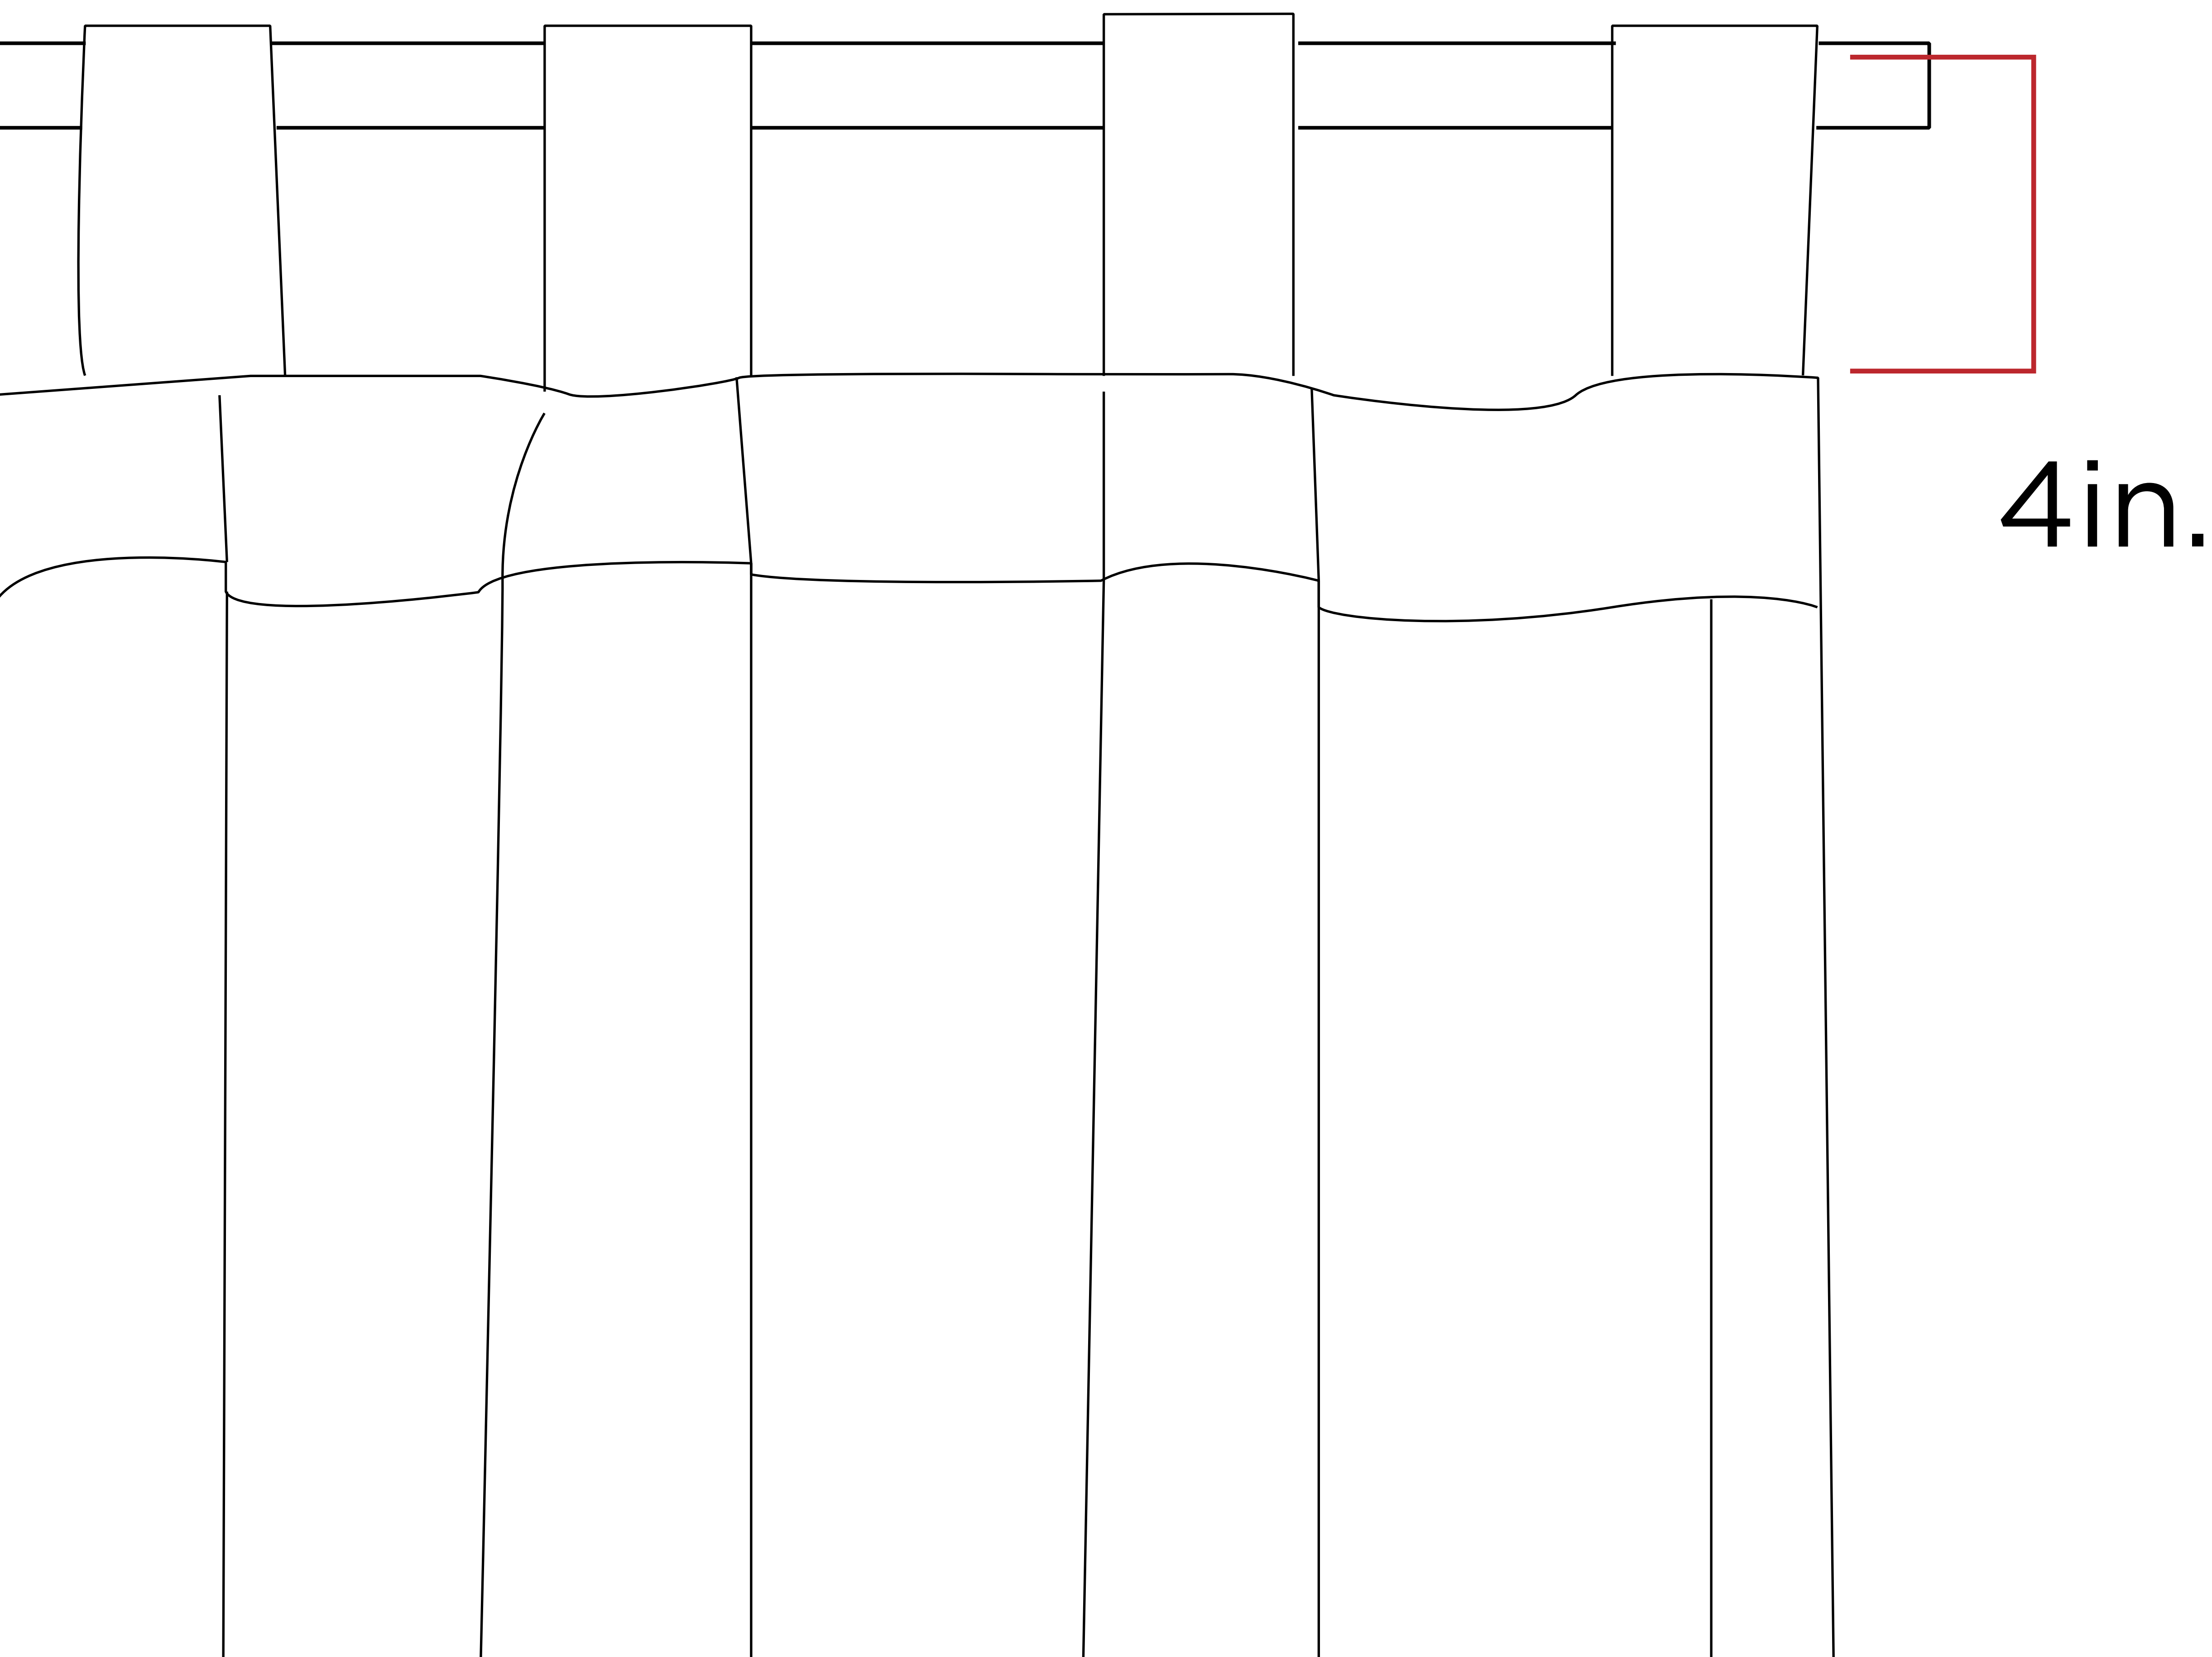


# TWIST TAB TOP DESIGN

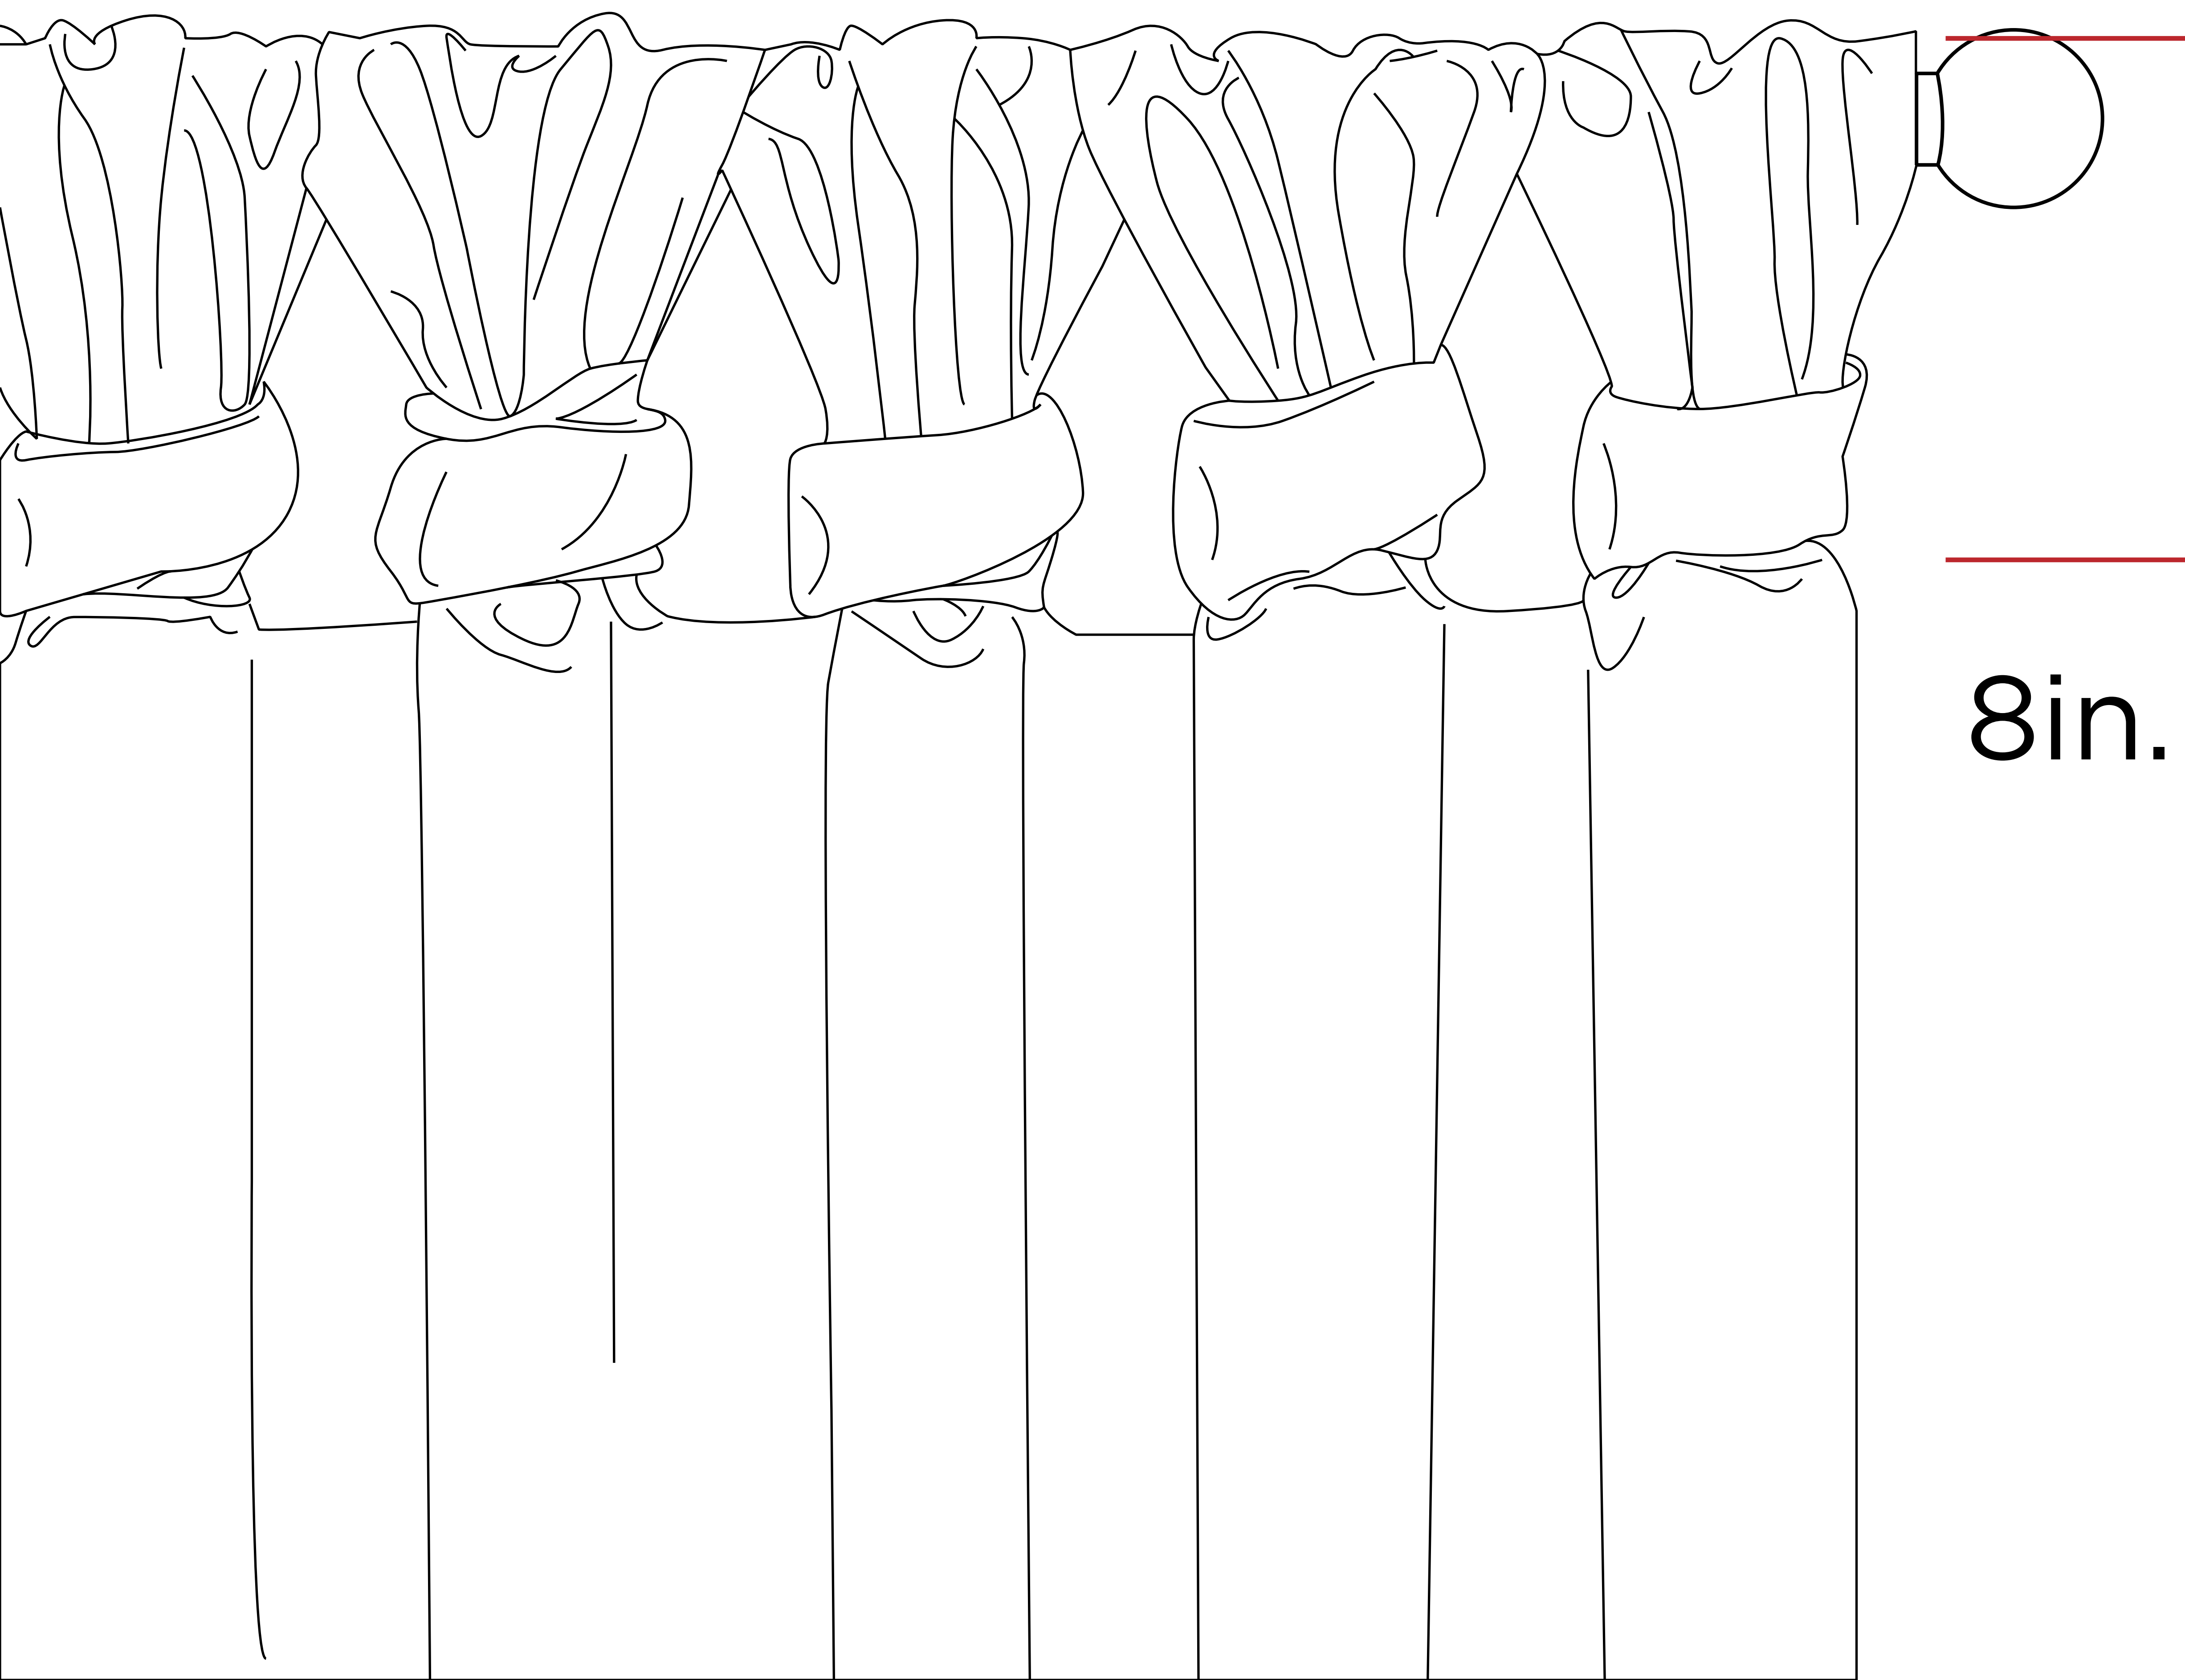


8in.

# How To Choose

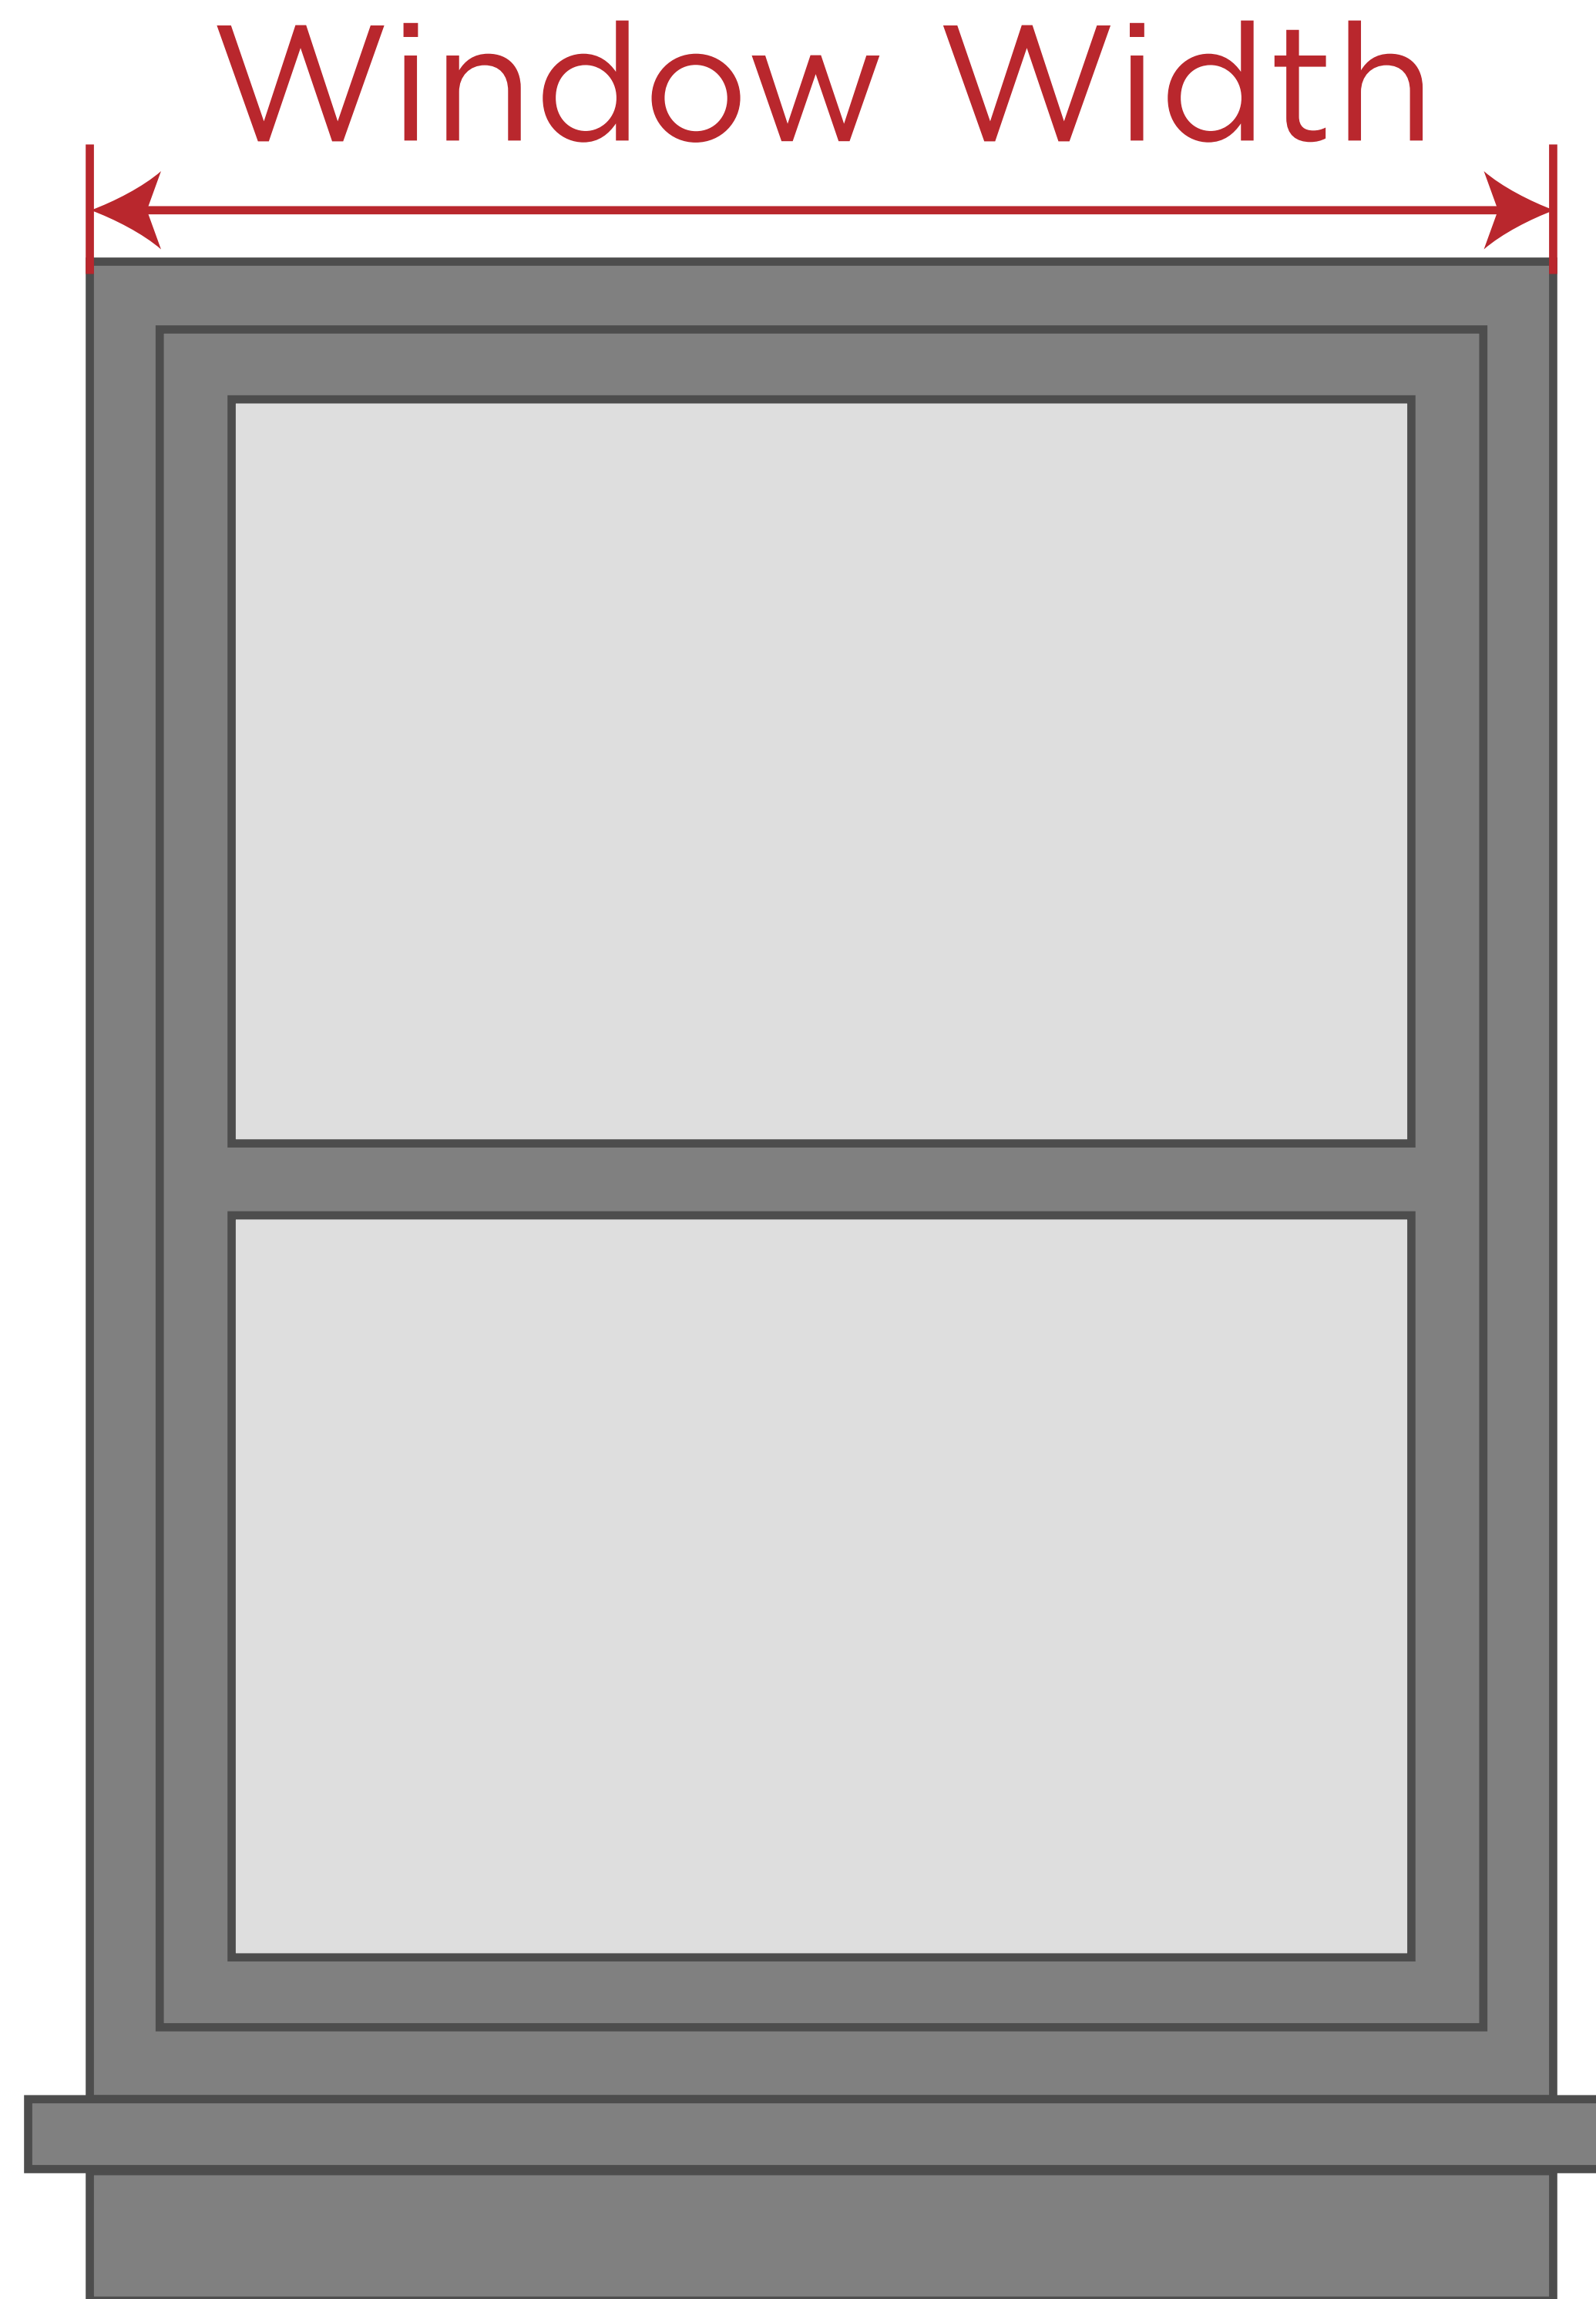


Window Width	Panels Needed
Up To 29in.	1 Panel
30in. To 29in.	1 Or 2 Panels
40in. To 48in.	2 Panels




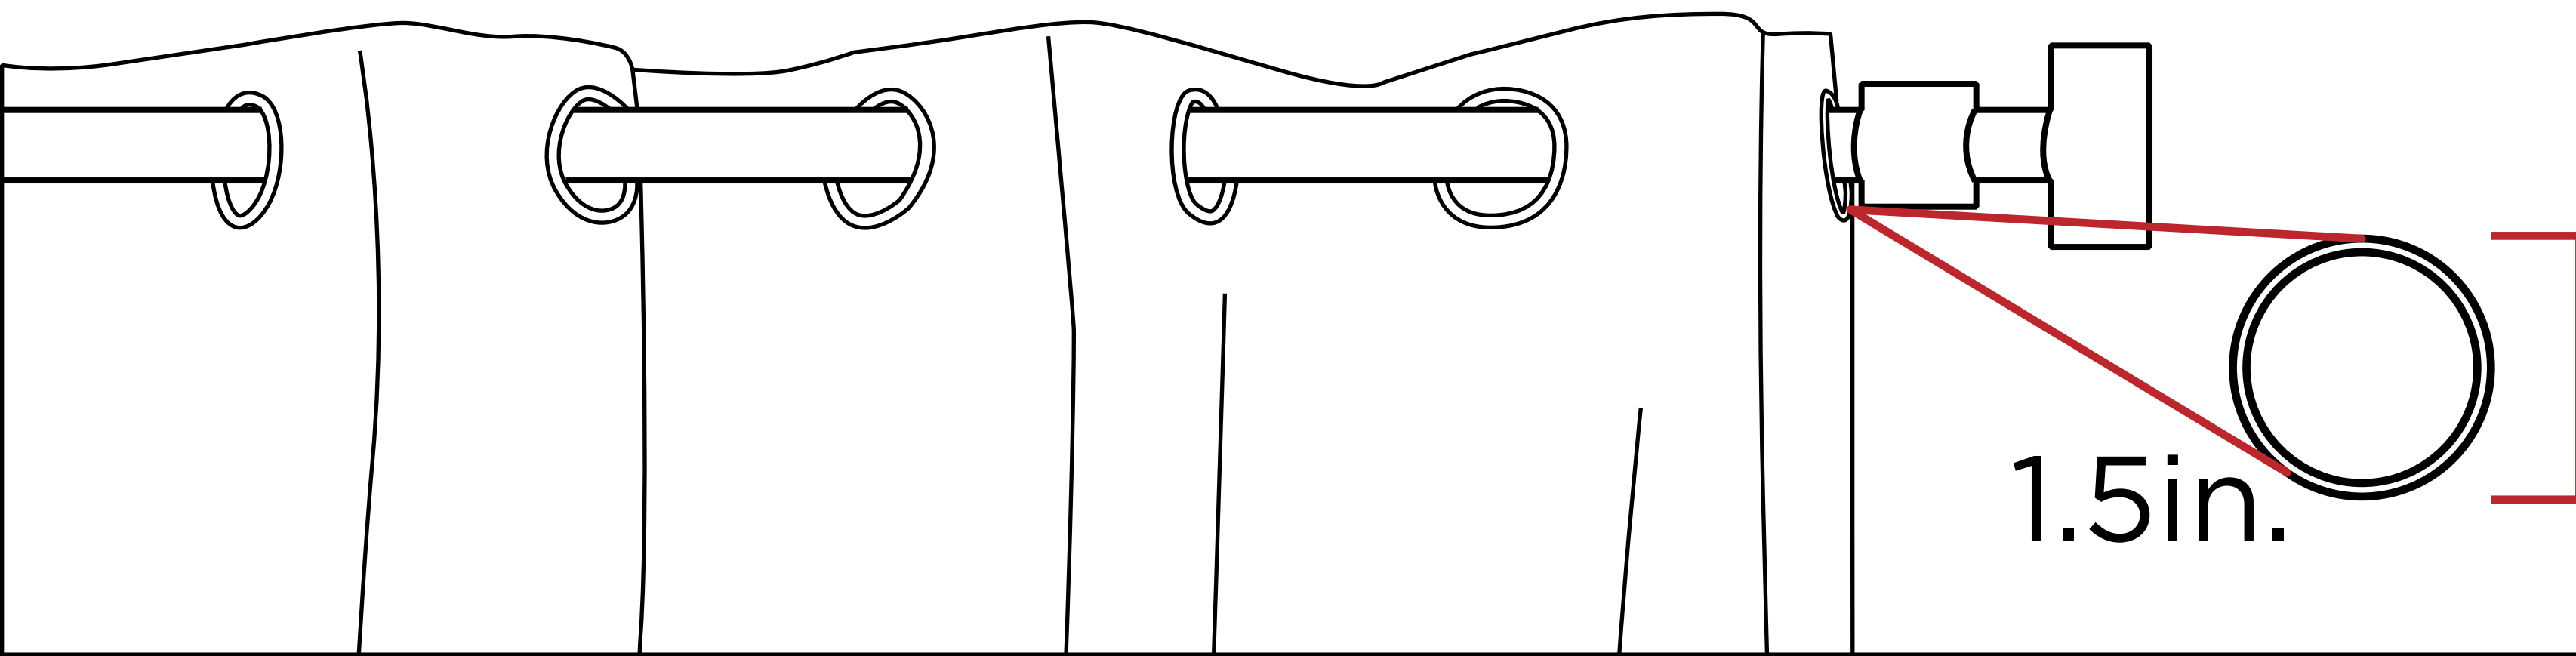


GROMMET TOP

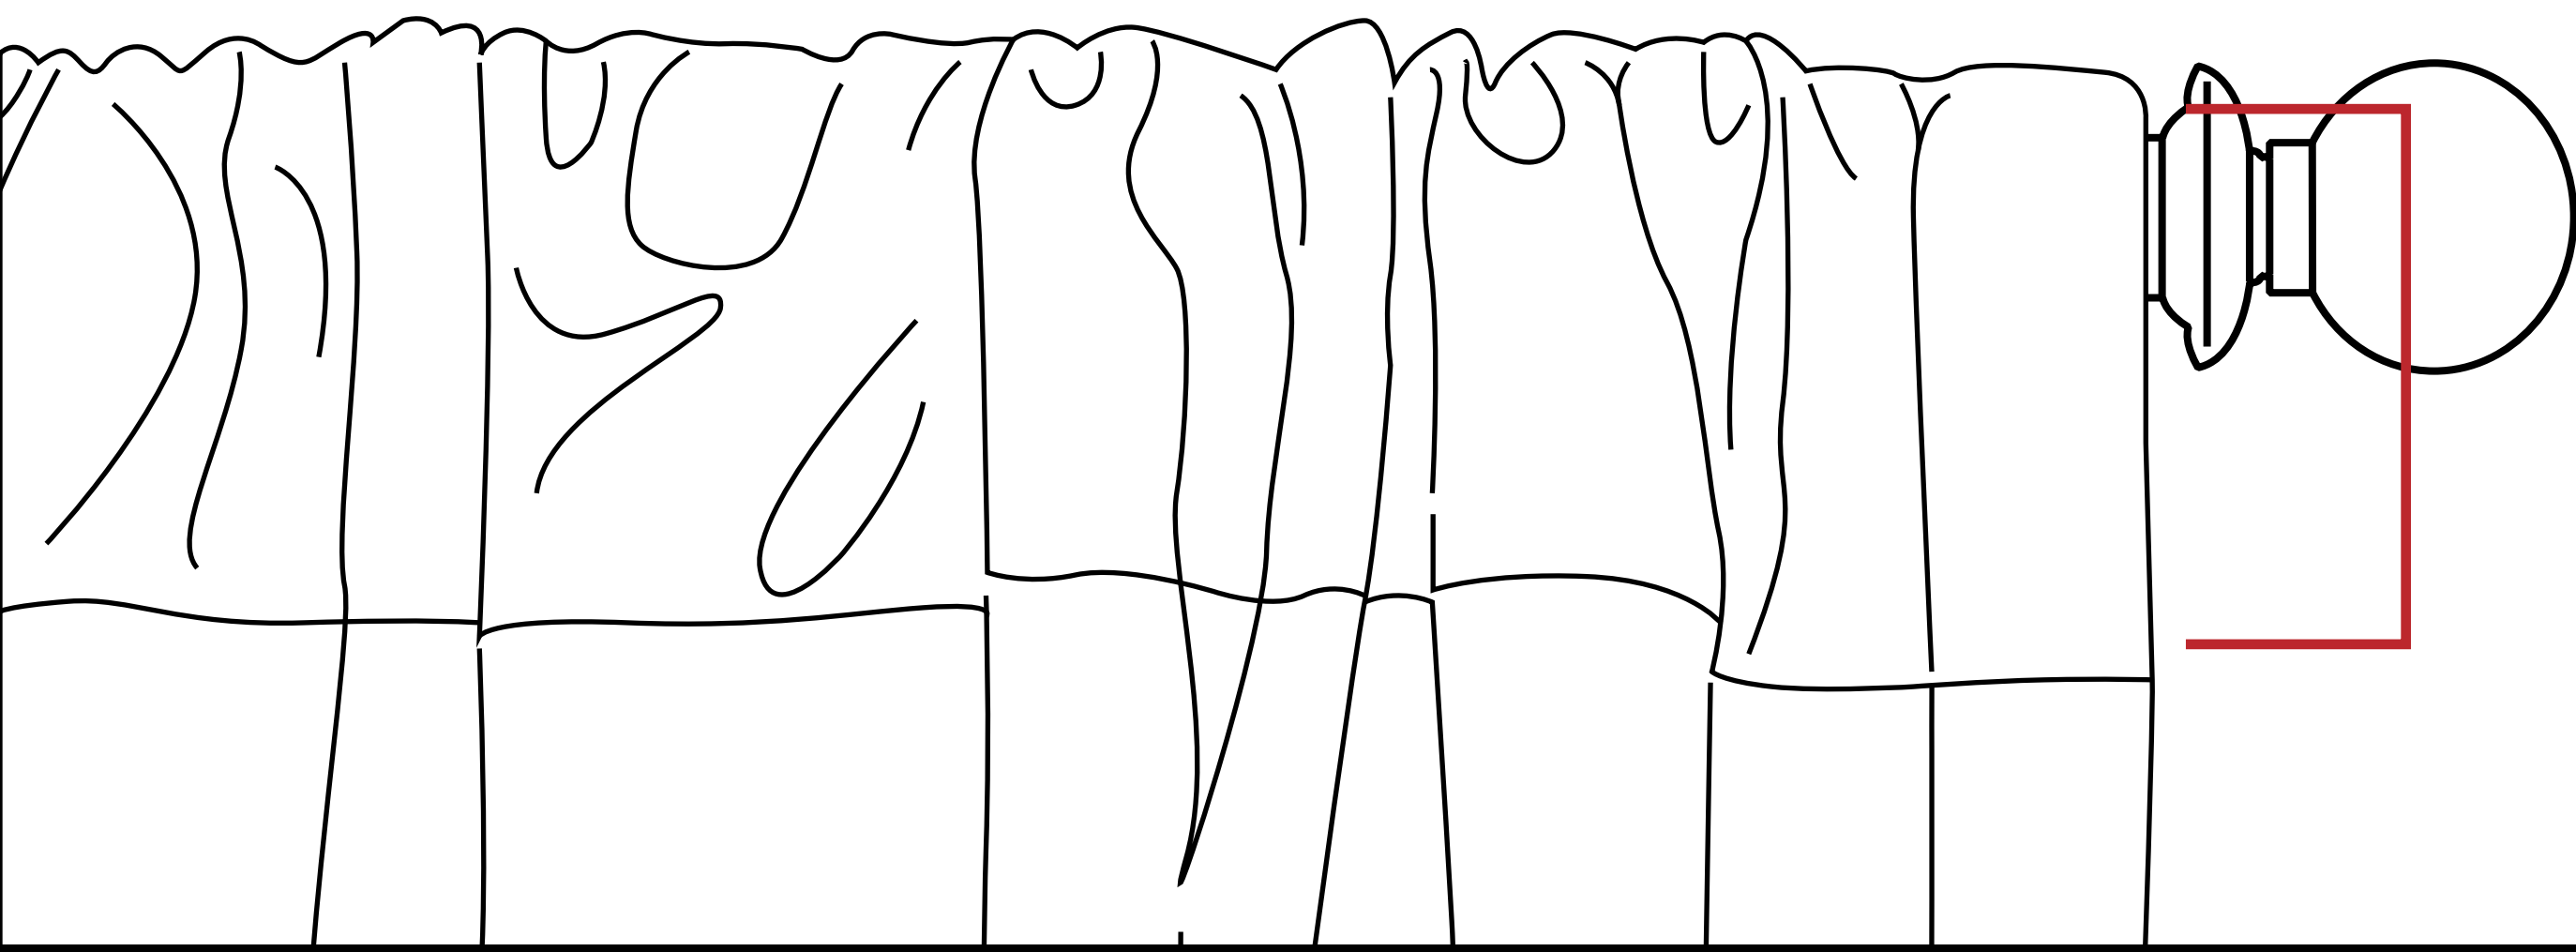


ROD POCKET

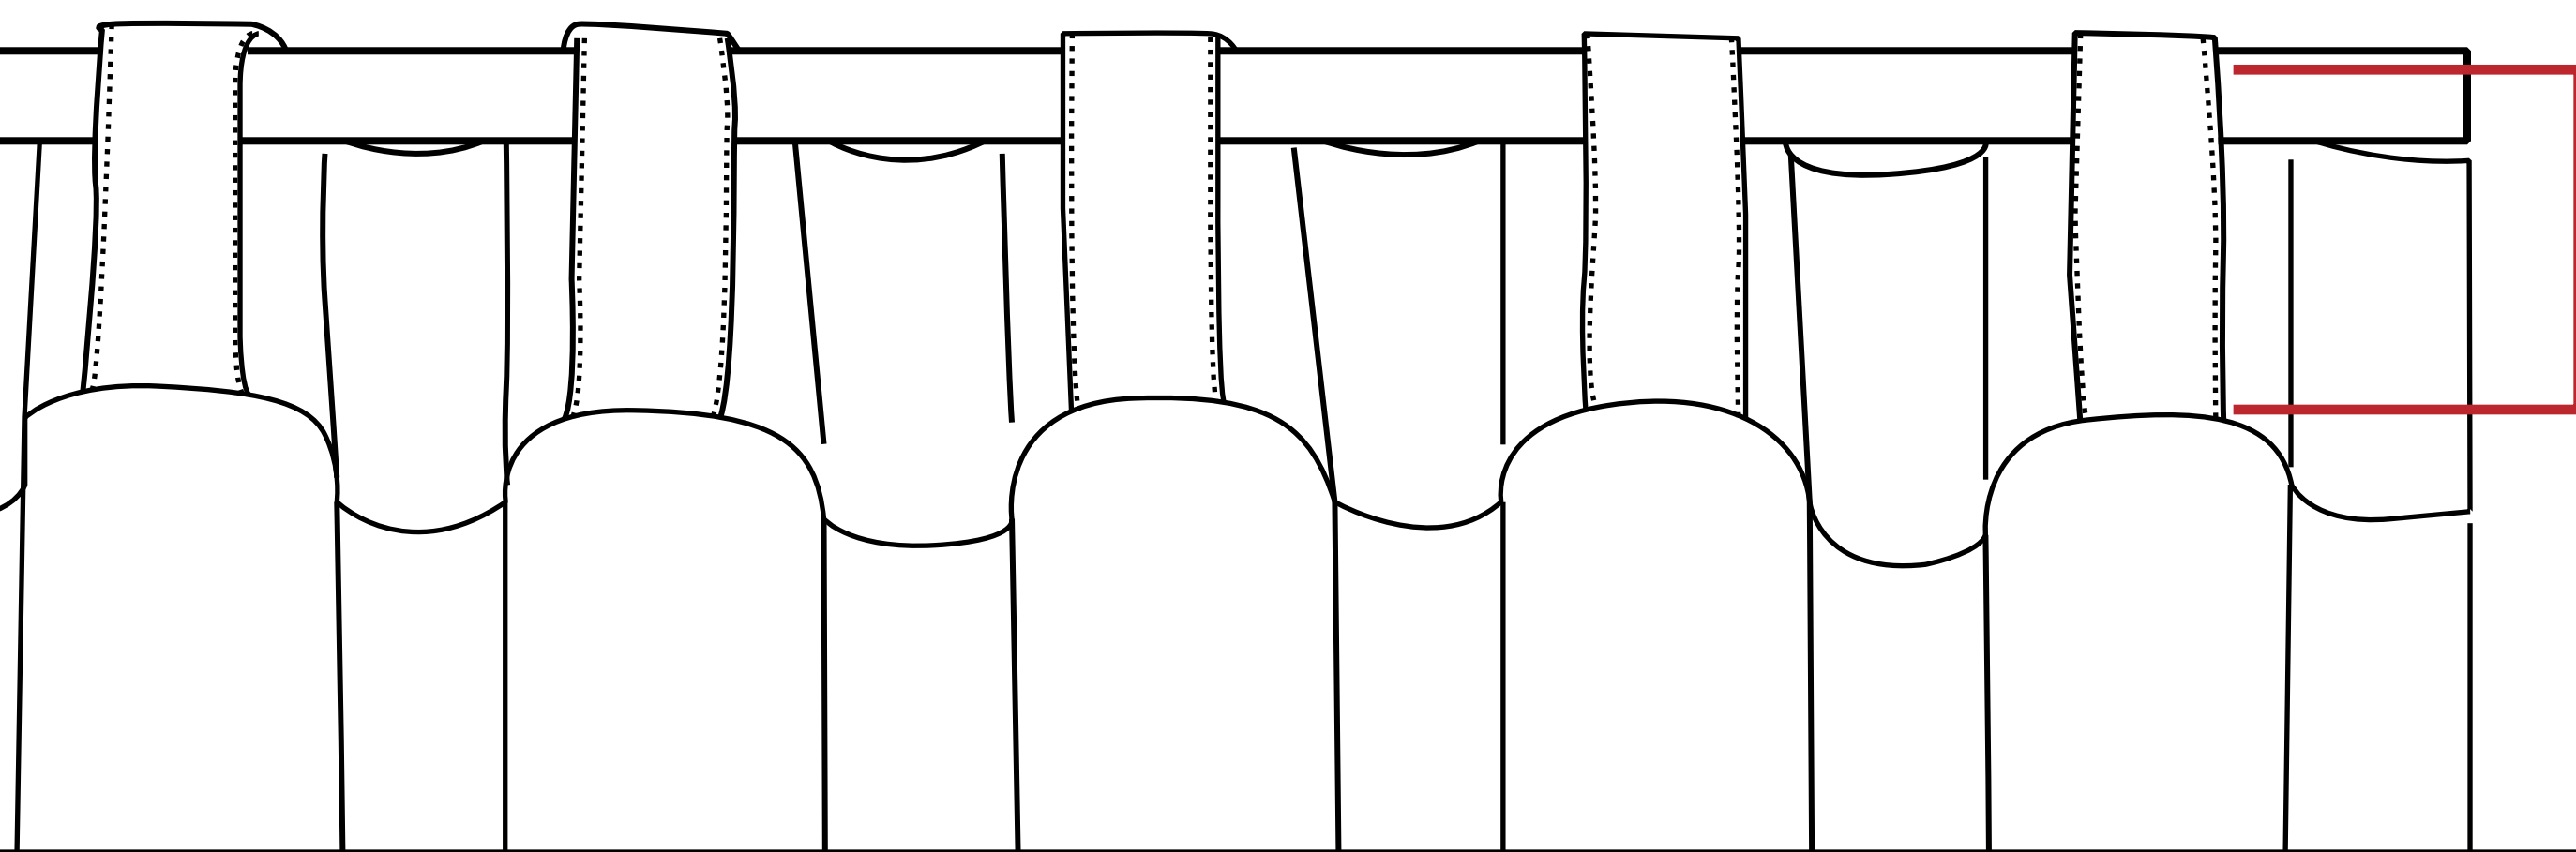

BACK TAB  
/ROD POCKET

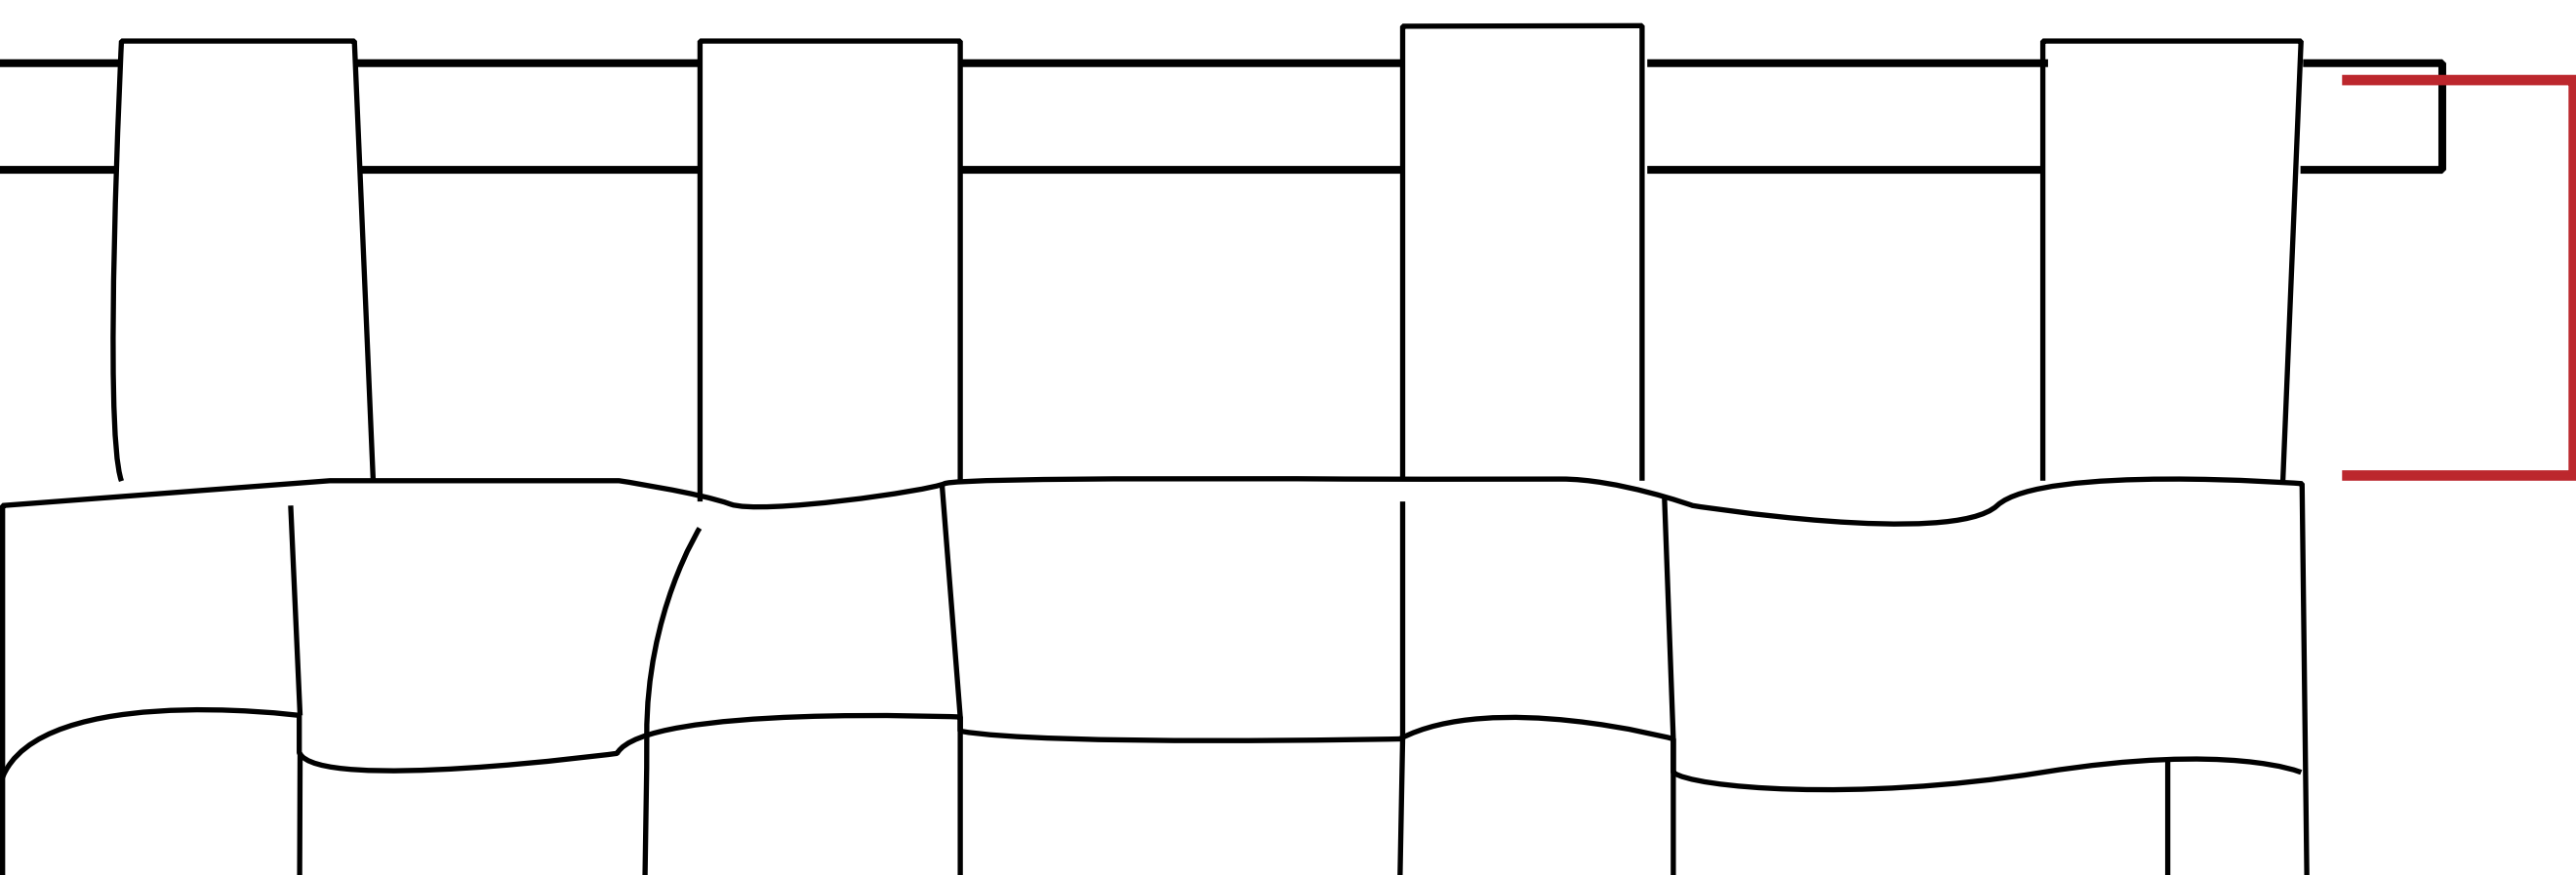

TAB TOP

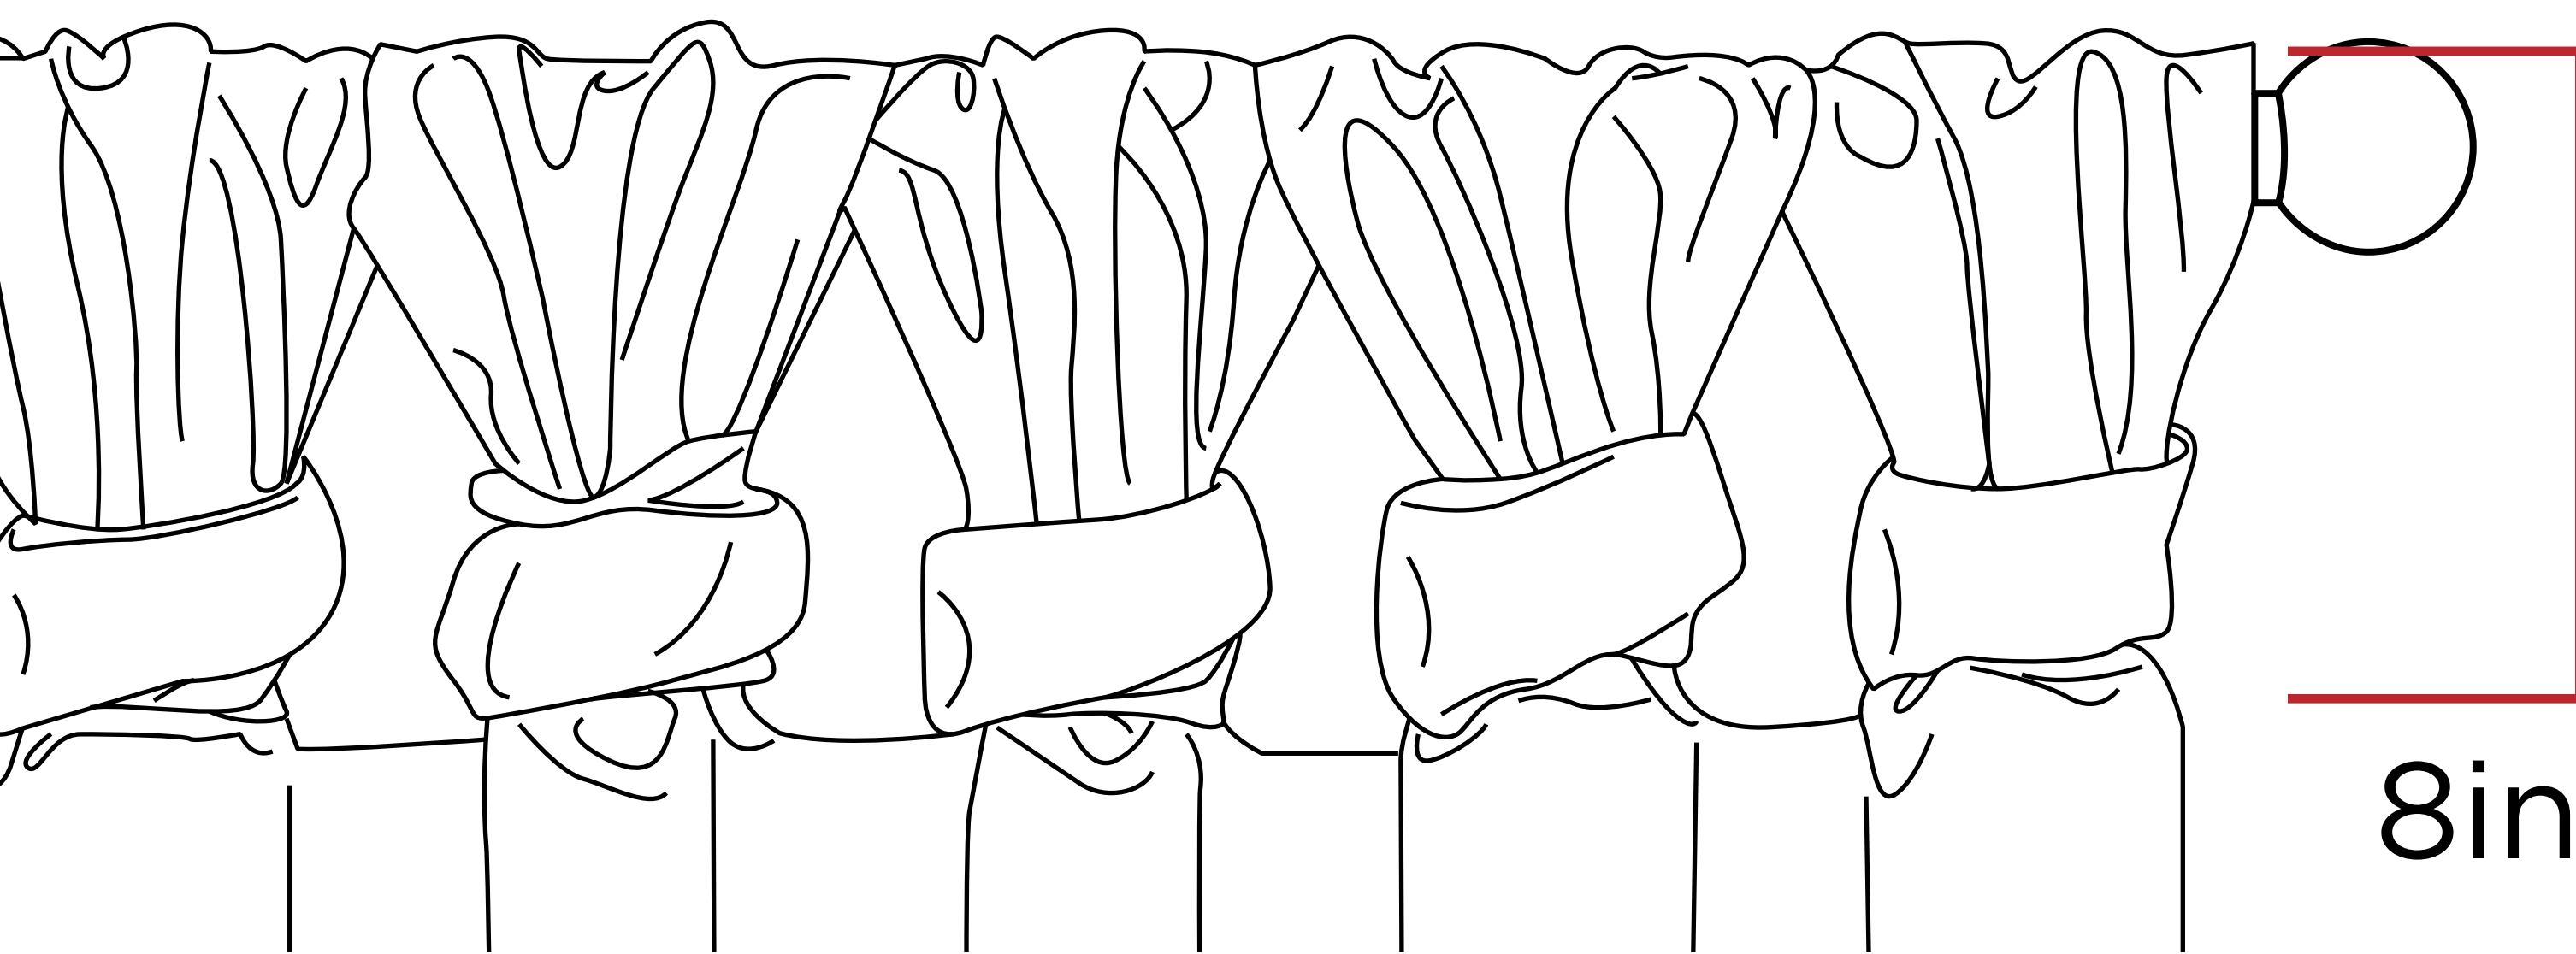

TWIST TAB TOP

# Find The Perfect Fit

Ideally a curtain rod should be mounted 2in. to 4in. above the window trim.

