


1 Parts Identification MLRRGB 48-50

Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

If any pieces are missing or replacement parts are required, contact Gronomics at 1-855-299-6727.

NOTE: It is recommended to place a protective layer between the ground and the pieces during assembly. This will help prevent damage to the pieces.

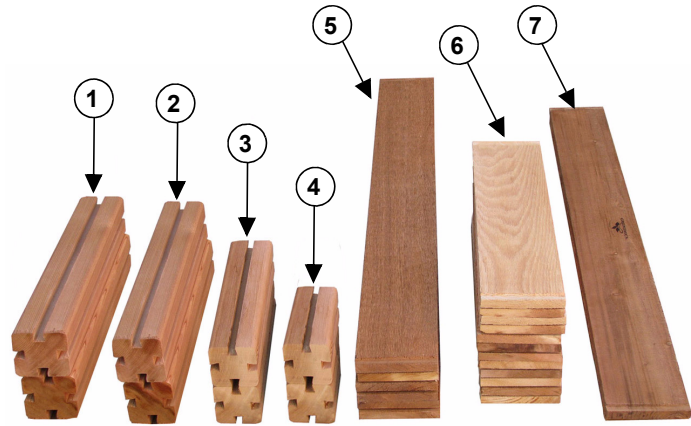

Parts List Product Care and Maintenance

ITEM	QTY.	PART #	DESCRIPTION
1	2	R1900	Corner Post, 4" x 4" x 19"
2	2	R1900SP	Corner Post (with spacer), 4" x 4" x 19"
3	2	R1300SP	Corner Post with spacer, 4" x 4" x 13"
4	2	R6500	Corner Post, 4" x 4" x 6-1/2"
5	6	R4500	Side Rail, 45" x 5-1/2" x 7/8"
6	12	R1450	Side Rail, 14-1/2 x 5-1/2" x 7/8"
7	1	R4500L	Side Rail (w/Logo), 45" x 5-1/2" x 7/8"


Western Red Cedar will turn a weathered grey if left unfinished. Although no finish is required for cedar when used outdoors, a natural oil finish applied regularly will help maintain the beauty and minimize cracking and drying. It is recommended to use **Gronomics Garden Bed Oil (Item# GBO-1Q)**, a non-toxic, food safe finish that is very easy to apply.

Apply oil when air and wind temperatures are between 50-90 degrees. Avoid applying in direct sunlight.

2 Corner Post and Side Rail Assembly

Stand two 4" x 4" x 19" corner posts (Item 1) upright.

Install a 45" x 5-1/2" x 7/8" side rail (Item 5) between the posts and slide down.

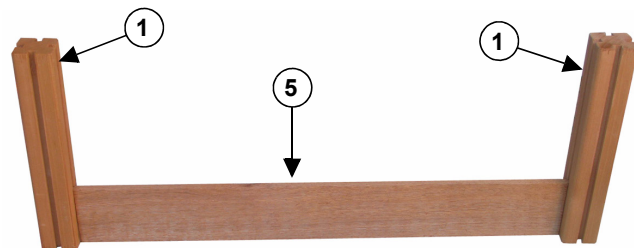

Packaged & Inspected by:		Date:	
--------------------------	--	-------	--


Continued

3 Side Rail and Corner Post Assembly

Install one 14-1/2" x 5-1/2" x 7/8" side rail (Item 6) at each end of the garden bed and slide down.

Install a 4" x 4" x 19" corner post (with spacer) (Item 2) onto each side rail.

NOTE: Spacers must be located as shown.

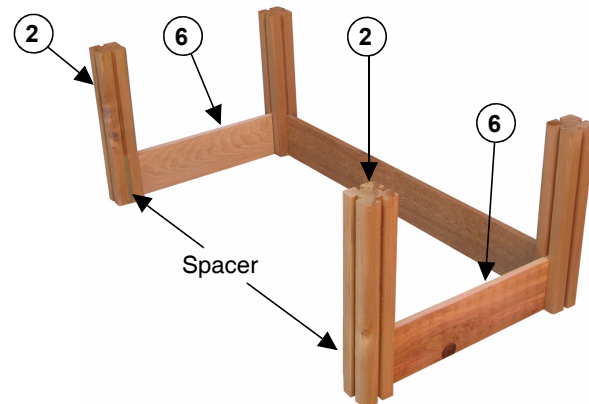


4 Side Rail Assembly

Install four 31" x 5-1/2" x 7/8" side rails (Item 5) between the posts and slide down.

Install four 14-1/2" x 5-1/2" x 7/8" side rail (Item 6) at each end of the garden bed and slide down.

NOTE: Spacers must be located as shown.

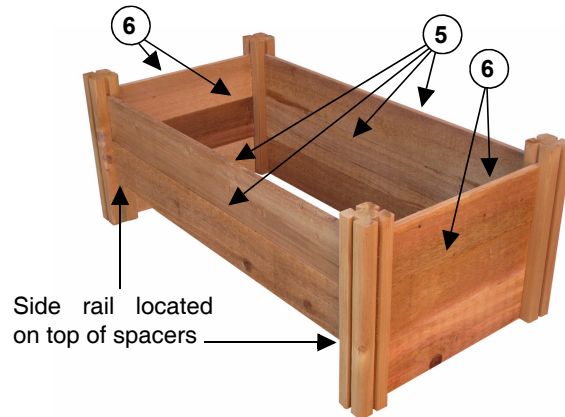


5 Side Rail and Corner Post Assembly

Install one 14-1/2" x 5-1/2" x 7/8" side rail (Item 6) at each end of the garden bed and slide down.

Install a 4" x 4" x 13" corner post (with spacer) (Item 3) onto each side rail.

NOTE: Spacers must be located as shown.


Install one 45" x 5-1/2" x 7/8" side rail (Item 5) at each end of the garden bed and slide down.

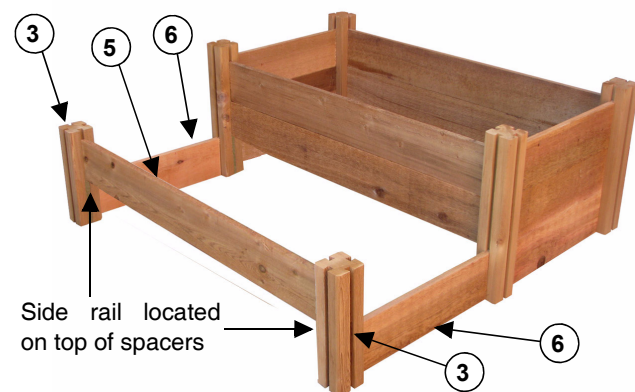

Continued

6 Side Rail Assembly

Install one 14-1/2" x 5-1/2" x 7/8" side rail (Item 6) at each end of the garden bed and slide down.

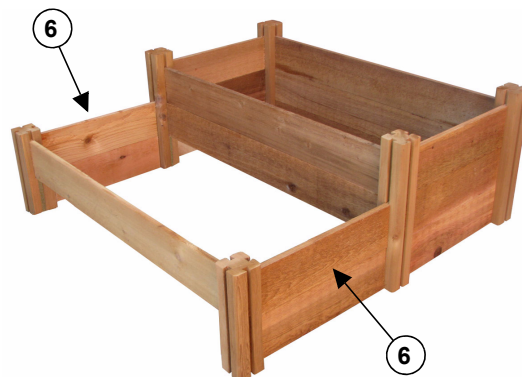

7 Side Rail Assembly and Corner Post Assembly

Install one 14-1/2" x 5-1/2" x 7/8" side rail (Item 6) at each end of the garden bed and slide down.

Install one 4" x 4" x 6-1/2" corner post (Item 4) onto each side rail.

Install the 45" x 5-1/2" x 7/8" side rail (w/Logo) (Item 7) between the posts and slide down.

