

ARNOLD®

ALL-SEASON STARTER HANDLE

MANIVELA DE ARRANQUE PARA TODAS LAS ESTACIONES



FOR / PARA

**ARIENS, BOLENS, BRIGGS & STRATTON, CRAFTSMAN,
CUB CADET, HONDA, HUSKEE, HUSQVARNA, JOHN DEERE,
KOHLER, TECUMSEH, TORO, TROY-BILT, YARD MACHINES,
YARD-MAN AND OTHERS / Y OTROS**

**88" Nylon
Cord Included**

Con cuerda de nilón
de 2.2 m

See website for helpful installation videos
www.arnoldparts.com

- Secure grip, even with gloves
- Easy installation
- Fits most brands of outdoor power equipment with 88" or less nylon cords
- Agarre seguro, incluso con guantes
- Fácil instalación
- Para la mayoría de las marcas de equipos motorizados para exteriores con cuerda de nilón de 2.2 m o menos

490-241-0002

ALL-SEASON STARTER HANDLE

FOR ARIENS, BOLENS, BRIGGS & STRATTON, CRAFTSMAN, CUB CADET, HONDA, HUSKEE, HUSQVARNA, JOHN DEERE, KOHLER, TECUMSEH, TORO, TROY-BILT, YARD MACHINES, YARD-MAN AND OTHERS

SECURE GRIP, EVEN WITH GLOVES

EASY INSTALLATION

FITS MOST BRANDS OF OUTDOOR POWER EQUIPMENT WITH 88" OR LESS NYLON CORDS

⚠ CAUTION:

Disconnect spark plug wire before working on engine. Be certain engine is cold.

HOW TO INSTALL:

1. Measure old cord length and add 6" to this length for knotting. Mark and cut the new cord to this length.
2. Thread cord through handle grip and insert, tying knot at end. Heat-seal knot to prevent loosening. Pull knot until seated tightly into handle (Fig. A).
3. Remove recoil housing. Rewind starting spring counterclockwise until tight, then loosen one turn. Install cord (Fig. B). Reassemble starter unit.
4. Reconnect spark plug wire.

For more details, refer to the installation instructions in your operator's manual.

Fig. A


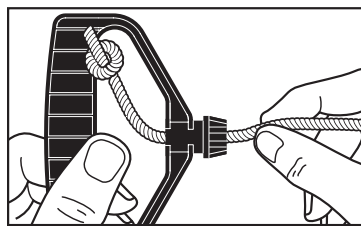


Fig. B

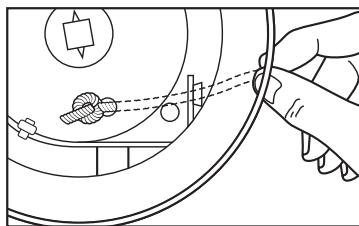

MANIVELA DE ARRANQUE PARA TODAS LAS ESTACIONES

PARA ARIENS, BOLENS, BRIGGS & STRATTON, CRAFTSMAN, CUB CADET, HONDA, HUSKEE, HUSQVARNA, JOHN DEERE, KOHLER, TECUMSEH, TORO, TROY-BILT, YARD MACHINES, YARD-MAN Y OTROS

AGARRE SEGURO, INCLUSO CON GUANTES

FÁCIL INSTALACIÓN

PARA LA MAYORÍA DE LAS MARCAS DE EQUIPOS MOTORIZADOS PARA EXTERIORES CON CUERDA DE NILÓN DE 2.2 m O MENOS

⚠ PRECAUCIÓN:

Desconecte el cable de bujía antes de trabajar en el motor. Asegúrese de que el motor esté frío.

CÓMO INSTALAR:

1. Mida la cuerda vieja. Marque y corte la cuerda nueva al mismo largo más 15.2 cm adicionales para atar.
2. Pase la cuerda a través de la inserción y el mango de la manivela, y haga un nudo en el extremo. Selle el nudo por calor para impedir que se afloje. Tire del nudo hasta que quede bien calzado en la manivela (Fig. A).
3. Retire el alojamiento del retroceso. Vuelva a enrollar el resorte del arranque en sentido contrahorario hasta que quede tieso y a continuación afloje una vuelta. Instale la cuerda (Fig. B) y vuelva a montar el conjunto del arranque.
4. Reconecte el cable de bujía.

Si necesita más detalles, consulte las instrucciones de instalación en su manual del operador.

TOOLS REQUIRED / HERRAMIENTAS REQUERIDAS:



Box wrench
Llave estriada

Pliers
Pinzas

Knife
Cuchilla

Safety glasses
Gafas de seguridad



www.arnoldparts.com

CHECK OUT OUR ONLINE HOW-TO VIDEOS AND TAKE THE GUESSWORK OUT OF EQUIPMENT MAINTENANCE!

¡CONOZCA NUESTROS VIDEOS DE INFORMACIÓN PRÁCTICA EN LÍNEA Y LIBRESE DE LAS DUDAS SOBRE EL MANTENIMIENTO DEL EQUIPO!

ARNOLD

305 Mansfield Ave.
Shelby, OH 44875
www.arnoldparts.com

C.O.O.: U.S.A. AND CHINA
PAÍS DE ORIGEN: EE. UU. Y CHINA

645-79974A

