



Super Bright Modular LED House Numbers Directions for Installation

Attach the end bracket without the photo cell to the left of the first number, assemble the numbers in order, and attach the other end bracket to the right of the last number. Use the screws provided to join the modules. (Fig 1)

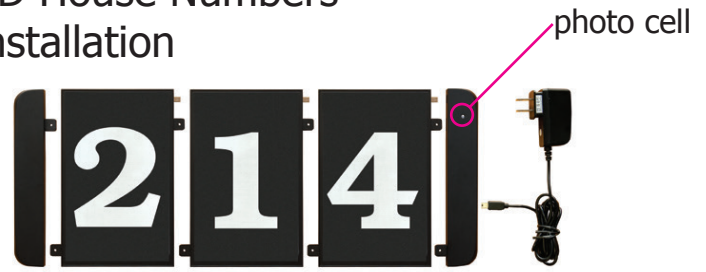

(Fig 1)

Insert the two hanger clips into the square slots of each of the end modules with the tab facing upwards. (Fig 2)

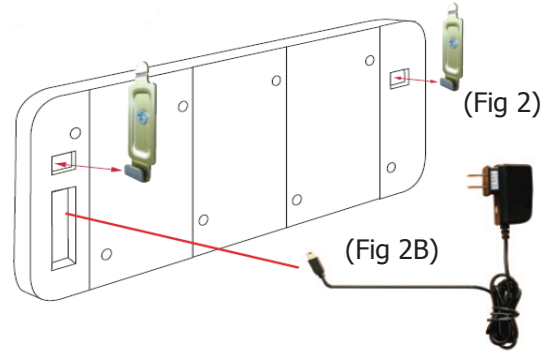

Select the location of the numbers. Mark the position of the sign using the top of the hanger brackets as a guide. (Fig 3)

Remove the number sign and drill 2 x 3/16" holes, one inch directly below the top of the bracket. Insert the plastic anchors and secure the hanger brackets to the wall using the screws provided. (Fig 4)


Drill a 3/8" feed - through hole 3" below the bottom of the hanging bracket behind the end module with the photocell. Feed the transformer wire through the hole from the inside out. Connect the wire from the transformer to the end module by inserting the mini USB into the connector at the back of the unit (Right side module). (Fig 2B)



(Fig 3)

Mount the assembled number to the wall by placing the completed address sign onto the hanger clips and inserting the clips into the end modules of the number. Slide the address number down onto the clips to secure.

When the installation is completed and all the final adjustments are made, gently bend the tabs forward on top of each of the hanger clip in order to lock the address number onto the wall surface. (Fig 5)

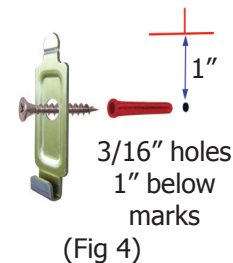

(Fig 4)

Plug the transformer into the AC outlet only after the installation is complete.

Note: To check if functioning during the daytime, cover the sensor; the number will illuminate. It will turn off when the sensor is uncovered.

Please visit www.enviromate.com for installation videos.



(Fig 5)