

16684



Call Us First!
DO NOT RETURN TO STORE.

**For immediate help with assembly or product information
call our toll free number:**

1-800-221-1849

or email:

customerservice@handyhome.com

Our staff is ready to provide assistance

April through October M-F 8:00 AM to 7:00 PM EST

Saturday 8:30 AM to 4:30 PM EST


November through March M - F 8:00 AM to 5:00 PM EST

(This page intentionally left blank.)

OCOEE 6' x 3' (182,9 x 91,4 cm)

ACTUAL FLOOR SIZE IS 68-1/4 x 36" (173,4 x 91,4 cm)

KEEP THIS MANUAL FOR FUTURE REFERENCE

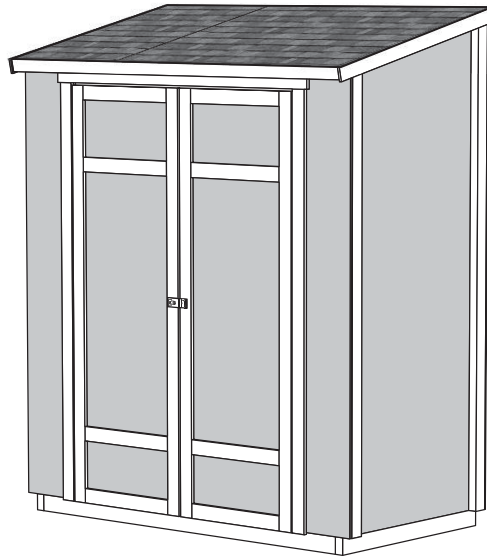

⚠ IMPORTANT! ⚠

READ INSTRUCTIONS THOROUGHLY PRIOR TO BEGINNING ASSEMBLY.

BEFORE YOU BEGIN

• BUILDING RESTRICTIONS AND APPROVALS

Be sure to check with local building department and homeowners association for specific restrictions and/ or requirements before building.

• ENGINEERED DRAWINGS

Contact our Customer Service Team if engineered drawings are needed to pull local permits.

• SURFACE PREPARATION

To ensure proper assembly you must build your shed on a level surface. Recommended methods and materials to level your shed are listed on page 6.

• CHECK ALL PARTS

Inventory all parts listed on pages 4 - 5. Contact our Customer Service Team if any parts are missing or damaged.

• ADDITIONAL MATERIALS

You will need additional materials to complete your shed. See page 3 for required and optional materials and quantities.



- CUSTOMER SERVICE -



Call: 1-800-221-1849 email: customerservice@handyhome.com

TOOLS

Required

Phillips Screwdriver 

Drill / Driver
 3/8" Drill Bit
 #2 Philips Drive Bit



Hammer 

Level 


Pencil 

Tape Measure 

Square  or 

Utility Knife 
 Shingle Blades 

Caulk Gun 

Paint Tools 

Safety Glasses 


Ladder 

Optional


Tool Belt/ Nail Pouch 

Tin Snips (for drip edge) 

Chalk Line 

Nail Gun
 • gun nails 

Gloves 

C-Clamps 

Safety! Always use approved safety glasses during assembly.

HELPFUL REMINDER SYMBOLS

Look for these symbols for helpful reminders throughout this manual.



= Assistance Required; two or more people.



= Mark part with pencil.



= Ensure squareness.



= Beginning of steps for assembly or installation.



= Important required step or operation.



= You have finished the assembly or installation.



= Helpful assembly hint.






= Level

ORIENT LUMBER AND TRIM FOR BEST APPEARANCE

Framing lumber is graded for structural strength and not appearance. Exterior trim is graded for one good side.

Always install the material leaving the best edge and best surface visible. Please remember that these blemishes in no way negatively affect the strength or integrity of our product. (See Fig. A, B, C.)

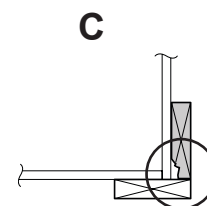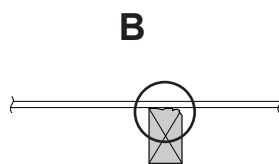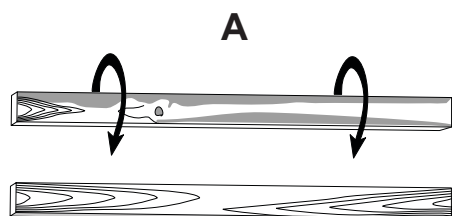

ADDITIONAL MATERIALS NEEDED BEFORE YOU BEGIN

FOUNDATION OR FLOOR MATERIALS


- This shed kit includes a complete wood floor frame system and floor decking.
- This shed kit does not include ANY leveling materials.
- See the **FLOOR LEVELING** section on page 6 for recommended methods and suggested materials to properly level your floor, as this will vary depending on your specific site.

REINFORCED WOOD FLOOR FRAME (OPTIONAL)

IMPORTANT! (The included floor is designed for general use.) Depending on your specific use you may want to construct a heavy duty floor frame by adding additional floor joists (shown below as shaded). Below is a list of additional materials (not included):

x2 2 x 4 x 8' (5 x 10 x 244 cm) Treated Lumber
Cut lumber to 2 x 4 x 65-1/4" (5 x 10 x 165,7 cm)

x8 3" (7,6 cm) Hot Dipped Galvanized Nails

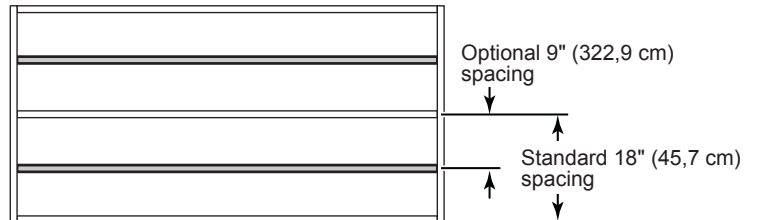


COMPLETING YOUR SHED

You will need these additional materials:

3-TAB SHINGLES 1 Bundles

PAINT FOR SIDING 1 Gallon
Use 100% acrylic latex exterior paint. (2) coats recommended.

CAULK 1 Tube
Use acrylic latex exterior caulk that is paintable. 

DRIP EDGE 20 Feet
Required to validate warranty

1" GALVANIZED ROOFING NAILS.... 1 Lbs
For shingles.

PAINT FOR TRIM1 Quart
Use 100% acrylic latex exterior paint.

OPTIONAL MATERIALS


#15 ROOFING FELT
To cover 23 Sq. Ft. of roof area.

1" GALVANIZED ROOFING NAILS.....1/4 Lb
For roofing felt.

**REFER TO THE BACK OF THIS MANUAL AND THE MANUFACTURER'S INSTRUCTIONS
FOR INSTALLATION OF SHINGLES, DRIP EDGE AND FELT.**

PARTS IDENTIFICATION AND SIZES

Part identification is stamped on some parts.



• Check these locations for part stamp.

Treated lumber is stamped:

TREATED

WOOD SIZE CONVERSION CHART

Nominal Board Size	Actual Size
2" x 4".....	1-1/2" x 3-1/2" (3,8 x 8,9 cm)
1" x 4".....	3/4" x 3-1/2" (1,9 x 8,9 cm)
2" x 3".....	1-1/2" x 2-1/2" (3,8 x 6,3 cm)
1" x 3".....	3/4" x 2-1/2" (3,8 x 6,3 cm)

PARTS LIST



INVENTORY YOUR PARTS before you begin.

We suggest sorting parts by the category they are listed in.

FLOOR

x2 **TREATED** 2 x 4 x 36" (5,1 x 10,2 x 91,4 cm)

x3 **TREATED** 2 x 4 x 65-1/4" (5,1 x 10,2 x 165,7 cm)

Treated lumber is stamped:

TREATED

WALL & ROOF

x2 **DU** 2 x 3 x 36" (5,1 x 7,6 x 91,4 cm)

x1 **NE** 2 x 3 x 45-1/2" (5,1 x 7,6 x 115,6 cm)

x1 **AX** 2 x 3 x 53" (5,1 x 7,6 x 134,6 cm)

x3 **GPH** 2 x 3 x 68-1/4" (5,1 x 7,6 x 173,4 cm)

x2 **PPO** 2 x 3 x 70" (5,1 x 7,6 x 177,8 cm)

x1 **OY** 2 x 3 x 72" (5,1 x 7,6 x 182,9 cm)

x2 **MLO** 2 x 3 x 76-9/16" (5,1 x 7,6 x 194,5 cm)

x2 **KOR** 2 x 3 x 80-1/8" (5,1 x 7,6 x 203,5 cm)

x2 **LJA** 2 x 3 x 84" (5,1 x 7,6 x 213,4 cm)

TRIM

x2 **NIK** 2 x 2 x 31-3/4" (5,1 x 5,1 x 80,6 cm)

x1 **RIGHT** 3/8 x 2-1/2 x 40-15/16" (1 x 6,3 x 104 cm)

x1 **LEFT** 3/8 x 2-1/2 x 40-15/16" (1 x 6,3 x 104 cm)

x1 **ZB** 19-32 x 2-1/2 x 55" (1,5 x 6,3 x 139,7 cm)

x1 3/8 x 2-1/2 x 72" (1 x 6,3 x 182,9 cm)


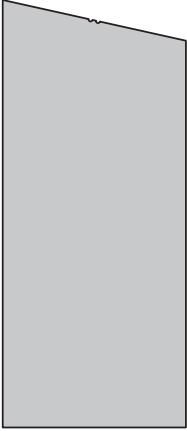






DOOR

x4 **BEA** 19-32 x 2-1/2 x 19" (1,5 x 6,3 x 48,3 cm)

x2 **OO** 1-1/4 x 2-1/2 x 69" (3,2 x 7,6 x 175,3 cm)

WALL PANEL & DOORS PARTS LIST

NOTE: Panel parts are not stamped.

	<input type="checkbox"/> x1  $3/8 \times 5-3/16 \times 48"$ $(1 \times 13,2 \times 121,9 \text{ cm})$					
						
<input type="checkbox"/> x1 $3/8 \times 36 \times 84"$ $(1 \times 91,4 \times 213,4 \text{ cm})$	<input type="checkbox"/> x2 $3/8 \times 11-7/8 \times 76"$ $(1 \times 30,2 \times 193 \text{ cm})$	<input type="checkbox"/> x1 LEFT DOOR	<input type="checkbox"/> x1 RIGHT DOOR	<input type="checkbox"/> x1 $3/8 \times 36 \times 84"$ $(1 \times 91,4 \times 213,4 \text{ cm})$	<input type="checkbox"/> x1 $3/8 \times 48 \times 84"$ $(1 \times 121,3 \times 193 \text{ cm})$	<input type="checkbox"/> x2 $3/8 \times 11-7/8 \times 84"$ $(1 \times 30,2 \times 193 \text{ cm})$

FLOOR & ROOF PANELS

Floor and Roof panels are 7/16" (1,1 cm) thick.



x1
 $7/16 \times 36 \times 68-1/4"$
 $(1 \times 91,4 \times 173,4 \text{ cm})$




x1
 $7/16 \times 24 \times 40-1/2"$
 $(1 \times 61 \times 102,9 \text{ cm})$


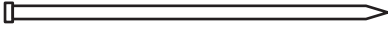




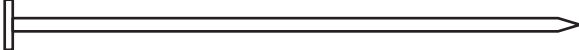

x1
 $7/16 \times 40-1/2 \times 48"$
 $(1 \times 102,9 \times 122 \text{ cm})$



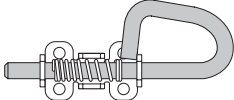
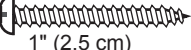

NAIL BOXES (Shown Actual Size)

x1 BOX  3" (7,6 cm)

FASTENER/HARDWARE BAG (Shown Actual Size)

- x250  1-1/2" (3,8 cm)
- x100  2" (5,0 cm)
- x32 (+)  3" (7,6 cm)
- x34 (+)  2" (5,0 cm)
- x72 (+)  1-1/4" (3,2 cm)
- x50 (+)  3/4" (1,9 cm)


DOOR HARDWARE & TOOL HOOK
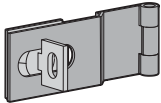
<input type="checkbox"/> x1  <input type="checkbox"/> x8  $3/4"$ (1,9 cm)	<input type="checkbox"/> x1  Spring-Bolt	<input type="checkbox"/> x4  $1"$ (2,5 cm) (4 screws in each package)	<input type="checkbox"/> x4 
---	---	--	---

FLOOR LEVELING OPTIONS

There are multiple ways to level your floor frame. Our recommended leveling method is shown below.
Leveling materials are not included in this kit.

PREFERRED METHOD - 4x4 TREATED RUNNERS

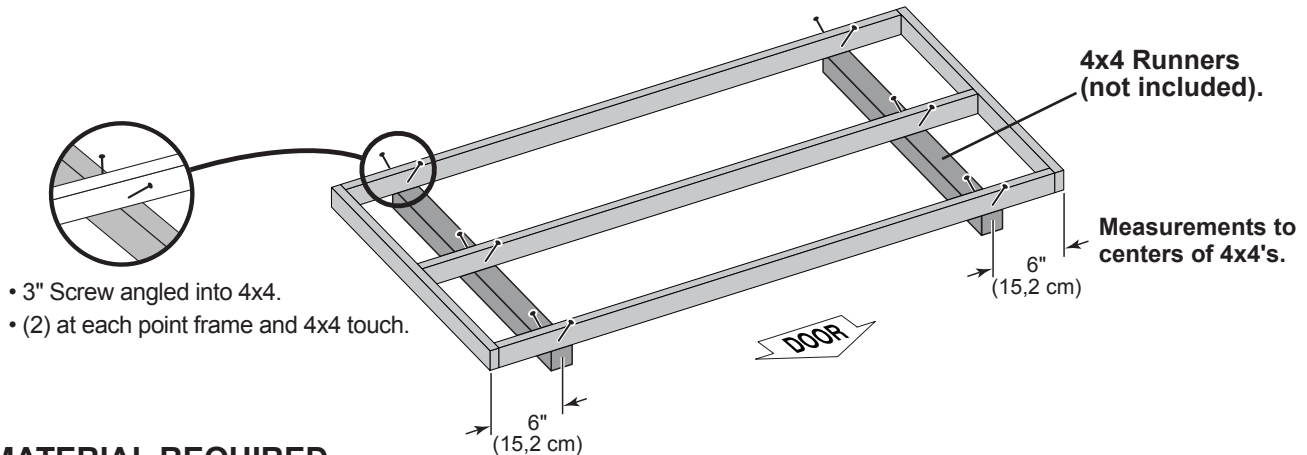


MATERIAL REQUIRED

x1 4" x 4" x 8' (10,2 x 10,2 x 243,8 cm) Treated Lumber

Fasteners for Frame to 4"x 4".
 (3" Screws shown as one option.) Minimum (12) 3" screws / exterior grade.

! Use only wood treated for ground contact and fasteners approved for use with treated wood.

! Always support frame seams.

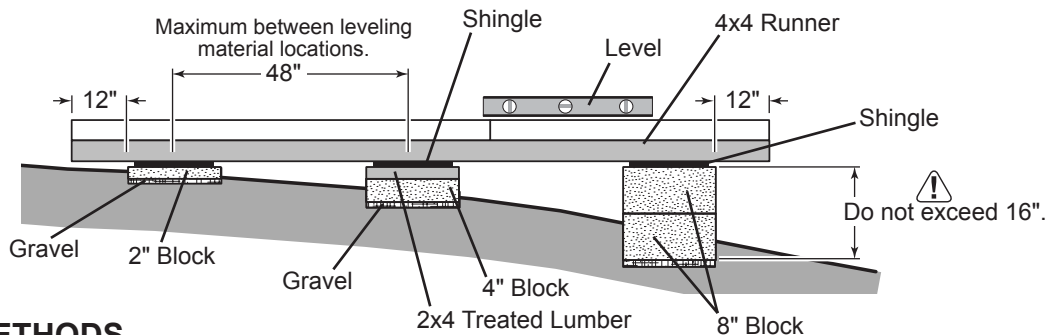

LEVELING METHODS

- Level under 4x4 runners only.
- Locate leveling material 12" from ends of runners and no more than 48" apart.
- Asphalt shingles should be used between 4x4 runners and blocks or treated lumber. Never use shingles in direct contact with ground.
- For best results and aiding in water drainage use gravel under each concrete block.

LEVELING MATERIALS

- Gravel
- Solid Masonry Blocks in 1", 2", 4" or 8" thickness
- 2x4 Treated Lumber
- Asphalt Shingles


! Leveling higher than 16" not recommended.

CONCRETE

- If you are building your shed on a concrete foundation see the following page.

CONCRETE FOUNDATION

If you choose to install your kit on a concrete slab refer to the diagram below.

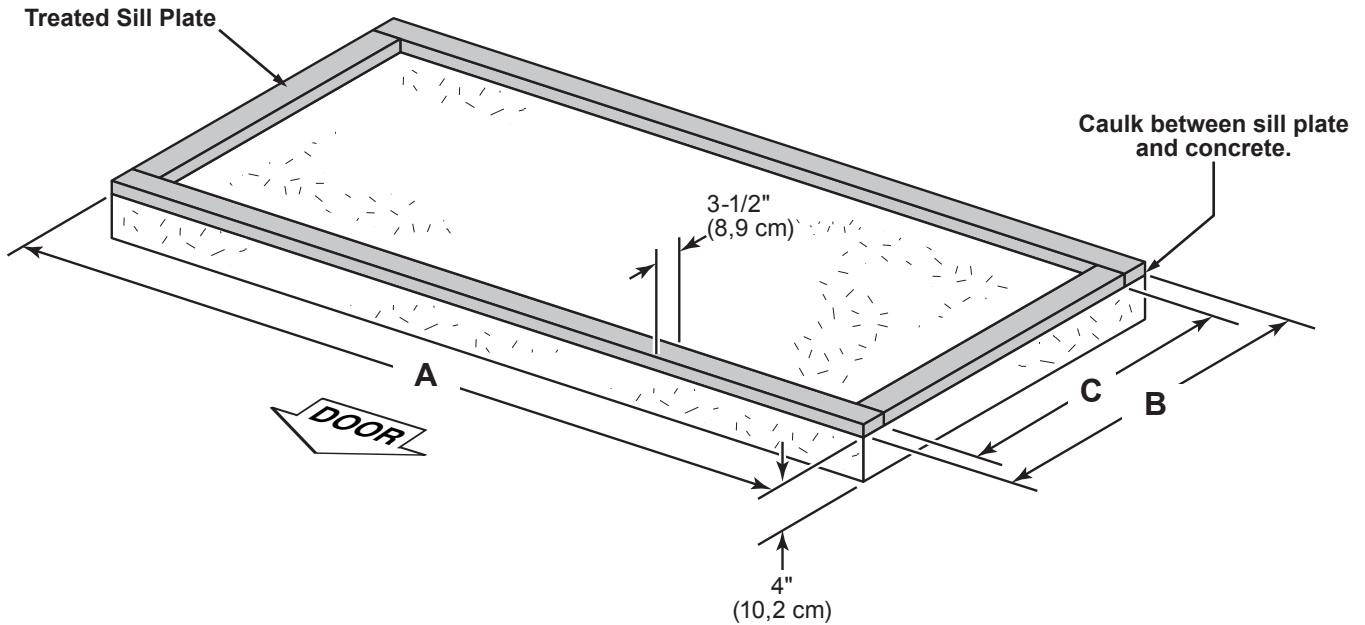

Building Size	Actual Floor Size	A	B	C
6'x 3' (182,9 x 91,4 cm)	68-1/4"x 36" (173,4 x 91,4 cm)	68-1/4" (173,4 cm)	36" (91,4 cm)	29" (73,7 cm)

Requires:

- x3** 2 x 4 x 8' (5,1 x 10,2 x 243,8 cm) **MUST be treated lumber.**
- x1** Caulk


Allow new concrete slabs to cure for at least seven (7) days.

- A treated 2 x 4" (5,1 x 10,2 cm) sill plate is required when installing your shed on concrete.
Hint: Use treated lumber in your kit (you will have to cut to fit).
- Use a high quality exterior grade caulk beneath all sill plates.
- Fasten 2 x 4" (5,1x 10.2 cm) sill plates to slab using approved concrete anchors (**fasteners not included**).
- Check local code for concrete foundation requirements.


NOTES


FLOOR FRAME


PARTS REQUIRED:

x2  **TREATED**
2 x 4 x 36" (5,1 x 10,2 x 91,4 cm)

NOTE: Look for **TREATED** Stamp.

x3  **TREATED**
2 x 4 x 65-1/4" (5,1 x 10,2 x 165,7 cm)

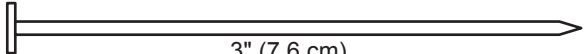x12  3" (7,6 cm)


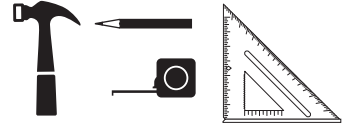


✓ BEGIN

1 Orient parts as shown on flat surface. Measure and mark each dimension from end of boards. Use two 3" nails at each mark.



HINT:
For easier nailing
stand on frame.

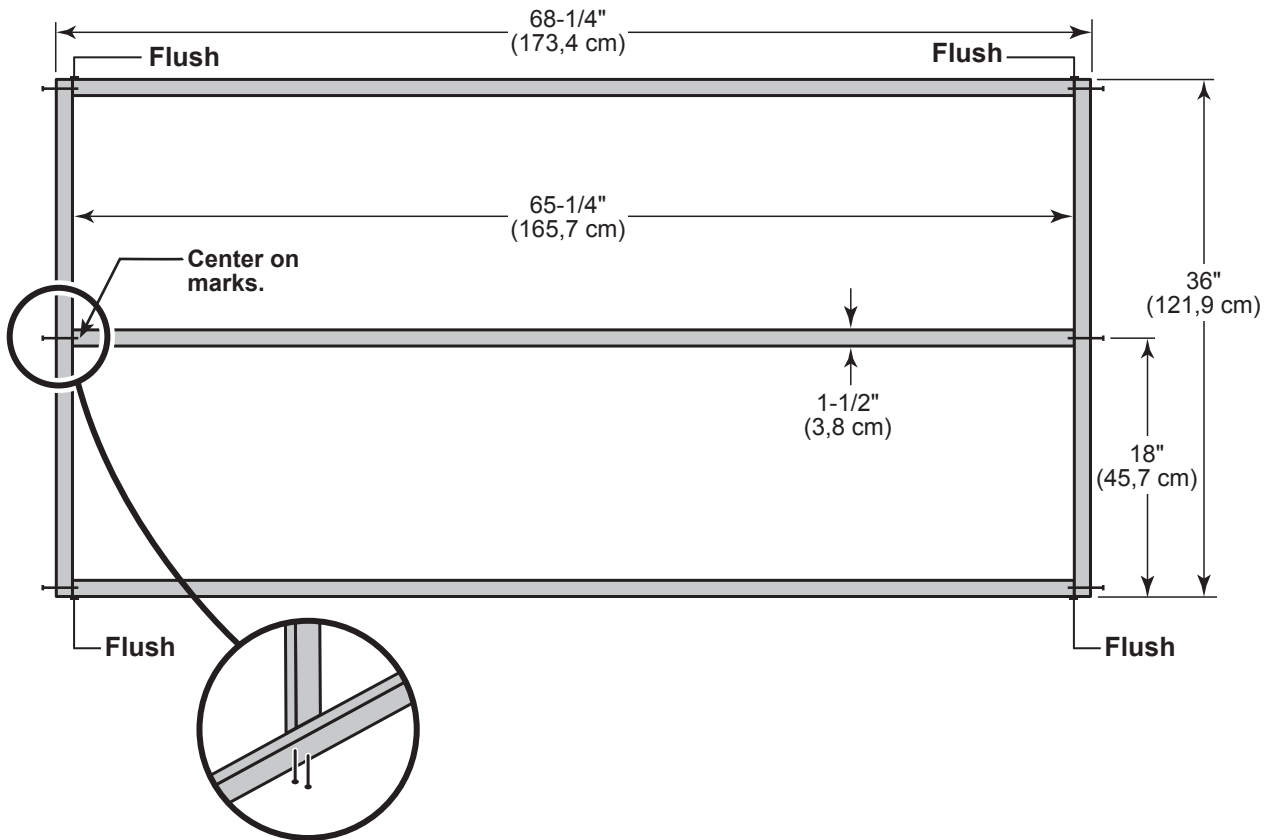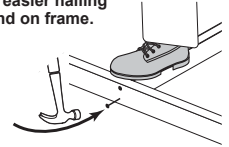

FINISH

2 You have finished your floor frame.

FLOOR FRAME



LEVEL AND SQUARE FLOOR FRAME



Before attaching floor decking, it is important to level and square the floor frame. A level and square floor frame is required to correctly construct your shed.




✓ BEGIN

- 1 See page 6 for the preferred floor leveling method.
- 2 Use level and check the frame is level before applying floor panels.
- 3 Check for frame squareness by measuring diagonally across corners. If the measurements are the same, the frame is square. The diagonal measurement will be approximately 77-3/16" (196,1 cm).
- 4 When the frame is level and square secure one side of frame to the 4x4 runners using one fastener at ends of each runner. At the opposite end of the frame, secure the frame to 4x4 runners with one fastener at ends of each runner making sure the frame remains square (**Fig. A**).



FINISH

- 5 Once the floor frame is level and square, fasten the frame at each point where the frame contacts the 4x4 runners.

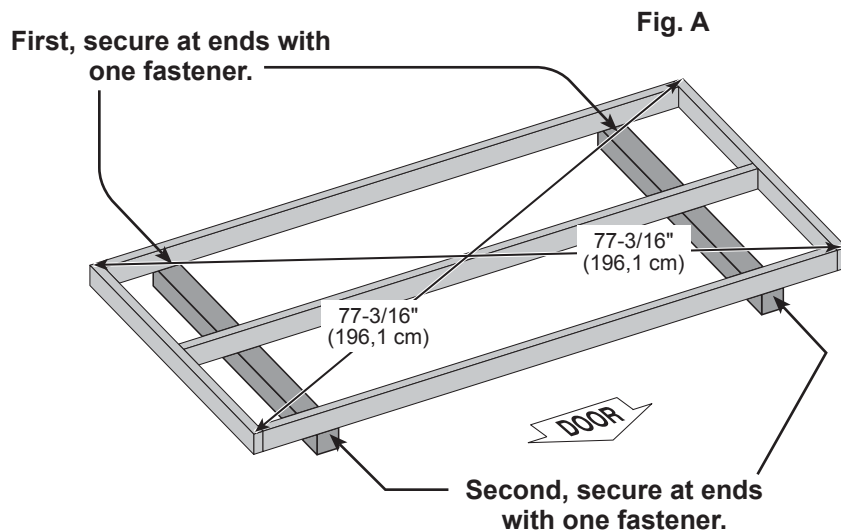

FLOOR PANEL

PARTS REQUIRED:

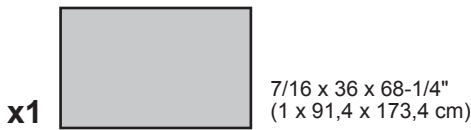


 **Ensure your floor frame is square by installing panel and squaring frame.**


 **BEGIN**

1 Attach the 36 x 68-1/4" panel with the rough side up (painted-grid lines side) with the 36" edge and corner flush to the floor frame (**Fig. A**). Secure panel with two 1-1/2" nails in the corners.

2 Move to the opposite end. Using the long edge of the panel as a lever move the panel side-to-side until the top corner is flush to the floor frame (**Fig. B**). Secure panel with two 1-1/2" nails in the corners.

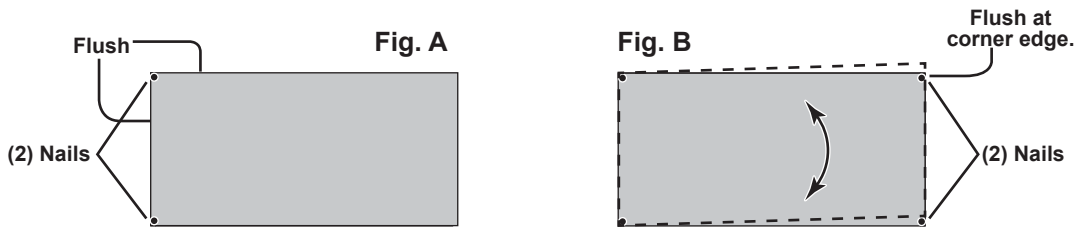

3 Continue attaching the panel using 1-1/2" nails 6" apart on edges and 12" apart inside panel.

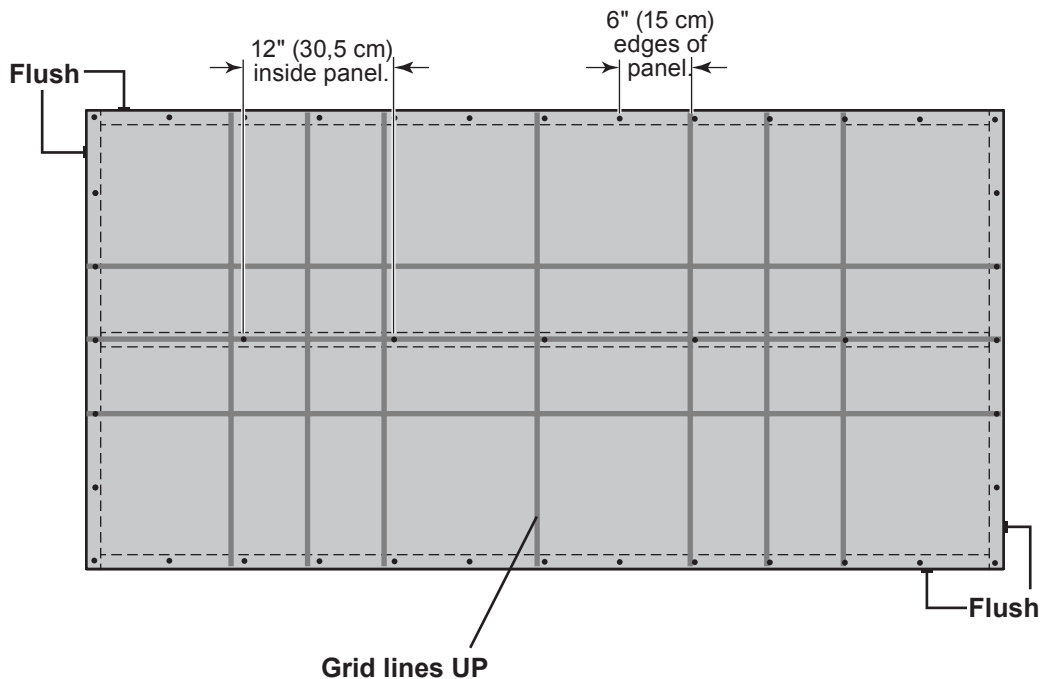


 **FINISH**

4 You have finished building your floor.

! IMPORTANT!




STOP! Check the floor frame is level after installing floor panel. Re-level if needed.

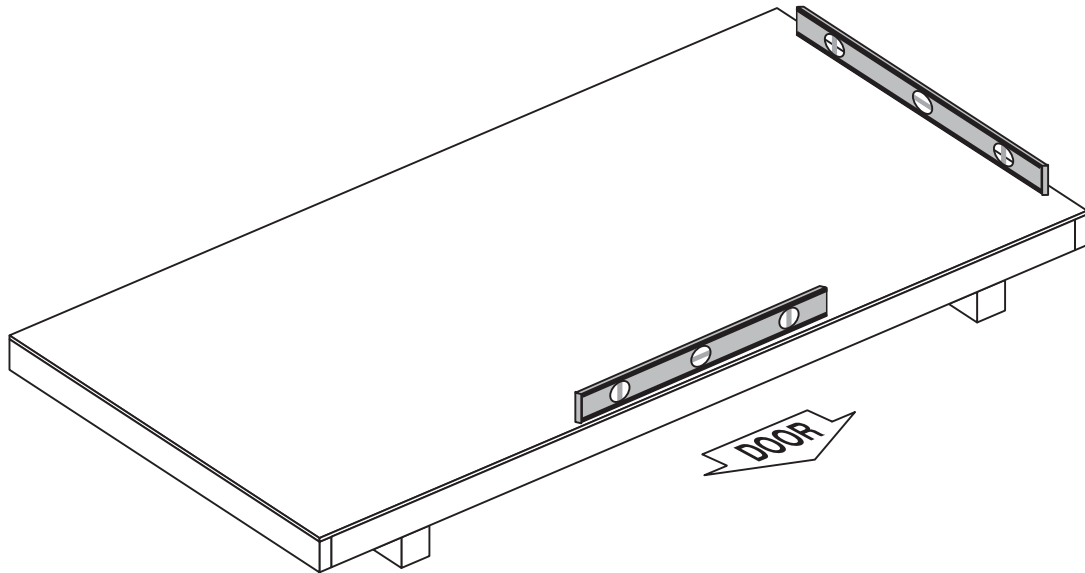

• The floor may be used as a stable work surface for wall construction.

HINT: • Organize your assembly procedure during the build process to avoid over-handling of the walls.

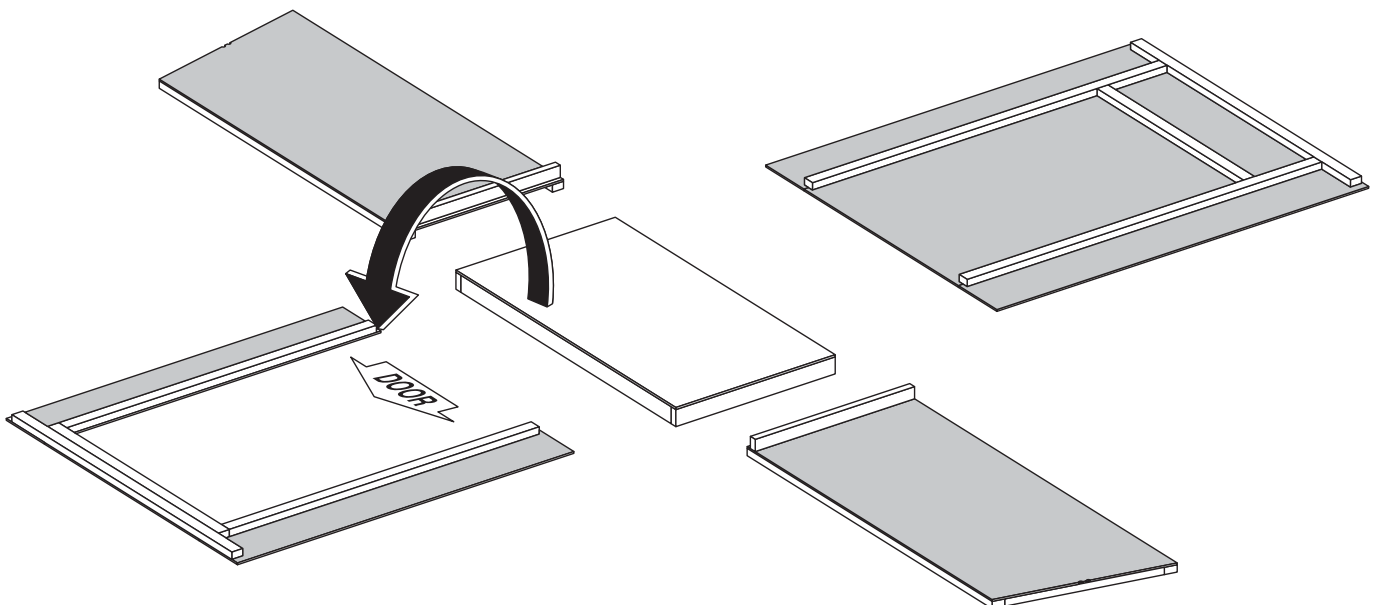


FRONT WALL


PARTS REQUIRED:

x1 **AX**
2 x 3 x 53" (5,1 x 7,6 x 134,6 cm)

x1 **GPH**
2 x 3 x 68-1/4" (5,1 x 7,6 x 173,4 cm)


x1 **Panel**
3/8 x 5-3/16 x 48" (1 x 13,2 x 121,9 cm)

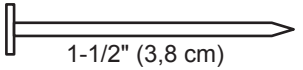x10  1-1/2" (3,8 cm)

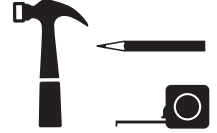

BEGIN

- 1 Center AX next to GPH on 2-1/2" flat edge as shown.
Secure 5-3/16" x 48" panel flush to top of GPH and centered.
Secure with 1-1/2" nails spaced 12" apart along panel edges.

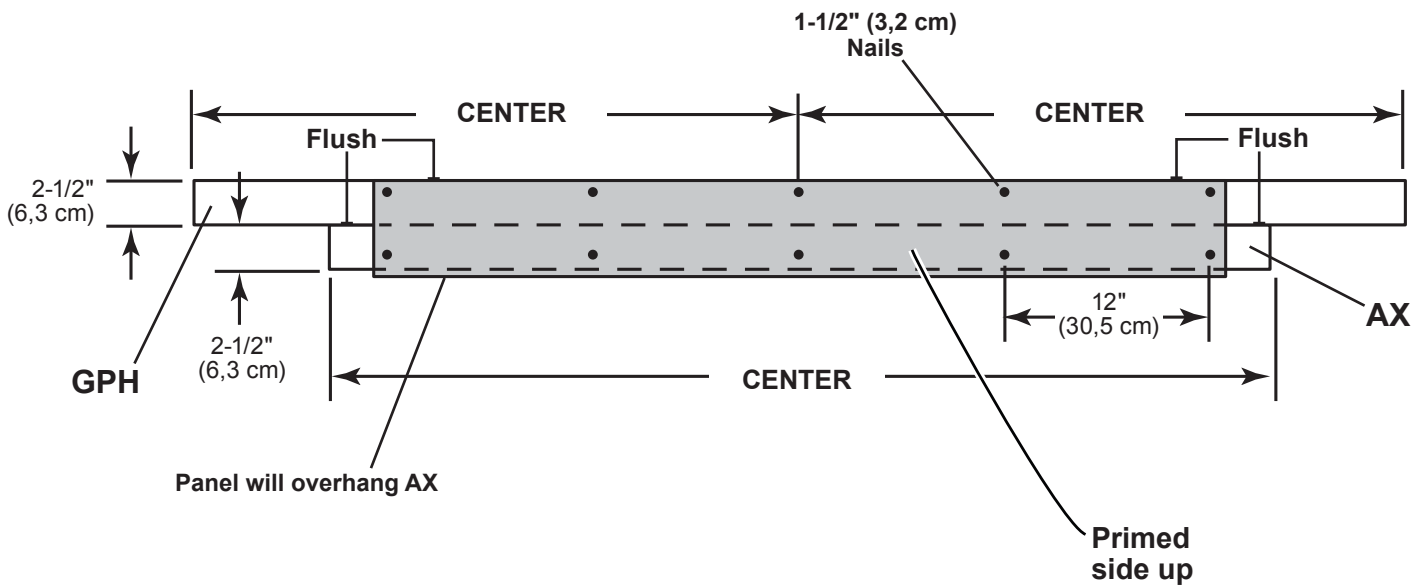



FRONT WALL

PARTS REQUIRED:


x2 **PPO**
2 x 3 x 70" (5,1 x 7,6 x 177,8 cm)

x2
3/8 x 11-7/8 x 76" (1 x 30,2 x 193 cm)

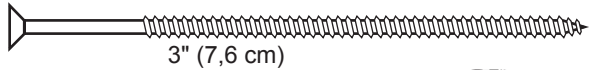
x2  3" (7,6 cm)

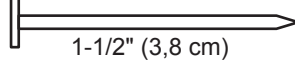x30  1-1/2" (3,8 cm)

x1 **OO TEMPORARY**
1-1/4 x 2-1/2 x 69" (3,2 x 7,6 x 175,3 cm)

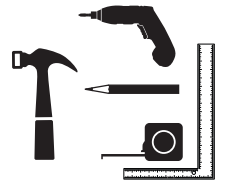


- 2 Arrange **PPO** flush to bottom of **AX** as shown (Fig A).

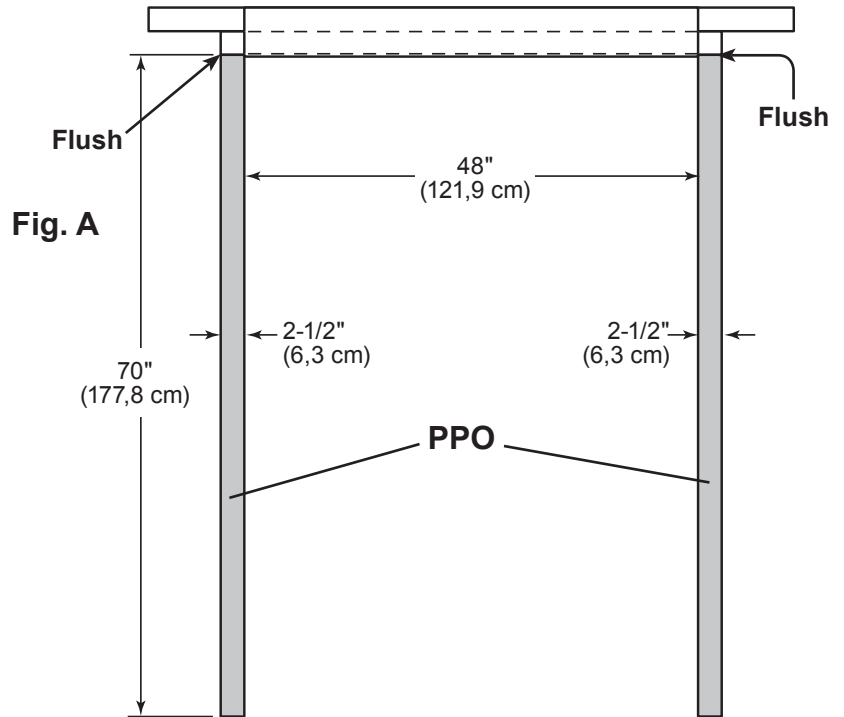

- 3 Keep panels square and **PPO** flush to **AX**.

Secure 11-7/8" x 76" panels primed side up with 1-1/2" nails spaced 6" apart along panel edges (Fig B).

Fig. B

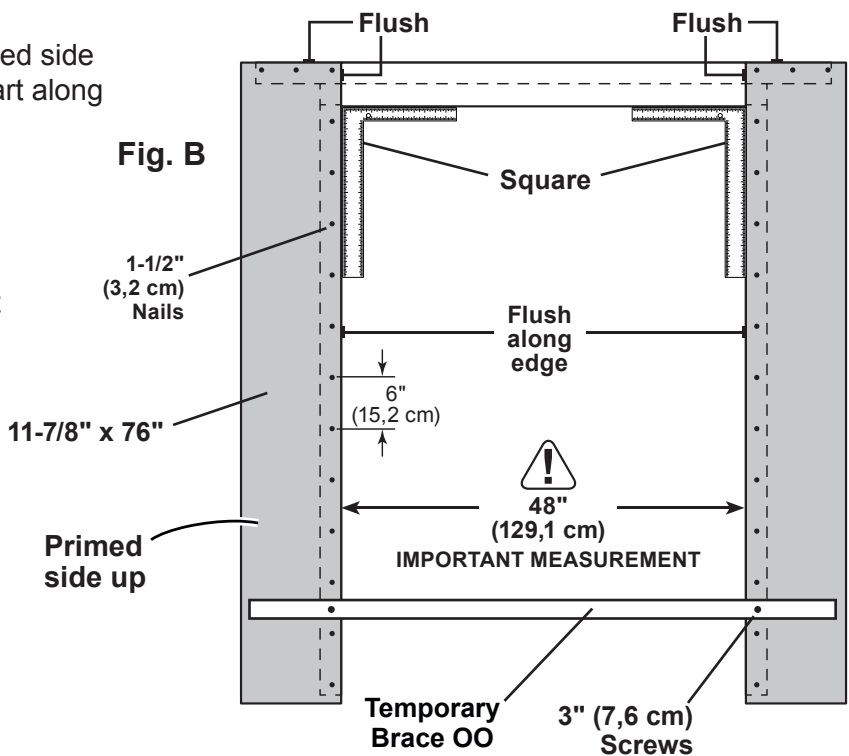

- 4 Attach **OO** as a temporary brace as shown using 3" screws, one at each side to hold the important 48" door opening.



- 5 You have finished your front wall.


SIDE WALLS

PARTS REQUIRED:

x2	NIK			x58		1-1/4" (3,2 cm)	x10		1-1/2" (3,8 cm)
		2 x 2 x 31-3/4" (5,1 x 5,1 x 80,6 cm)							
x1	NE	TEMPORARY SUPPORT		x2	DU				
		2 x 3 x 45-1/2" (5,1 x 7,6 x 115,6 cm)				2 x 3 x 36" (5,1 x 7,6 x 91,4 cm)			
x2	MLO								
		2 x 3 x 76-9/16" (5,1 x 7,6 x 194,5 cm)							
x2	LJA								
		2 x 3 x 84" (5,1 x 7,6 x 213,4 cm)							
				x1	Painted Green LEFT			x1	Painted Red RIGHT
						3/8 x 36 x 84" (1 x 91,4 x 213,4 cm)			3/8 x 36 x 84" (1 x 91,4 x 213,4 cm)

✓ BEGIN


- 1 Orient **NIK**, **MLO** and **LJA** as shown.
Secure **RIGHT 36" x 84"** panel primed side down with 1-1/4" screws spaced 6" apart along panel edges (**Fig. A**).

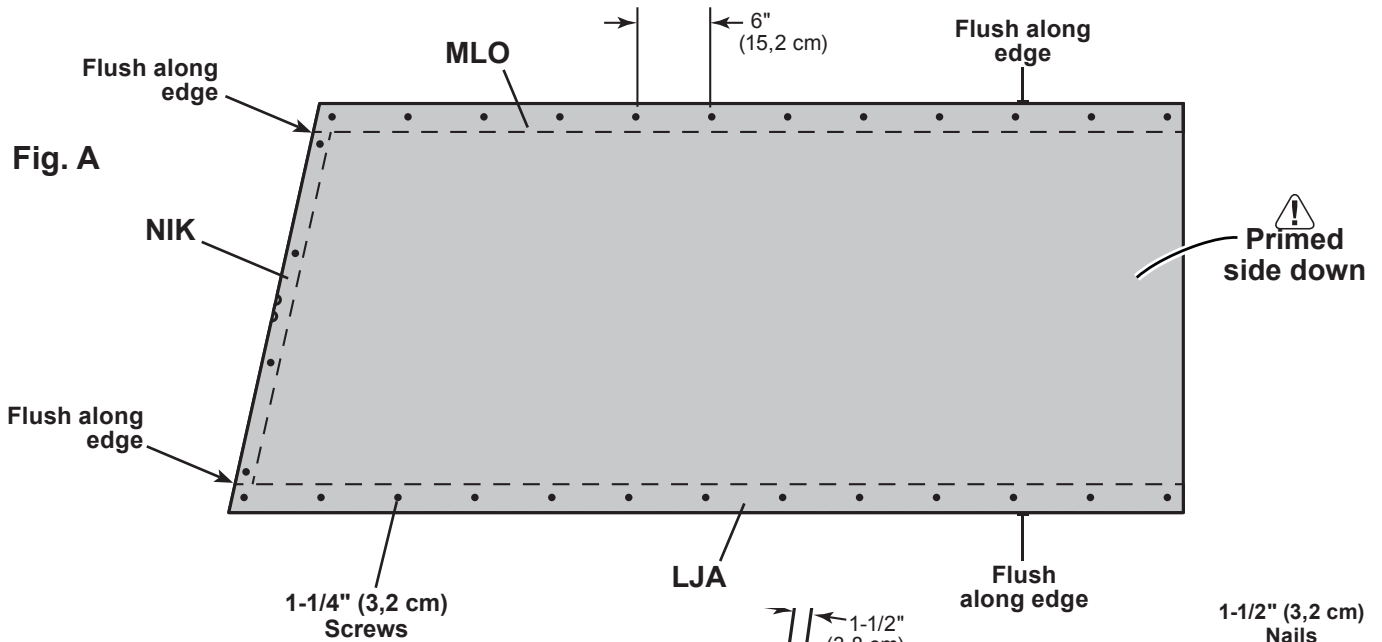

- 2 Flip panel over.
Place temporary support **NE** under wall assembly (**Fig. B**).

Measure and place **DU** 1" from panel edge as shown.

Secure **DU** with 1-1/2" nails spaced 6" apart.

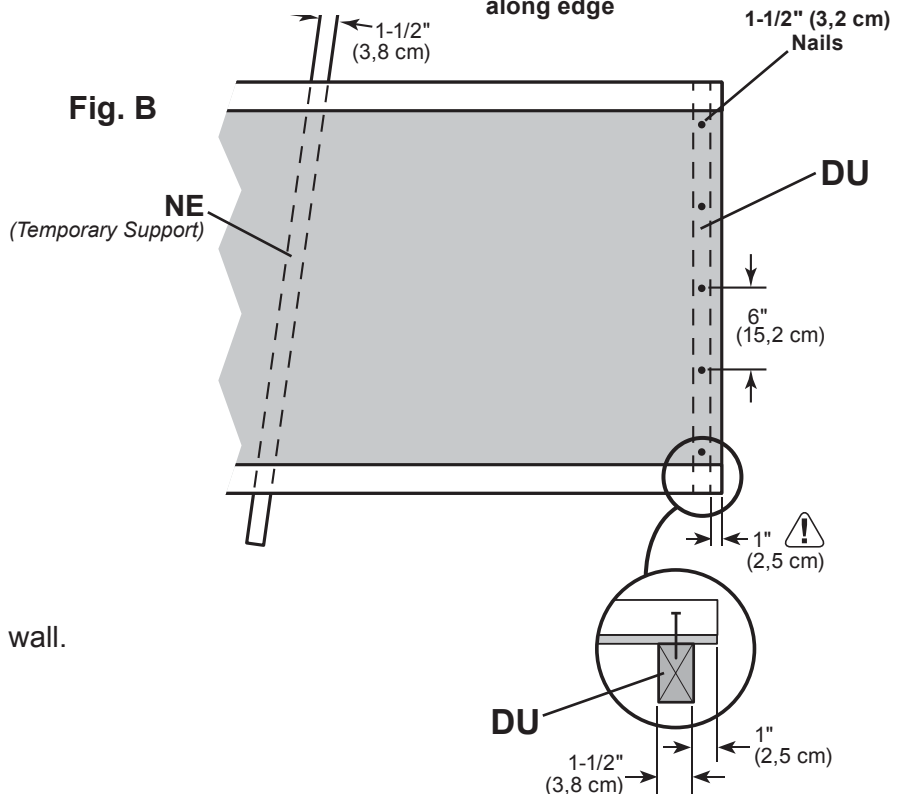

- 3 Repeat STEPS 1 - 2 for the left side wall.

FINISH

- 4 You have finished your side walls.

BACK WALL

PARTS REQUIRED:

x1 **GPH**
 2 x 3 x 68-1/4" (5,1 x 7,6 x 173,4 cm)

x2 **KOR**
 2 x 3 x 80-1/8" (5,1 x 7,6 x 203,5 cm)

x1 **3/8 x 11-7/8 x 84"**
 (1 x 30,2 x 193 cm)


x2 **3" (7,6 cm)**

x16 **1-1/2" (3,8 cm)**



✓ BEGIN


- 1 Orient **KOR** and **GPH** on 2-1/2" flat edge. Mark dimensions and secure with two 3" screws as shown (**Fig. A**).

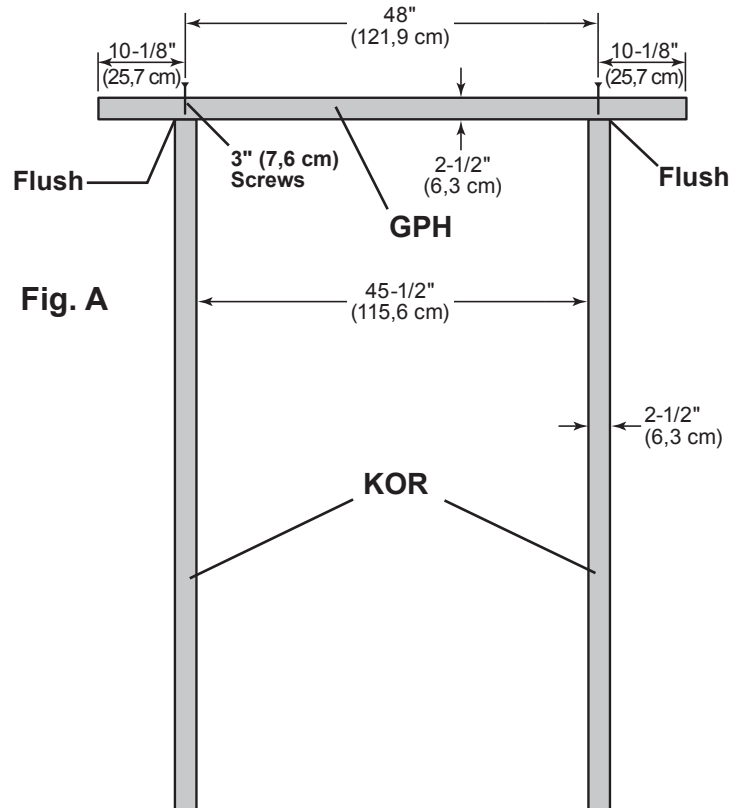

- 2 Place **11-7/8" x 84"** panel primed side up as shown (**Fig. B**).


⚠ Align panel 3/8" above **GPH** and flush to mark (**Fig. B**).


Secure panel using 1-1/2" nails 6" apart.

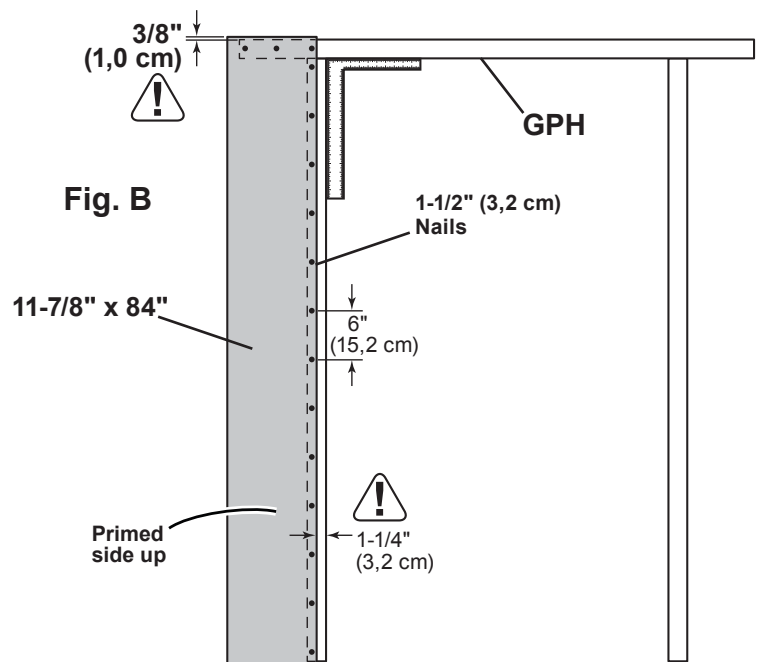


BACK WALL

PARTS REQUIRED:

x1  $3/8 \times 11-7/8 \times 84''$
(1 x 30,2 x 193 cm)


x1  $3/8 \times 48 \times 84''$
(1 x 121,3 x 193 cm)

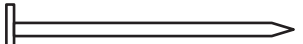


x50  $1-1/2'' (3,8 \text{ cm})$

- Align **48" x 84"** panel primed side up, $3/8''$ above **GPH**, flush to installed panel.

Nail panel using $1-1/2''$ nails $6''$ apart. (Fig. C).

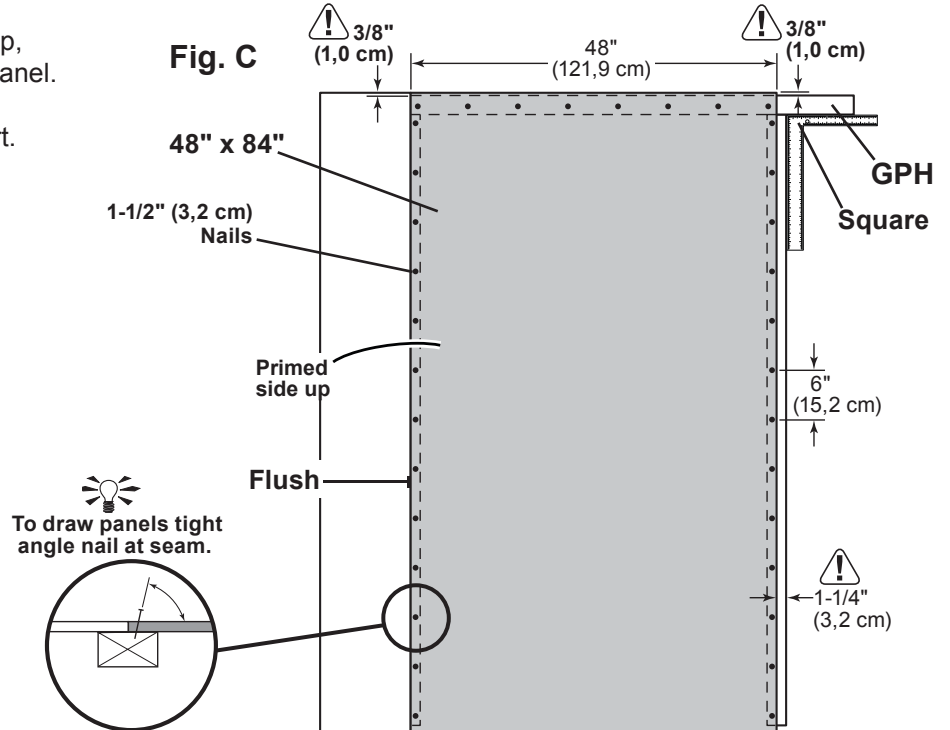


- Align **11-7/8" x 84"** panel primed side up, $3/8''$ above **GPH** and flush to installed panel.
Nail panel using $1-1/2''$ nails $6''$ apart.

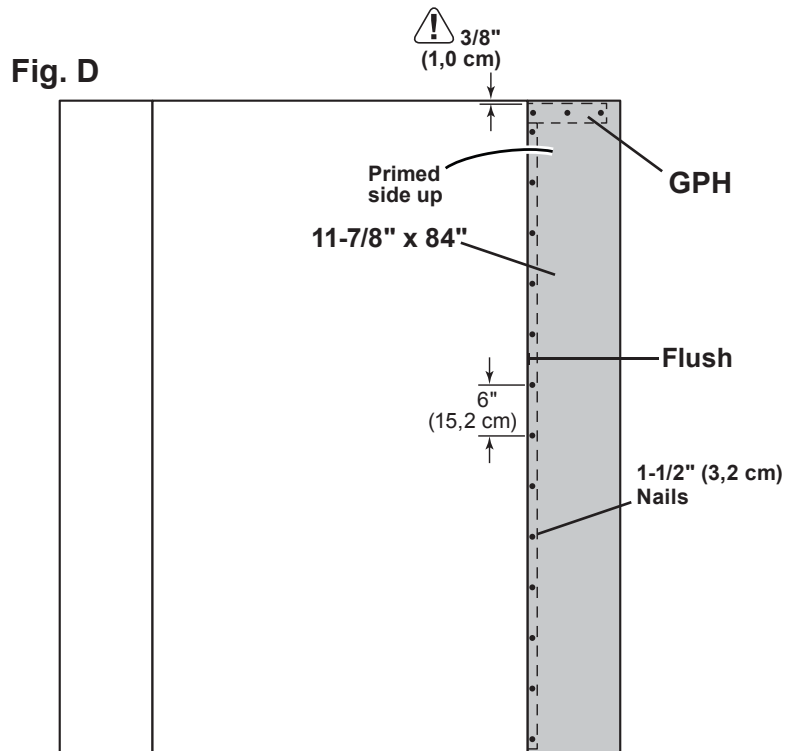

- You have finished your back wall.

BACK WALL INSTALLATION

PARTS REQUIRED:

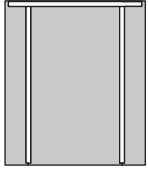

Back Wall Assembly

x13 1-1/2" (3,8 cm)

x6 3" (7,6 cm)

x1 **NE** TEMPORARY SUPPORT
2 x 3 x 45-1/2" (5,1 x 7,6 x 115,6 cm)





✓ BEGIN

- Center back wall assembly on the 68-1/4" floor dimension.
Panel will extend about 1-1/2" on both sides.
Use (1) **NE** as a temporary brace.
Secure **NE** with two 3" screws (**Fig. A**).


- Nail lower edge of panel to floor frame using 1-1/2" nails 6" apart.
Angle nail to hit floor frame (**Fig. B, C**).

- Secure studs to floor frame using four 3" screws (**Fig. B**).

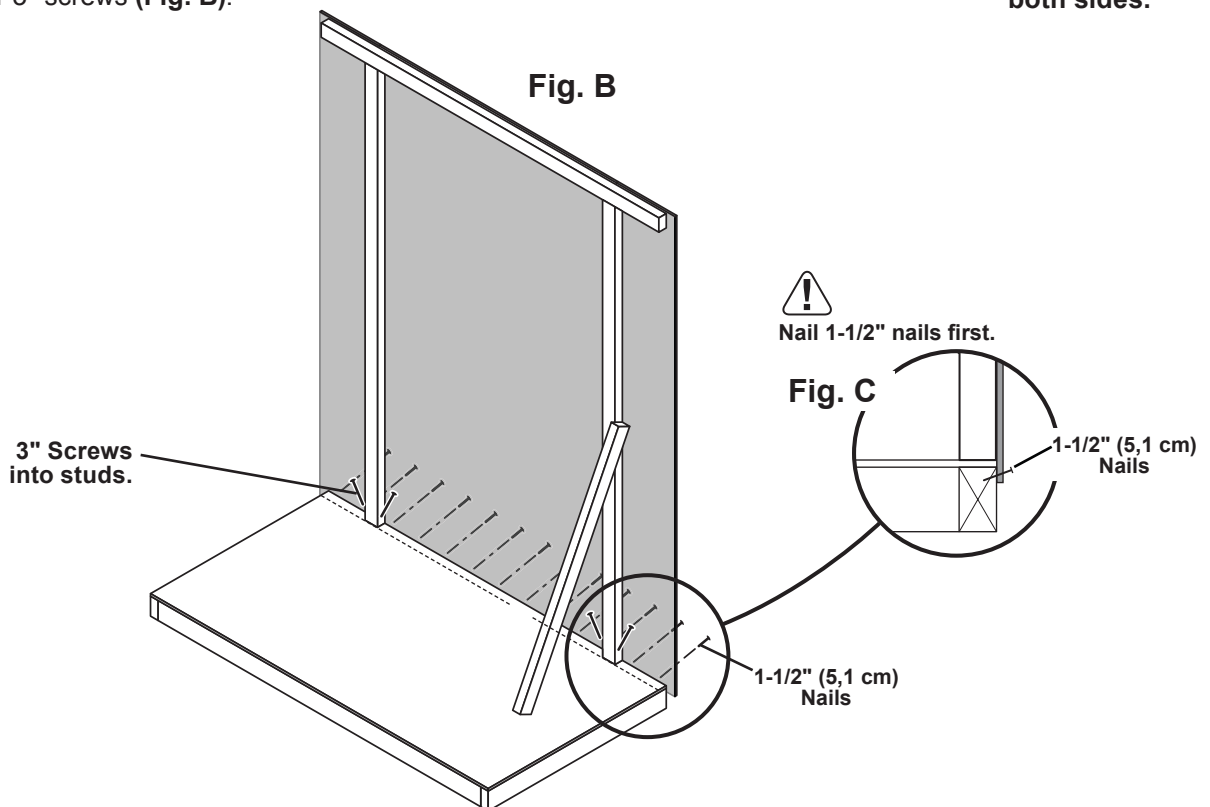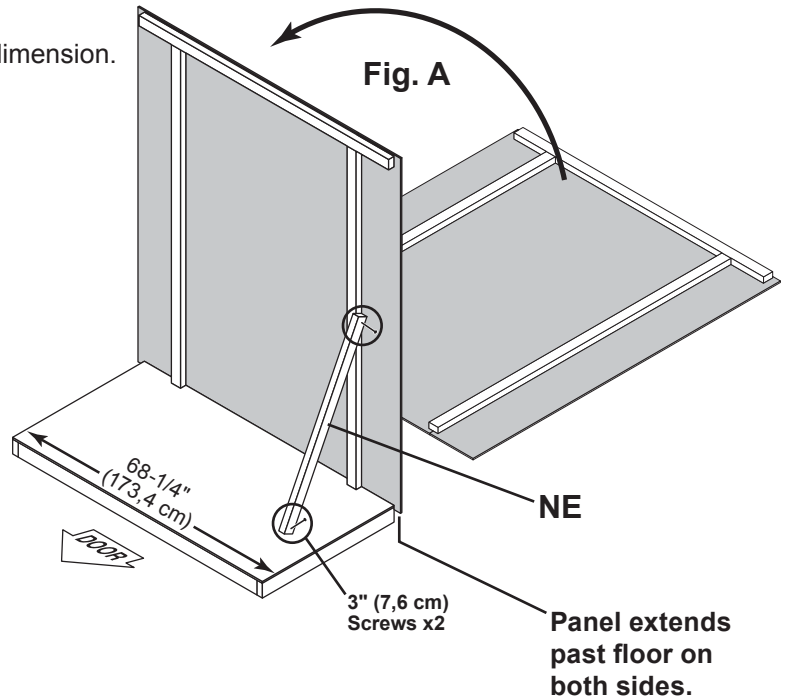

FRONT WALL INSTALLATION

PARTS REQUIRED:

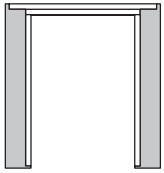

Front Wall Assembly

x1 **OO** TEMPORARY
1-1/4 x 2-1/2 x 69" (3,2 x 7,6 x 175,3 cm)

x6 3" (7,6 cm)

x4 1-1/2" (3,8 cm)






✓ BEGIN

- Center front wall assembly on the 68-1/4" floor dimension.
Panel will extend about 1-1/2" on both sides.
Use (1) **OO** as a temporary brace.
Secure **OO** with two 3" screws (**Fig. A**).


- Nail lower edge of panel to floor frame using 1-1/2" nails 6" apart.
Angle nail to hit floor frame (**Fig. B, C**).

- Secure studs to floor frame using 3" screws (**Fig. B, C**).

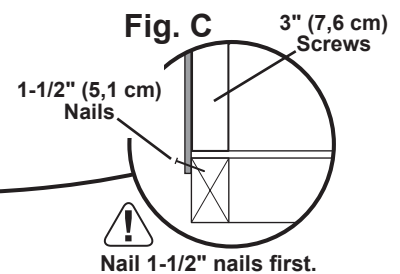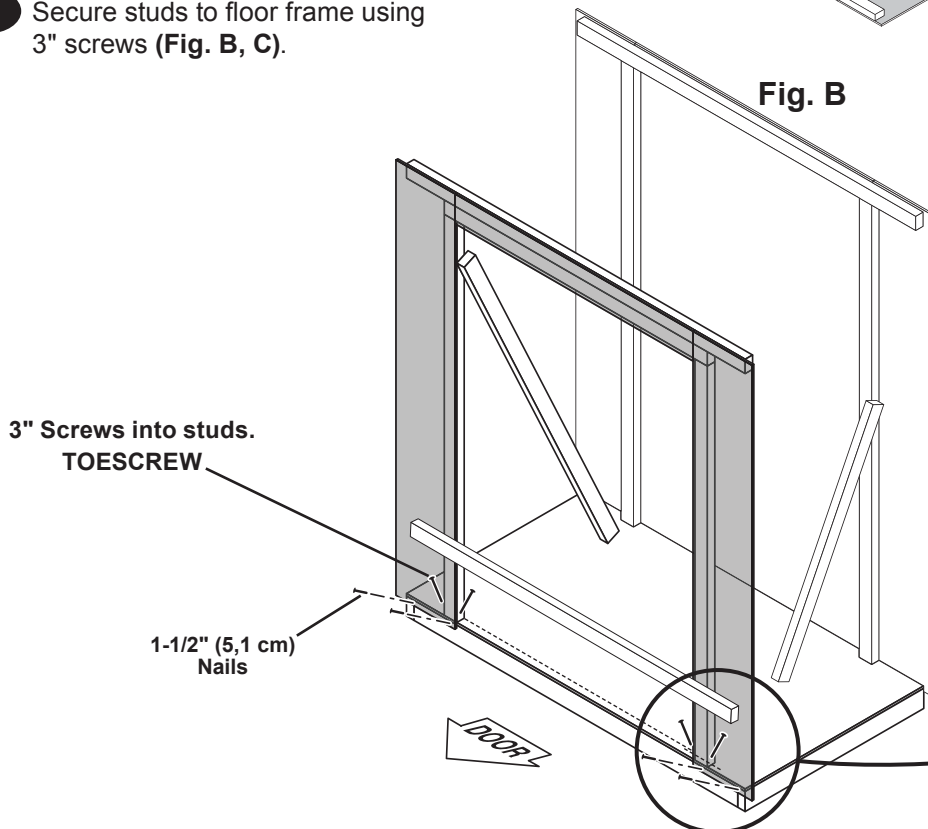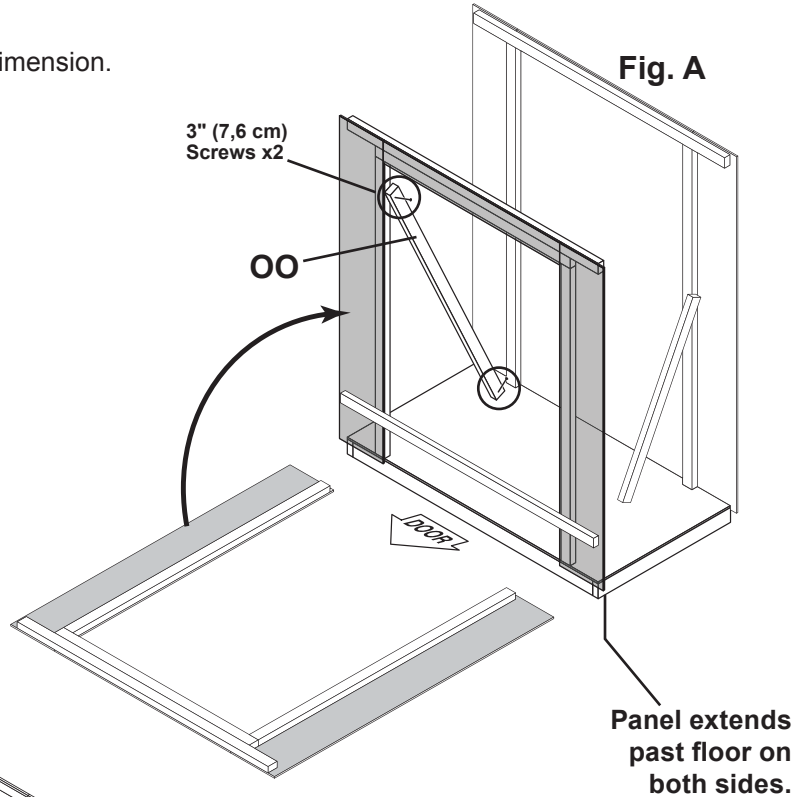

TOOL HOOKS

PARTS REQUIRED:

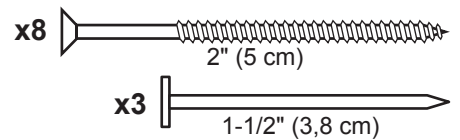


- 1 Position **Tool Hooks** on back wall stud at 60" above floor (**Fig. D**).

You may install Tool Hooks higher or lower to accommodate long-handle tools.



Secure using eight 2" screws into back wall stud (**Fig. D**).

Fig. C

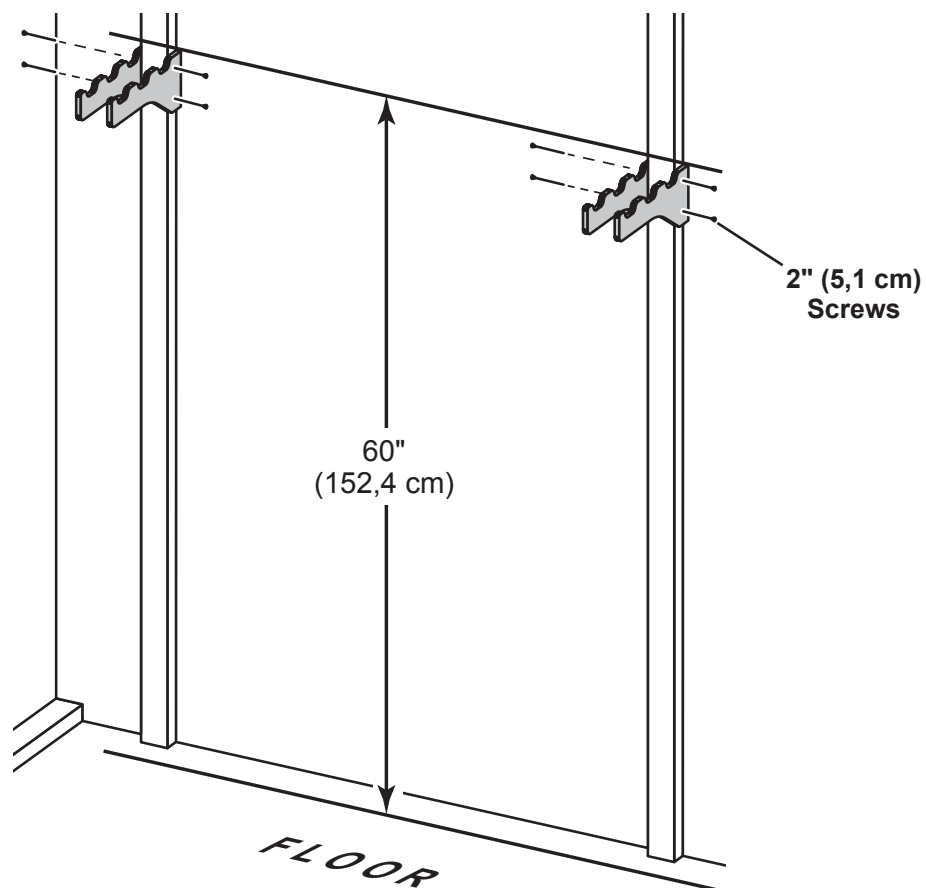


SIDE WALL INSTALLATION

PARTS REQUIRED:

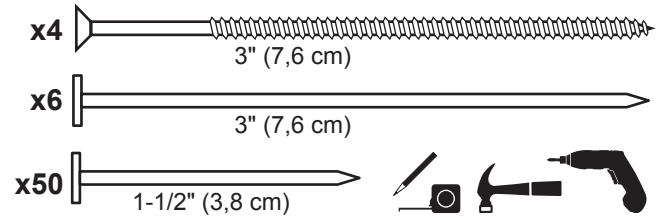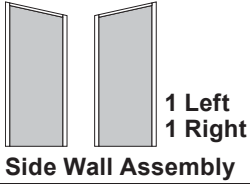

- 1 Set RIGHT side wall on floor (**Fig A**). You may have to raise the wall to make sure side trims are flush to front panel (**Fig. B**) and back panel edges (**Fig. C**). Secure using one 3" screw through side wall trim into front and back wall 2 x 3" top plates as shown (**Fig D**).
- 2 Secure front and back walls to side wall trim using 1-1/2" nails (**Fig D**) spaced 6" apart.
- 3 Secure bottom plate to floor frame using 3" nails.

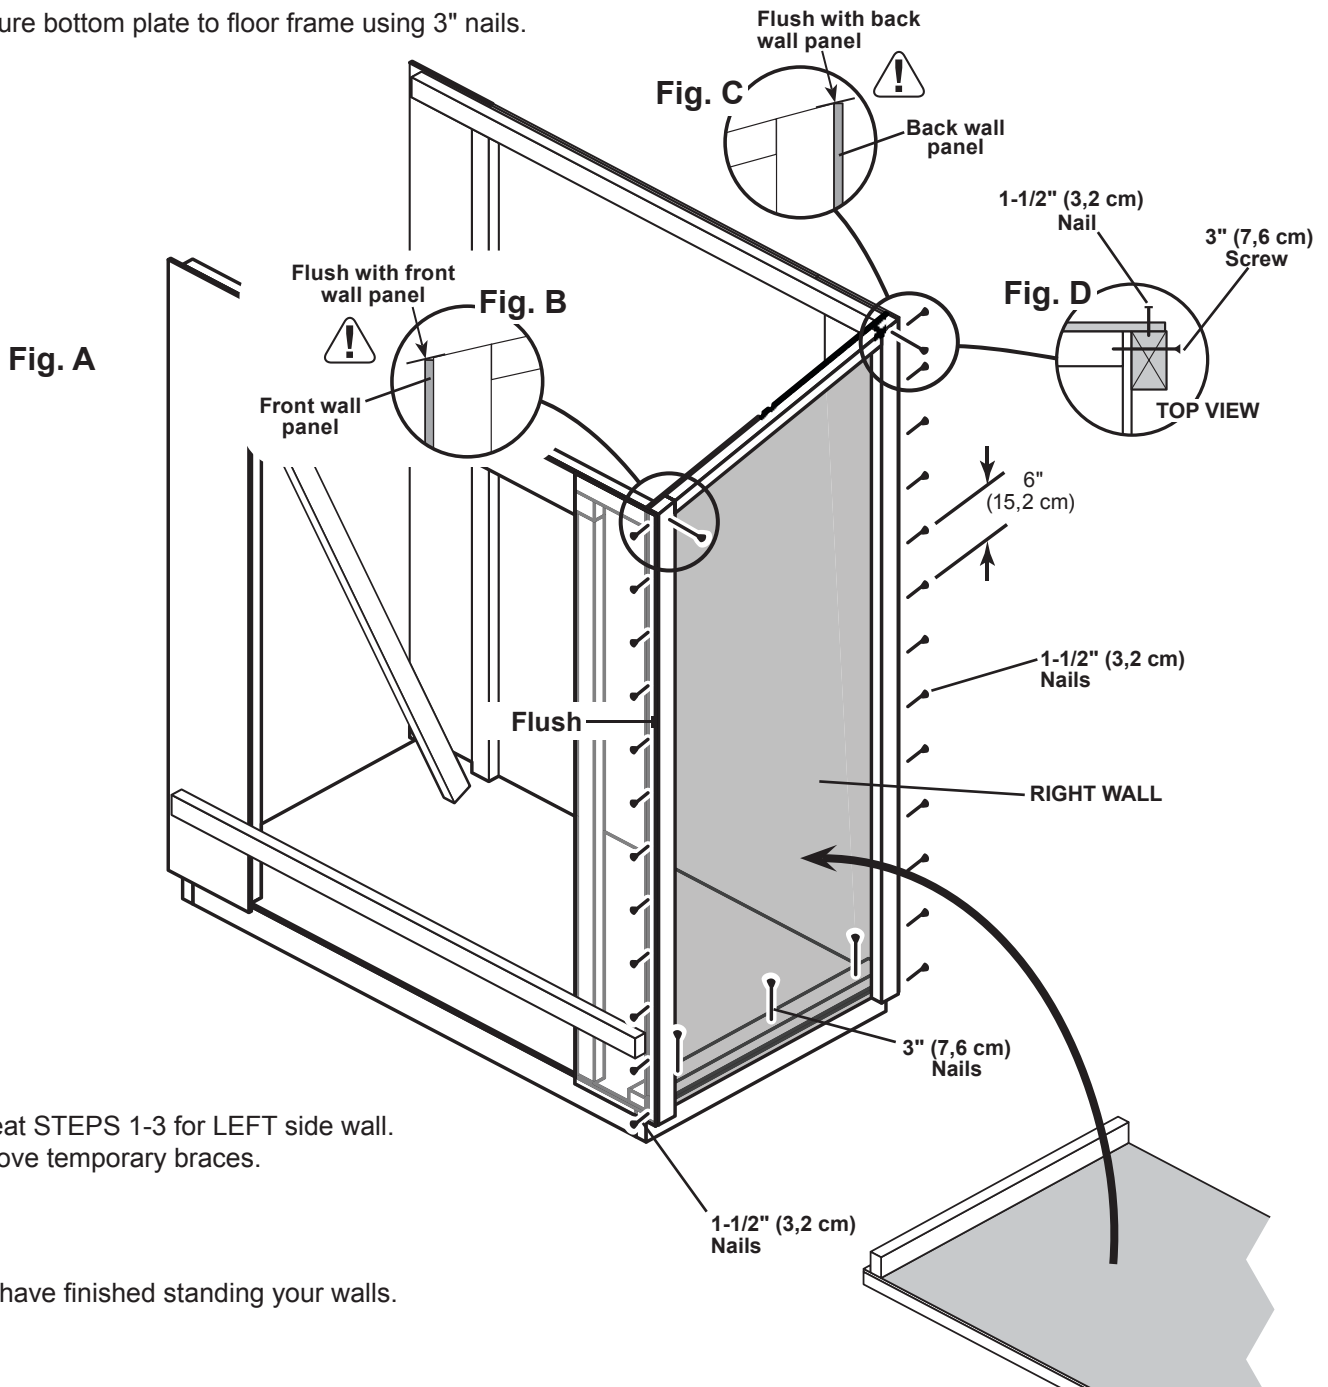

- 4 Repeat STEPS 1-3 for LEFT side wall. Remove temporary braces.

- 5 You have finished standing your walls.


ROOF PANEL UNIT




x1
7/16 x 24 x 40-1/2"
(1 x 61 x 104,1 cm)



x1
7/16 x 48 x 40-1/2"
(1 x 122 x 104,1 cm)


x12  1-1/4" (3,2 cm)

x1  **OY**
2 x 3 x 72" (5,1 x 7,6 x 182,9 cm)




BEGIN

- Place 24" x 40-1/2" roof panel flush along edge and end of **OY** with grid lines up (**Fig. A**). Secure using 1-1/4" screws spaced 6" apart along edge.

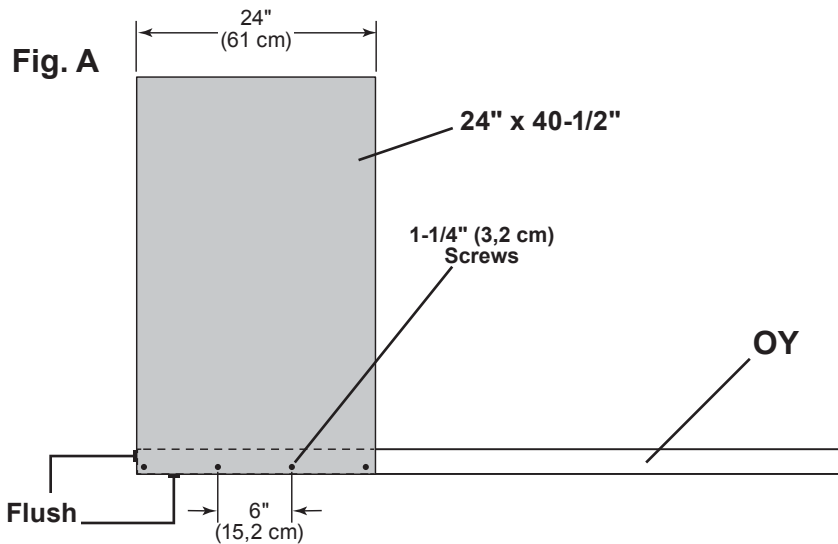


- Place 48" x 40-1/2" roof panel flush with installed panel and along edge of **OY** with grid lines up (**Fig. B**). Secure using 1-1/4" screws spaced 6" along edge.

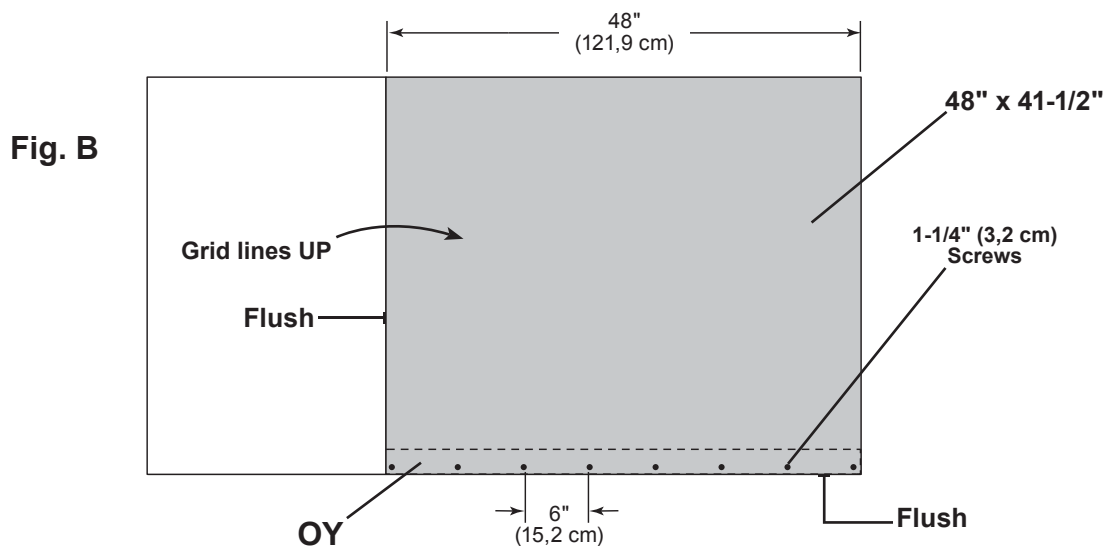

FINISH




- You have finished your roof panel unit.



ROOF

PARTS REQUIRED:

Roof Panel Unit

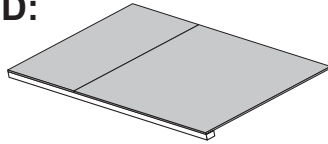


✓ BEGIN

- 1 Set **GPH** between side wall panel notches as shown (**Fig. A**).


GPH should be flush with top of side walls (**Fig. A**).

Attach with two 3" screws through wall trim into each end of **GPH** (**Fig. A**).

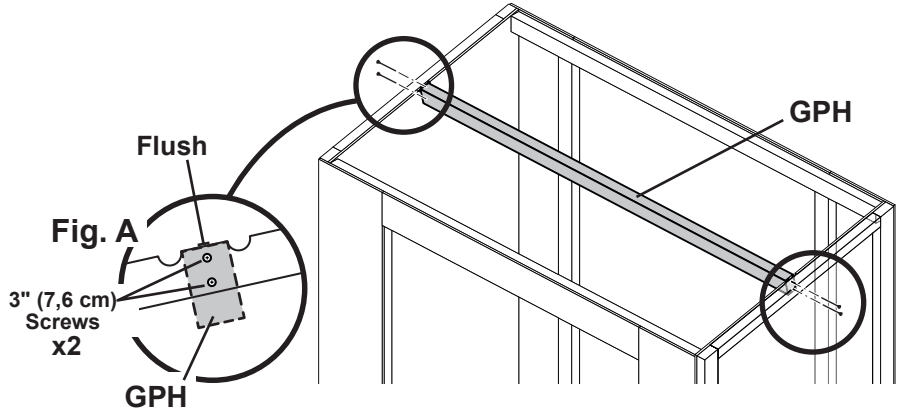

- 2 Center roof panel unit onto top of shed. Soffit overhang **OY** will be flush to front wall panels (**Fig. C**) and side wall trim (**Fig. B**).

Make sure back wall is flush with roof panel (**Fig. D**).

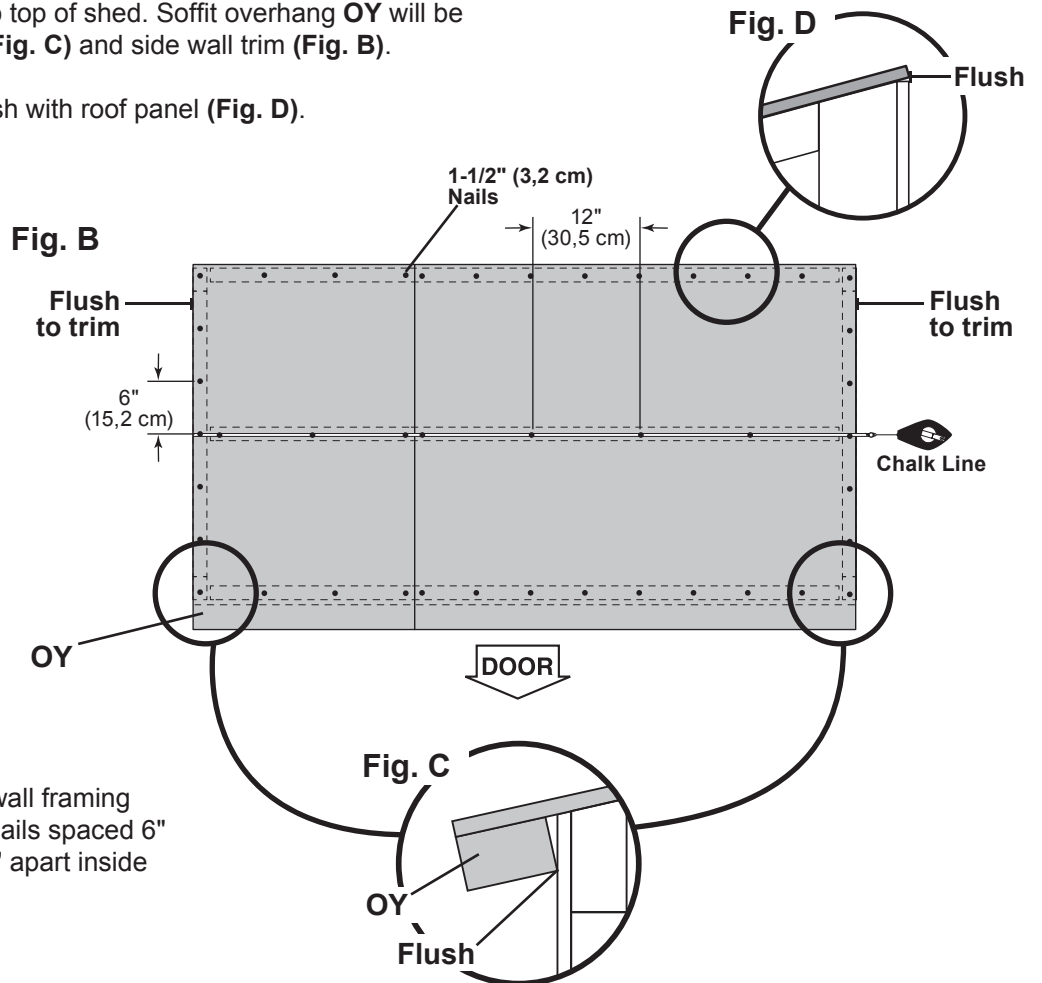


- 3 Secure roof panel unit to wall framing and to **GPH** using 1-1/2" nails spaced 6" apart along edges and 12" apart inside panel (**Fig. B**).


FINISH

- 4 You have finished installing your roof unit.

OVER DOOR TRIM

PARTS REQUIRED:

x1 **ZB** 
19/32 x 2-1/2 x 55" (1,5 x 6,3 x 139,7 cm)


x6 
2" (5,1 cm)



✓ **BEGIN**

1 Center **ZB** over door opening and tight up to **OY**.

Attach with 2" finish nails (**Fig. A**, **Fig. B**).

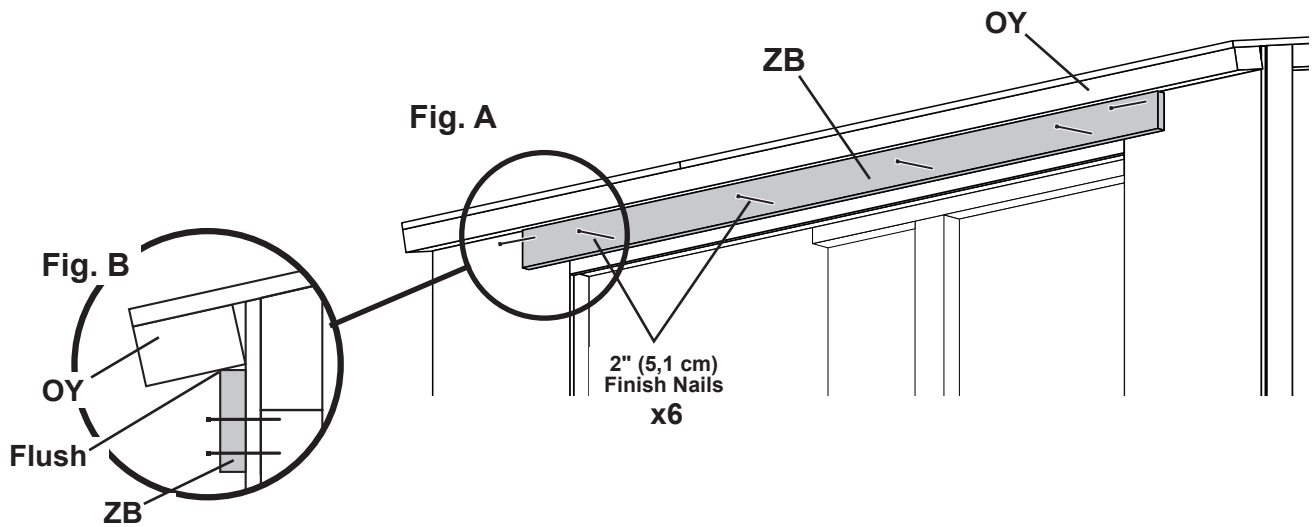


FINISH


2 You have finished installing your over door trim.

DOORS

PARTS REQUIRED:

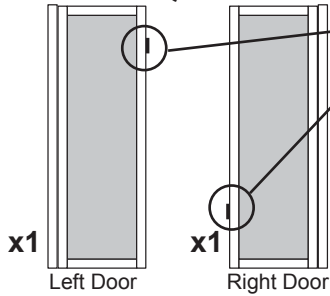

HINT:
Look for 3/8" SPACER
attached to doors.




x1 **OO** TEMPORARY SUPPORT
1-1/4 x 2-1/2 x 69" (3,2 x 7,6 x 175,3 cm)

x1 **NE** TEMPORARY SUPPORT
2 x 3 x 45-1/2" (5,1 x 7,6 x 115,6 cm)




✓ BEGIN

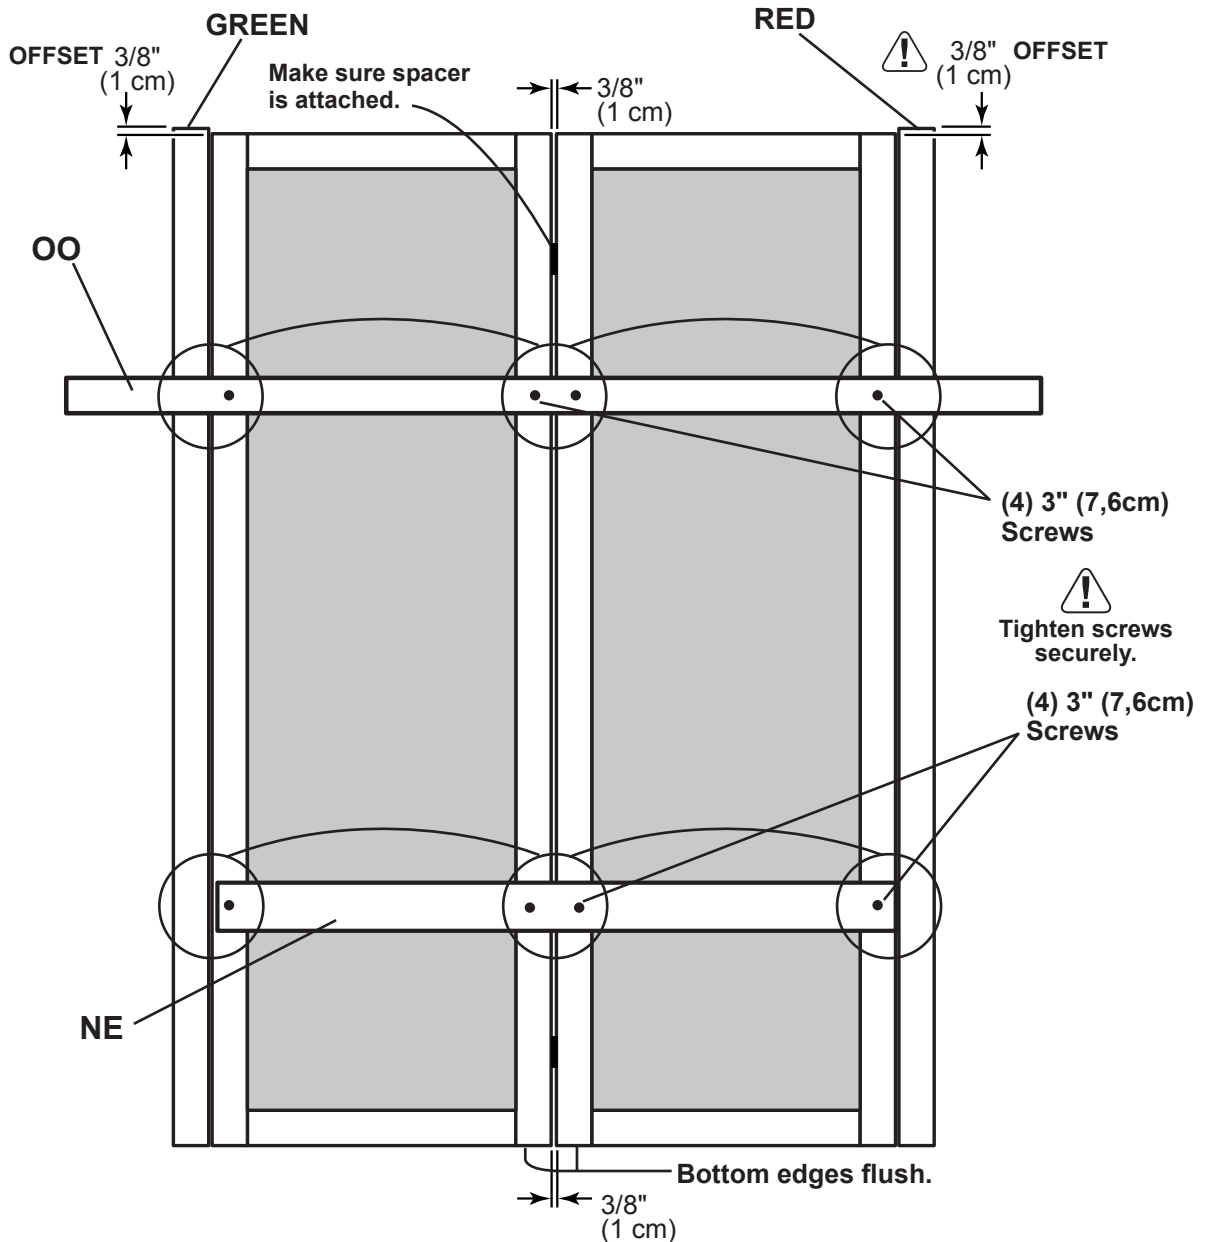

- 1 Orient parts as shown on flat surface. 3/8" offset is to top. Look for red (right) and green (left) on hinge board.
- 2 Attach temporary supports **OO** and **NE** with 3" screws as shown. Tighten securely.



DOORS

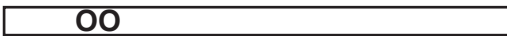PARTS REQUIRED:


x1 
 1-1/4 x 2-1/2 x 69" (3,2 x 7,6 x 175,3 cm)
 TEMPORARY SUPPORT

x2  3" (7,6 cm)
 x10  2" (5,1 cm)




3 Attach temporary support **OO** as a ledger board 72" down from bottom of over door trim (**Fig. A**). Doors will rest on **OO** (**Fig. A**). Secure **OO** using two 3" screws.

4 Center doors on over door trim at center mark as shown (**Fig. B**).
 ⚠️ Check door hinge board is flush to over-door trim.

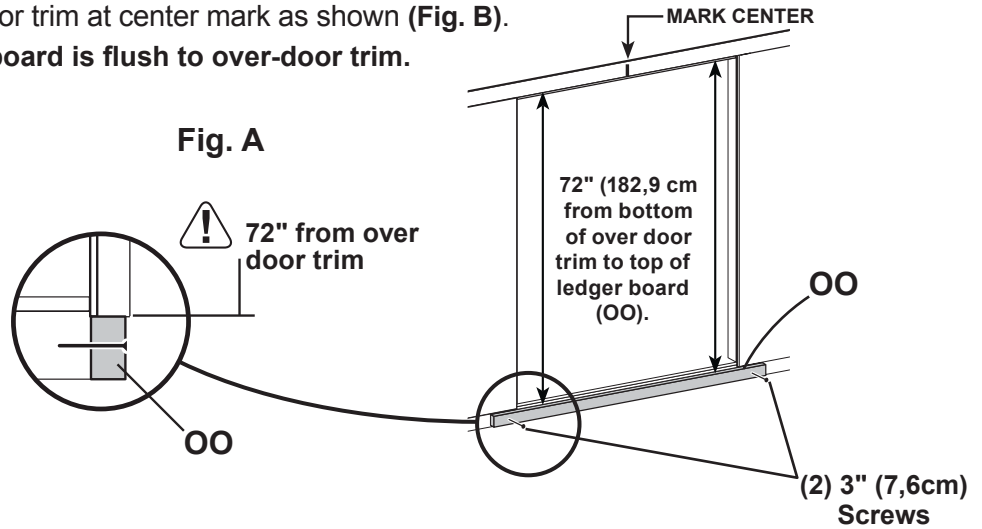

5 Screw hinge boards into wall studs and floor using 2" screws as shown.
 ⚠️ Make sure screws go into framing and floor (**Fig. C, D**).


6 Remove temporary supports and check doors open properly.

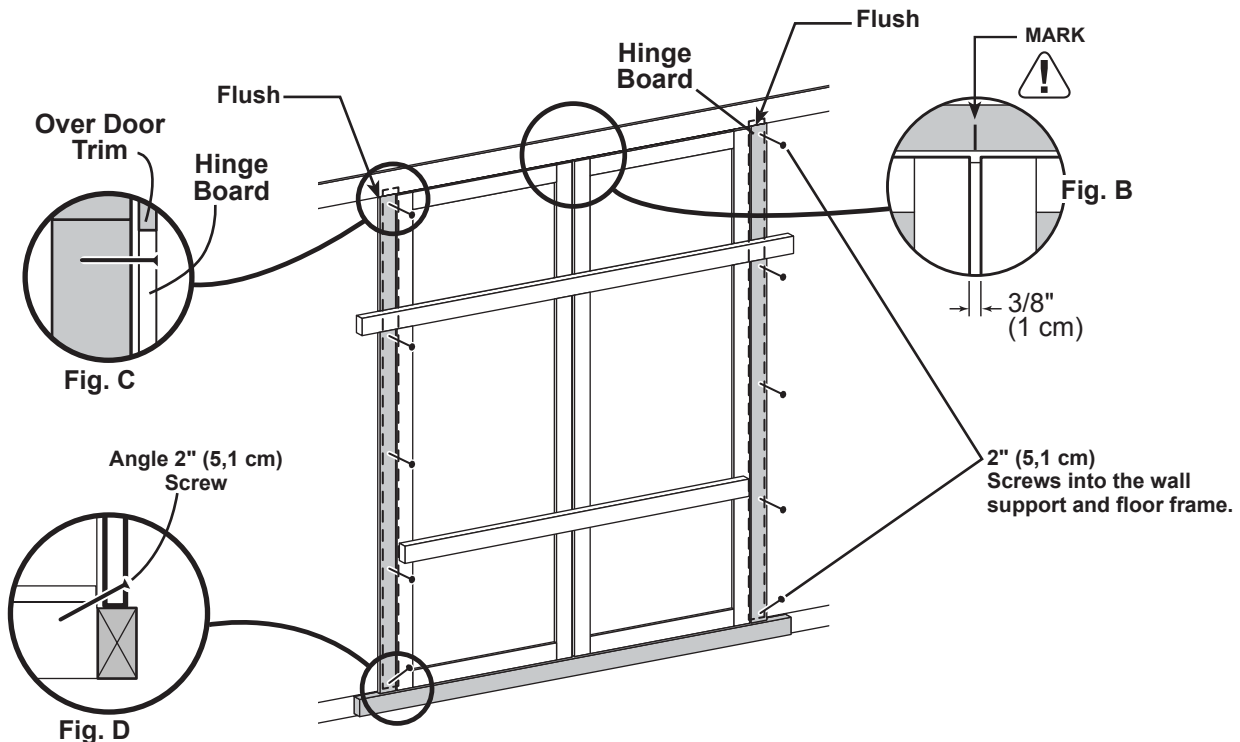


DOORS


PARTS REQUIRED:

x4 **BEA**
19/32 x 2-1/2 x 19" (1,5 x 6,3 x 48,3 cm)

x48 
3/4" (1,9 cm)



- 7 Reinforce the door trim using 3/4" screws through door panel into trim (**Fig. A**).
Locate screws as shown (**Fig. B**). Use two screws at seams.
- 8 Secure top and bottom horizontal door rails **BEA** with four 3/4" screws from behind (**Fig. B**). Use measurement shown.

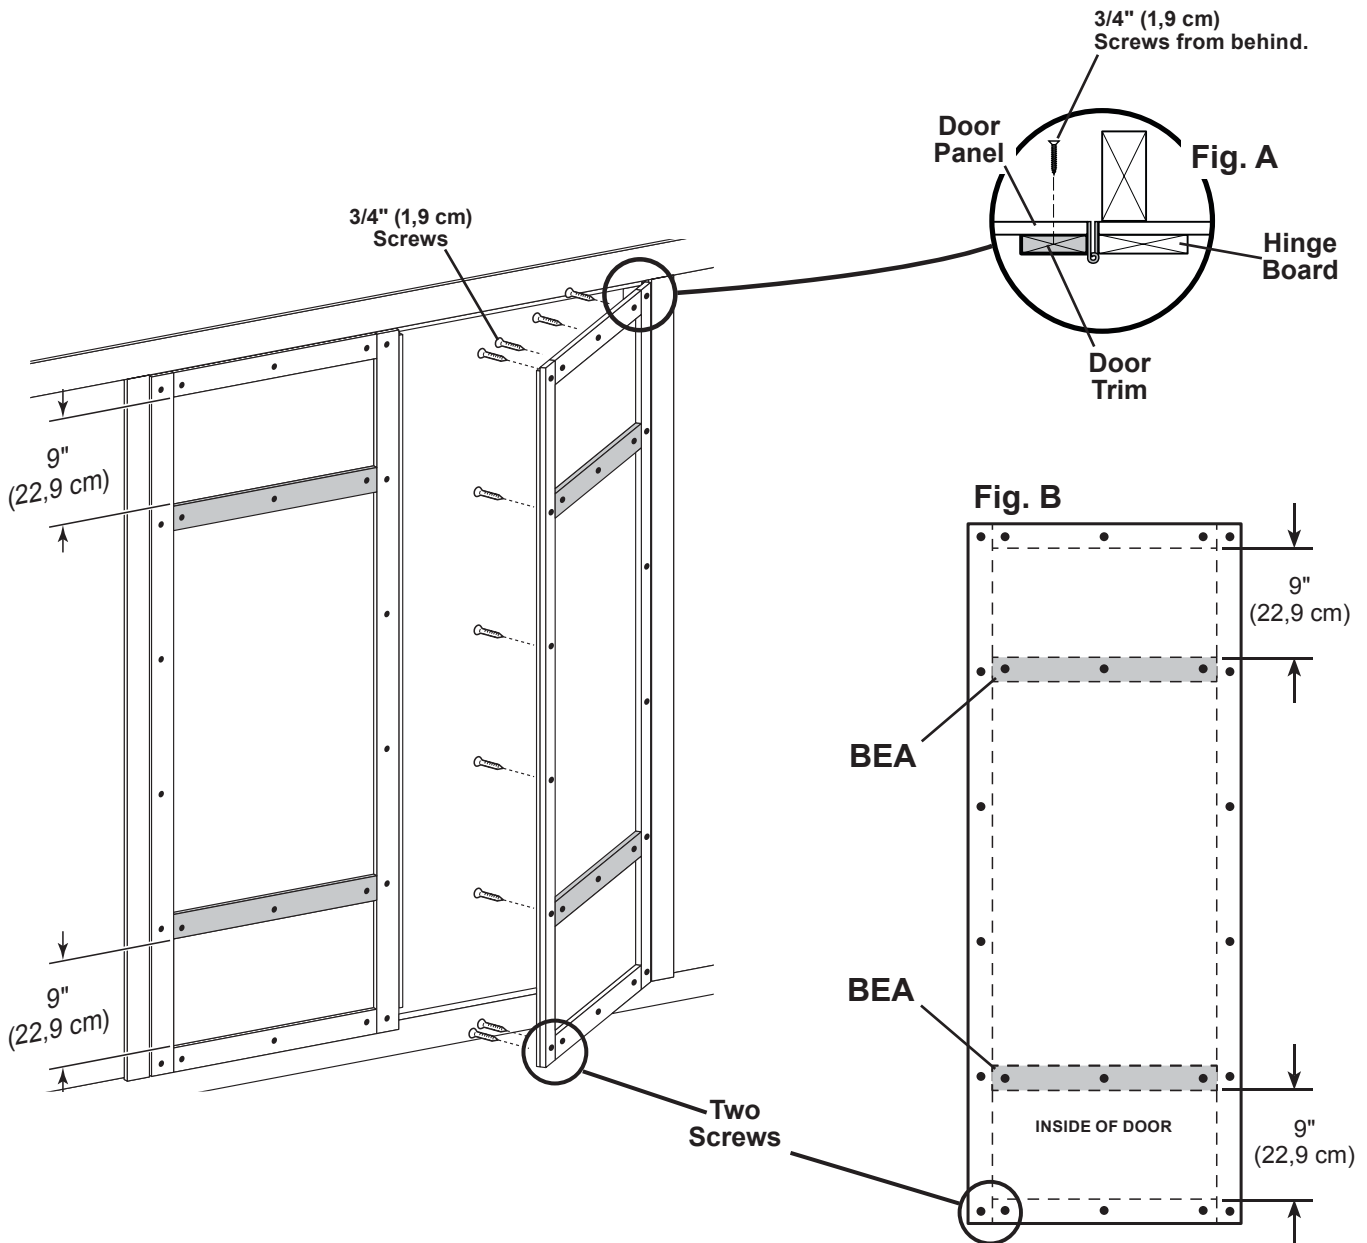


9 You have finished installing your doors and door trim.

DOOR WEATHERSTRIP

PARTS REQUIRED:

x2 **OO**
 1-1/4 x 2-1/2 x 69" (3,2 x 7,6 x 175,3 cm)

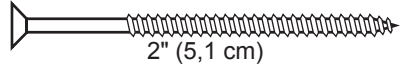x12  2" (5,1 cm)




✓ BEGIN

- 1 With left door closed, center a weatherstrip **OO** vertically on the left door in the door opening (**Fig. A**). **OO** will offset the left door 1" OUT past the door trim 1" (**Fig. B**).
- 2 Secure **OO** using six 2" screws through outside trim into **OO** (**Fig. B**)
- 3 On right door center **OO** vertically in door opening (**Fig. A**). **OO** will offset the right door 1" in from the door trim (**Fig. C**).
- 4 Secure **OO** using six 2" screws through outside trim into **OO** (**Fig. C**).





FINISH

- 5 You have finished installing your door weatherstrips.

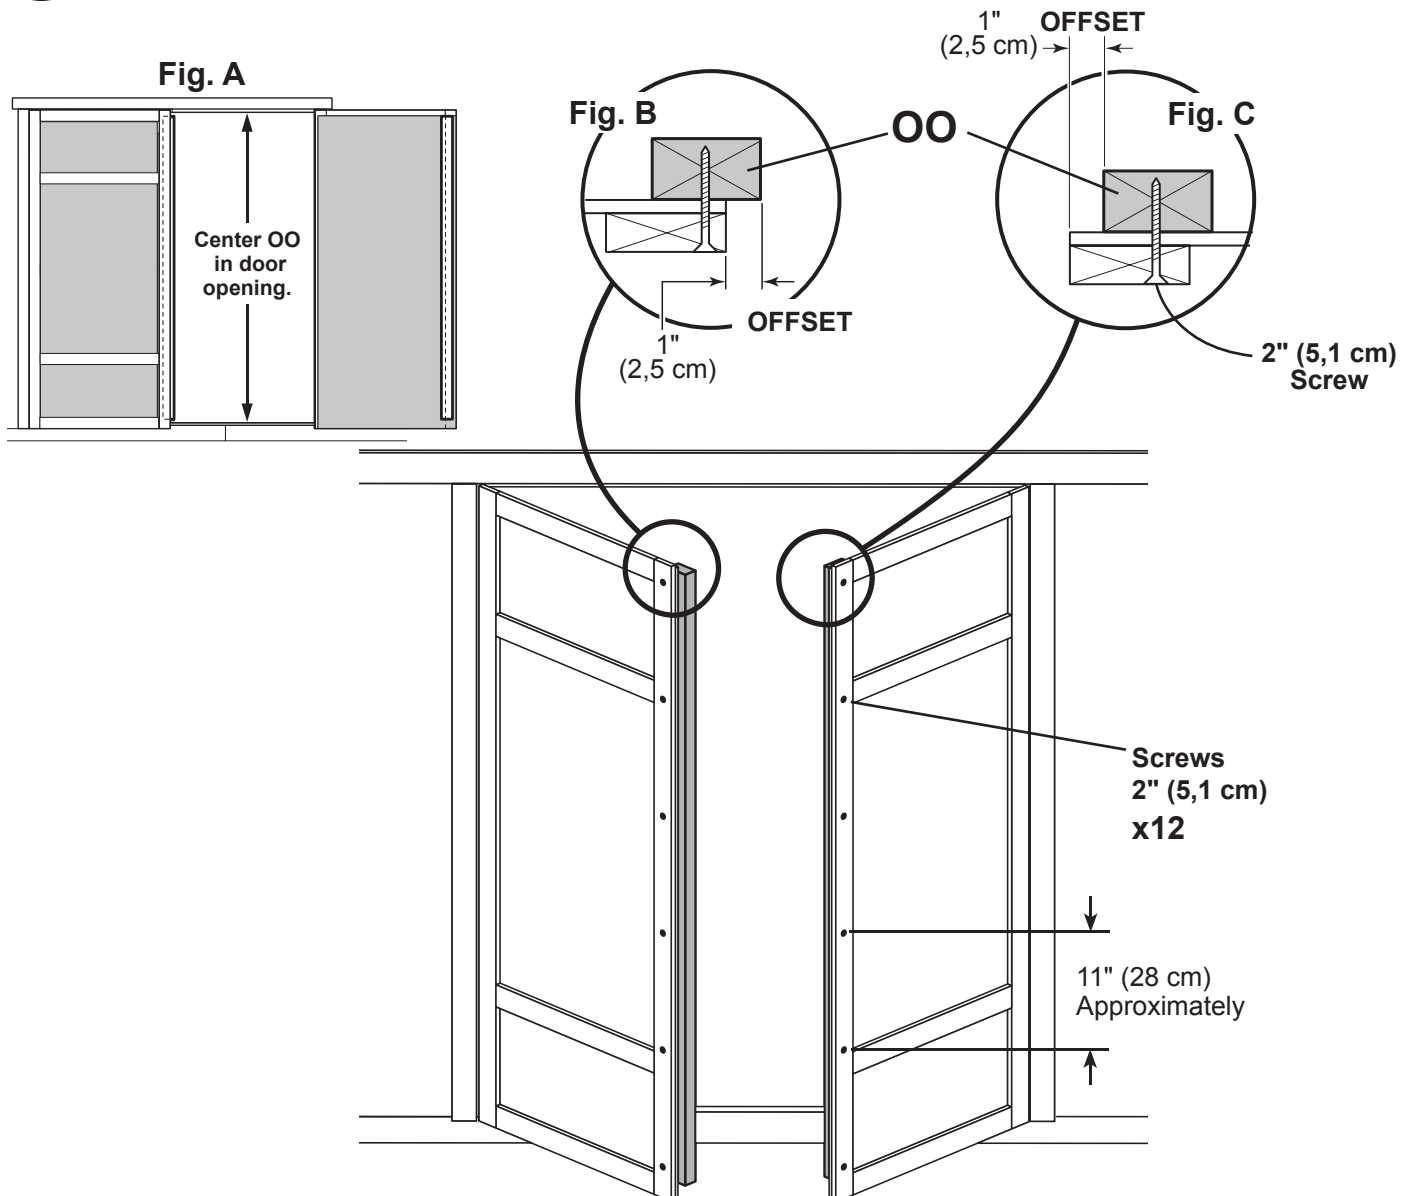

DOOR HARDWARE

PARTS REQUIRED:

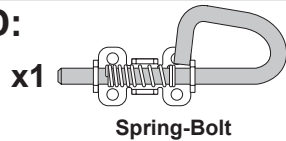



✓ BEGIN

1 Mount spring bolt 1/2" down from top of **OO** on left door using 1" screws as shown (Fig A).

2 Install hasp on right door and latch on left door. Bottom edge of hasp is 35-1/2" (90 cm) up from bottom edge of door trim. Measure and mark locations and install with 3/4" screws as shown (Fig B).



FINISH

3 You have finished mounting your door hardware.

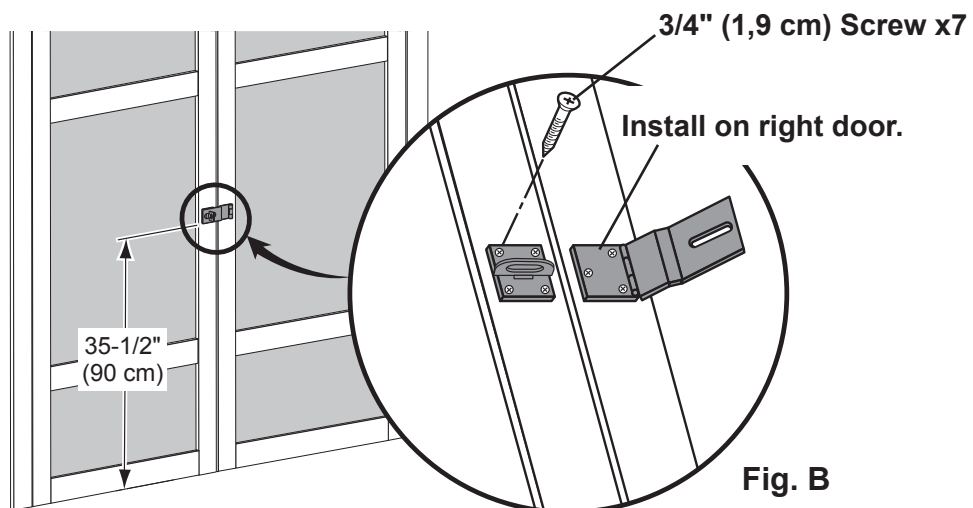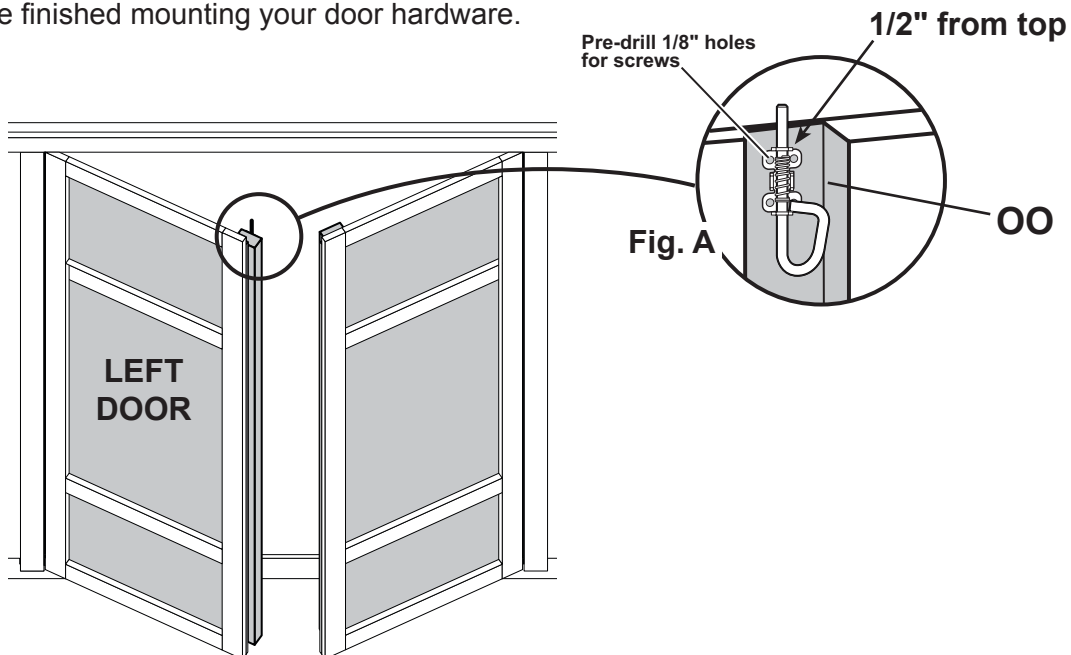

ACCESSORY BOARD

PARTS REQUIRED:




✓ BEGIN

- 1 Position **NE** between back wall studs at a chosen practical height from floor (**Fig. A**).
- **NOTE:** This will allow you to hang additional items at the height you want.

Secure using 3" screws toe-screwed into back wall studs as shown.

- 2 From outside of back wall install three 1-1/2 nails into **NE**.

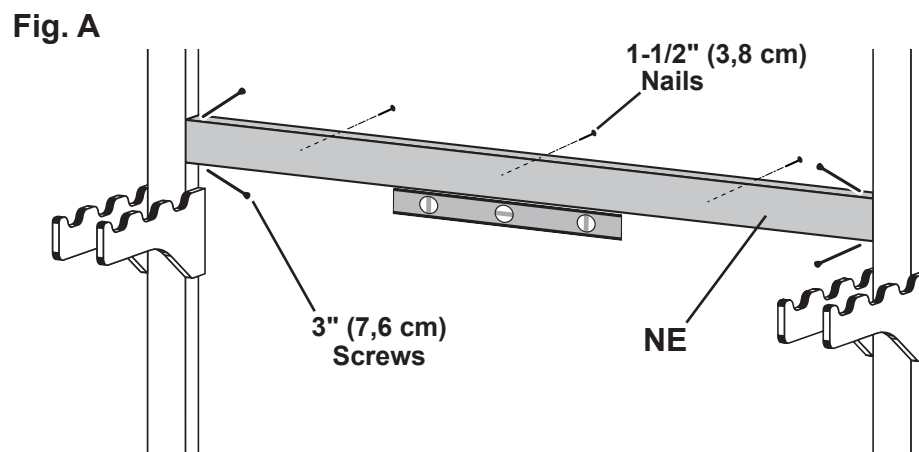





FINISH


- 3 You have finished your accessory board.

TRIM

PARTS REQUIRED:


- x1  3/8 x 2-1/2 x 72" (1 x 6,3 x 182,9 cm)
- x1  **RIGHT** 3/8 x 2-1/2 x 40-15/16" (1 x 6,3 x 104 cm)
- x1  **LEFT** 3/8 x 2-1/2 x 40-15/16" (1 x 6,3 x 104 cm)

x14  2" (5,1 cm)

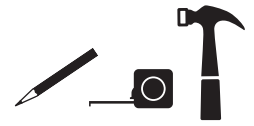


✓ BEGIN

- 1 Position front 2-1/2" x 72" fascia board centered on front soffit with **primed side out**, flush along top edge of roof panels as shown (Fig. B). Secure using 2" finish nails into front wall frame.

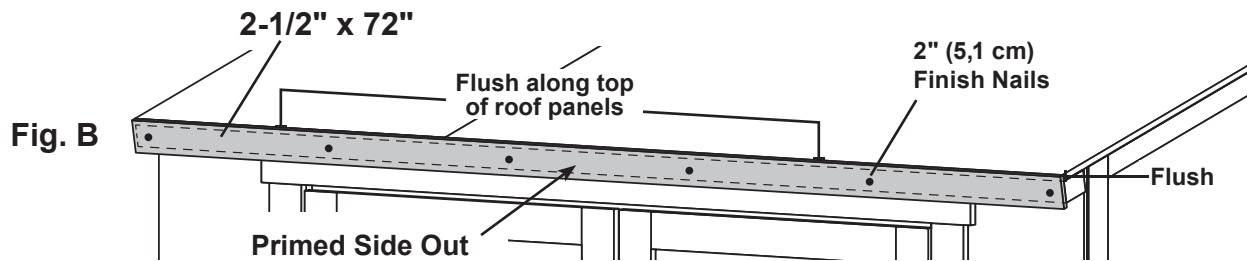

- 2 Position 2-1/2" x 41-15/16" side trim with primed side out. Side trim is flush with back of roof and wall panels and flush along top of roof panel as shown (Fig. C, Fig. D). Secure using 2" finish nails into soffit, side wall frame and wall 2" x 3" trim as shown.

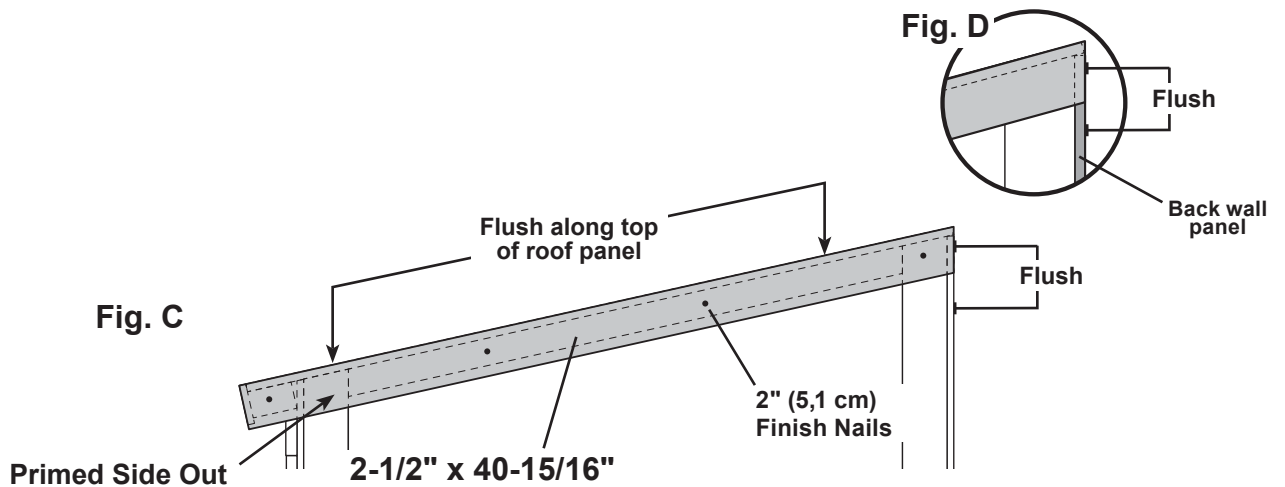

- 3 Repeat STEP 2 on opposite side.



FINISH

- 4 You have finished installing your fascia and trim.

PAINT & CAULK

- NOT INCLUDED -



- Use acrylic latex caulk that is paintable. Caulk at all horizontal and vertical seams, between the trim and walls, and all around the door trim.
- Use a high quality exterior acrylic latex paint. When painting your building, there are a few key areas that can be easily overlooked that must be painted:
 - Bottom edge of all siding and trim
 - Inside of doors and all 4 edges

Note:

Prime all un-primed exterior wood before painting.
(Follow directions provided by manufacturer.)

DRIP EDGE


- NOT INCLUDED -



You must install drip edge to validate warranty.



- Install drip edge on the front side first (**Fig. A**), then install felt.
- Install drip edge on sides of roof over top of felt (**Fig. A**).
- Install drip edge on back of roof after shingles are installed (**Fig. B**).
- Do not use nails on side of drip edge that hangs over side of building.
- Only nail top of drip edge as shown.

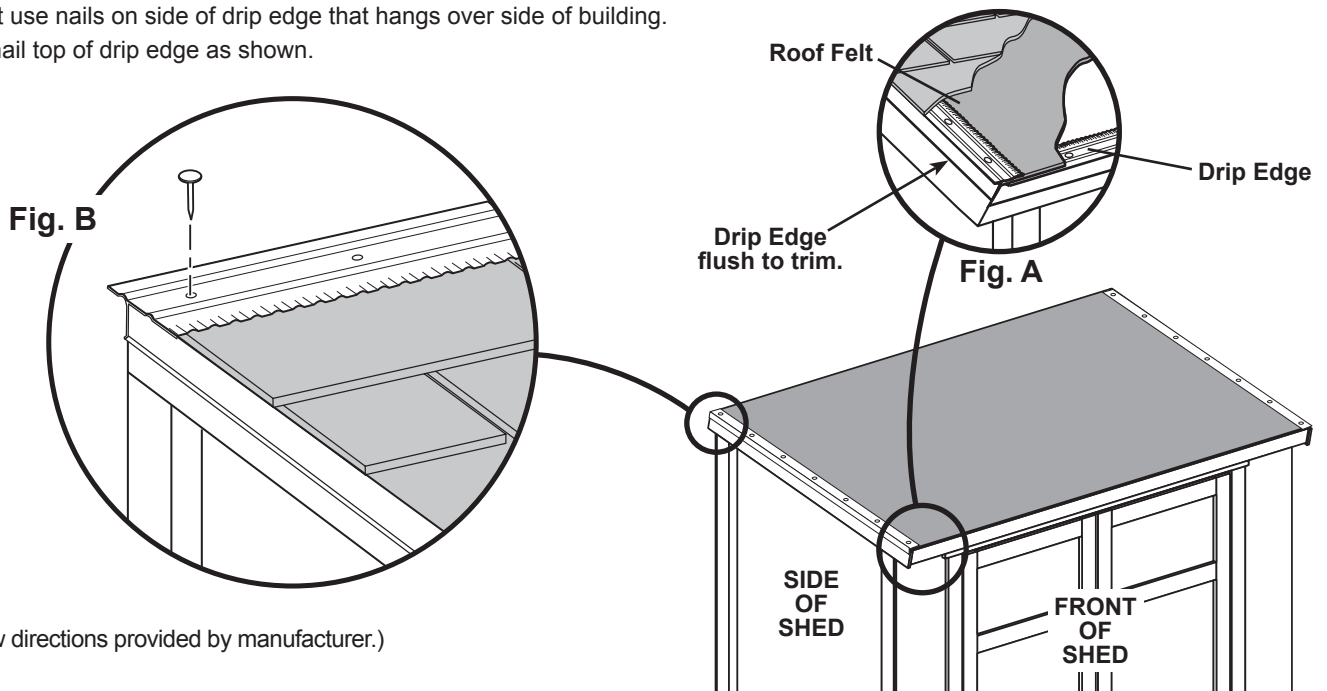


(Follow directions provided by manufacturer.)

ROOF FELT


- NOT INCLUDED -

- Install felt flush to all roof edges overlapping 3". Use minimal amount of roofing nails to hold in place.

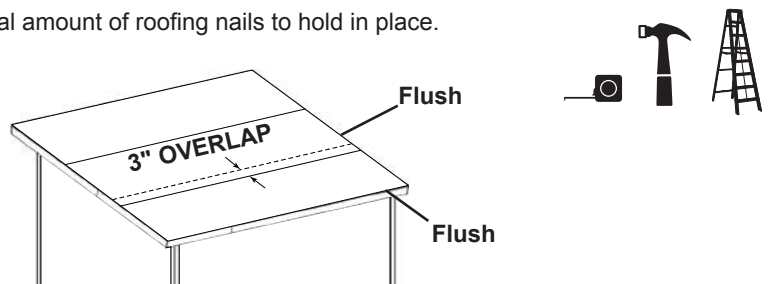


SHINGLES - NOT INCLUDED -

• Follow directions provided by manufacturer and these instructions.

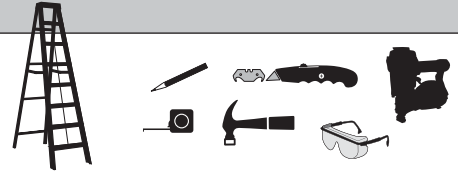


! Familiarize yourself with a 3-Tab Shingle.

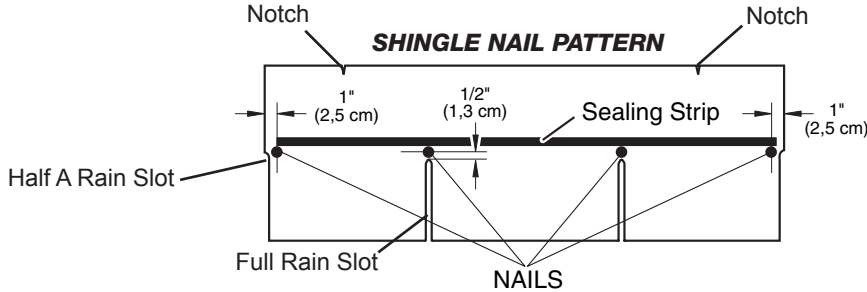


! NEVER DRIVE FASTENERS INTO OR ABOVE SEALING STRIPS.

✓ BEGIN

1 *Begin at the front of roof and work your way up to the back of roof:*
Install first starter row upside down, color up and flush to drip edge at bottom of roof panel. Use (4) nails per shingle. Starter row must be straight and level all the way across with lower edge of roof deck.

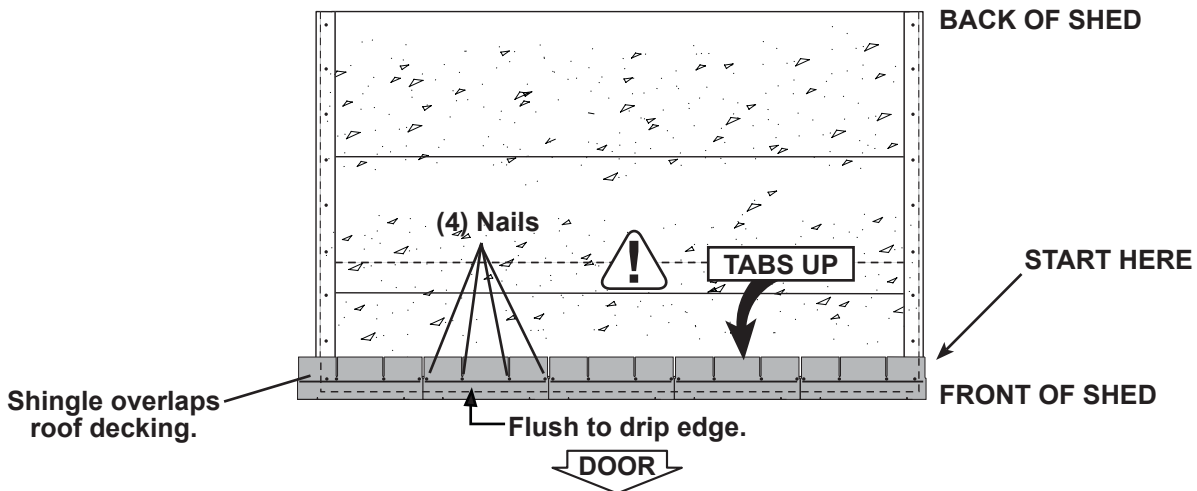


2 Begin where indicated on image below, install first row of shingles with notch flush with drip edge.

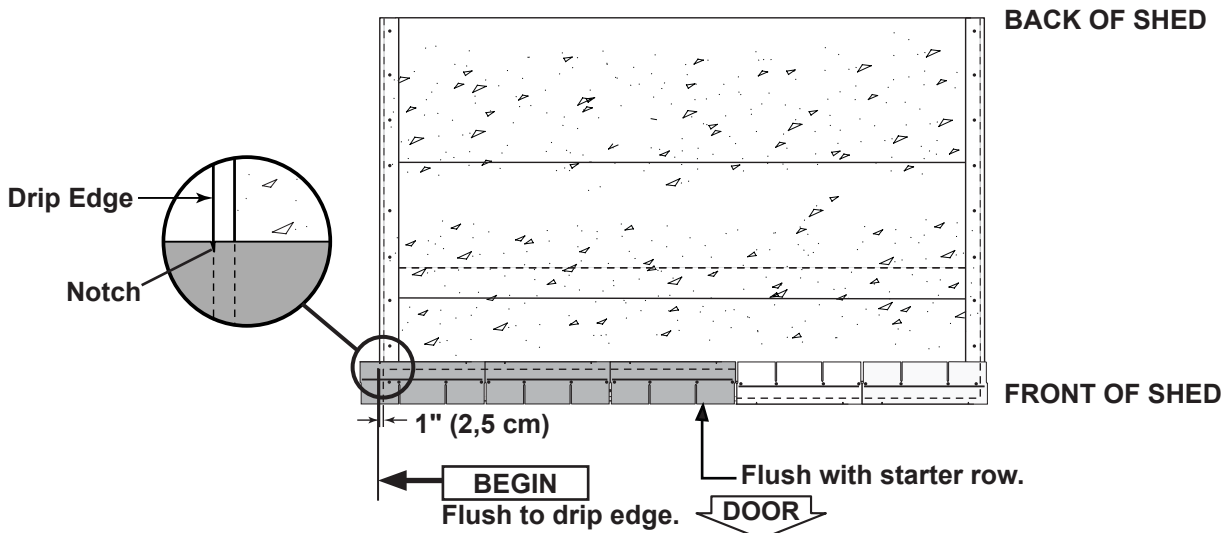


SHINGLES

continued...


- 3** Install second row of shingles flush at top of first row's rain slots. Ensure flush to drip edge at front side, stagger each row.

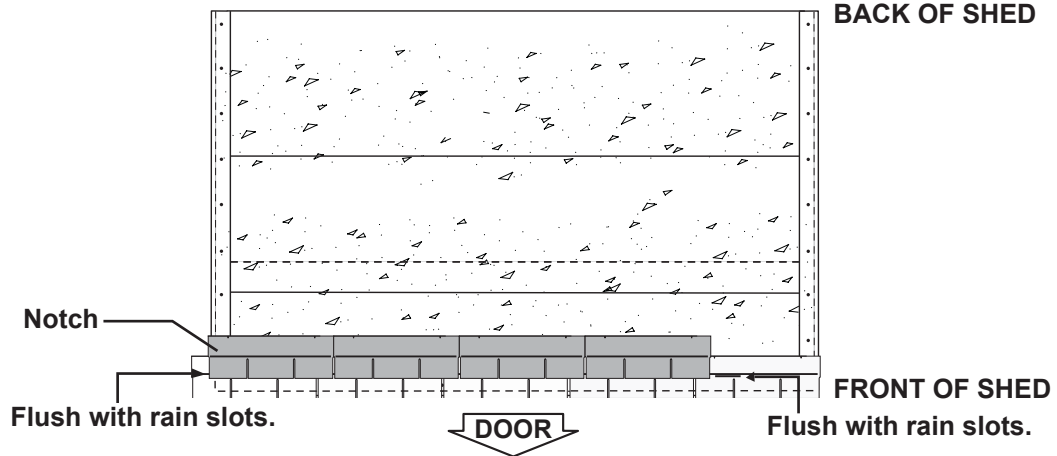

- 4** Continue installing rows of shingles by staggering at front.

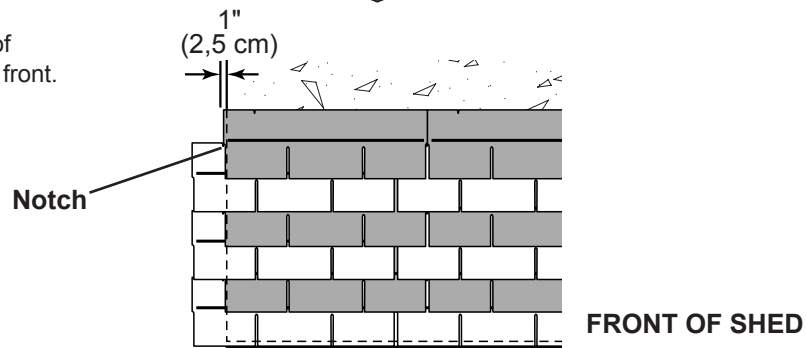


- 5** Continue installing rows of shingles to the back of the shed. At the back edge of the shed make sure there is a maximum of 5" or less to the rain slot, as shown below. If shingles overlap at back roof edge cut to roof edge with a utility knife.

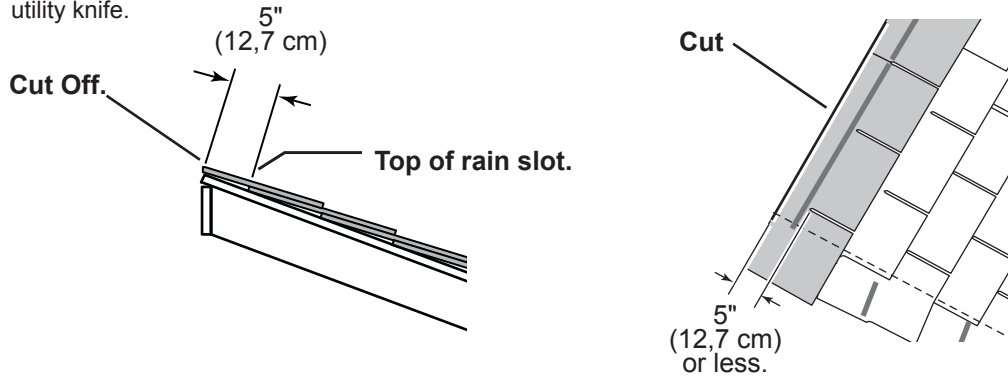


- !** • If more than 5" to rain slot you must install another row of shingles.

- 6** Using your shingle hooked blade carefully cut shingles along chalk line.

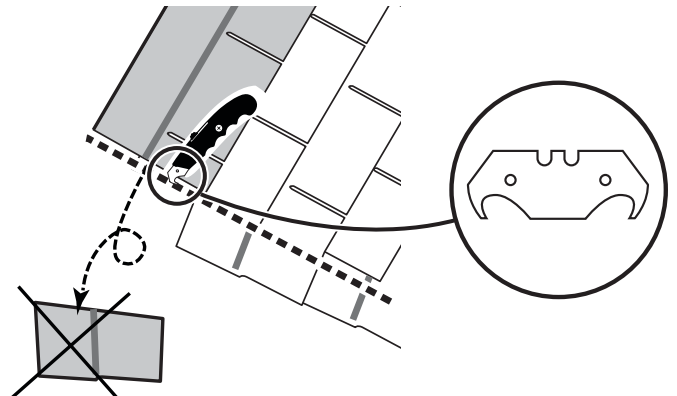


SHINGLES - DRIP EDGE


- 7 Install drip edge over top shingle row with 1" overhang over roof edge.

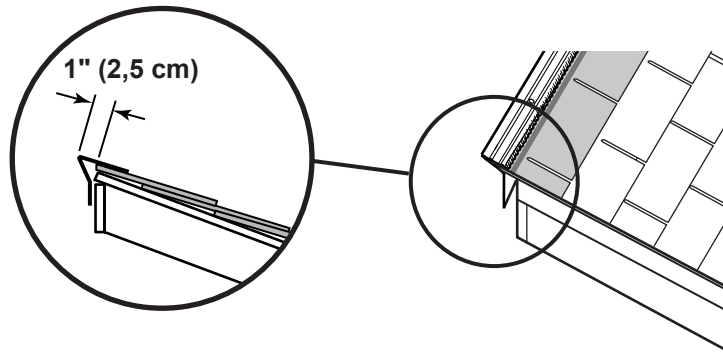

- 8 Using your shingle hooked blade carefully cut shingles on a flat surface along the rain slots, using a chalk line for reference.

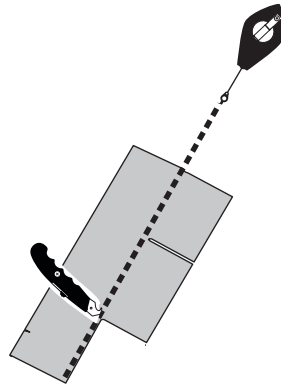

- 9 Align remaining shingles with edge of the front drip edge.

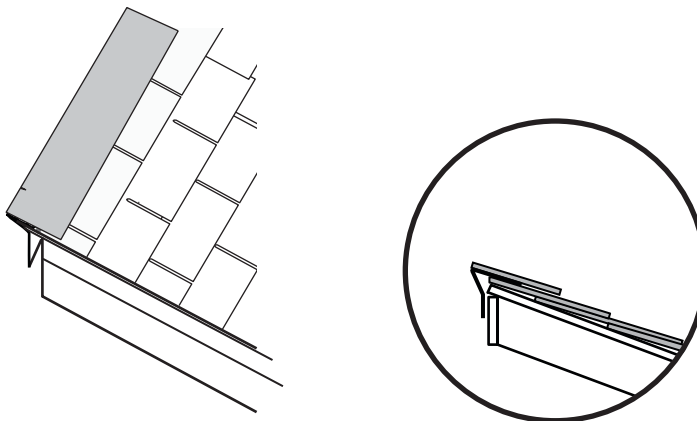

- 10 You have finished shingling your roof.

WARRANTY REGISTRATION

Please complete your warranty registration to properly validate your warranty.

Register your product online at: www.OnlineWarranty.net

LIMITED CONDITIONAL WARRANTY*

Backyard Storage Solutions, LLC warrants the following:

1. Every product is warranted from defects in workmanship and manufacturing for 1 year.
2. All accessories, hardware and metal components are warranted for 2 years.
3. All Oriented Strand Board (OSB) is warranted for 2 years
4. Siding and Trim is warranted for:
10 years: Marco Series / Solar Shed
12 years: Legacy Series
15 years: Premier Series
5. Solar Shed windows are warranted for 1 year.
6. Cedar lumber is warranted for 15 years.
7. Preserved Pine is warranted for 10 years.

Backyard Storage Solutions, LLC will repair, replace or pay for the affected part. In no event shall Backyard Storage Solutions, LLC pay the cost of labor or installation or any other costs related thereto. All warranties are from date of purchase. If a cash refund is paid on an affected part, it will be prorated from the date of purchase.

CONDITIONS

The warranty is effective only when:

1. The unit has been erected in accordance with the assembly instructions.
2. The unit has been properly shingled and painted or stained and reasonably and regularly maintained thereafter.
3. The failure occurs when the unit is owned by the original purchaser.
4. Backyard Storage Solutions, LLC has received the warranty registration card within thirty (30) days of purchase and notification of the failure in writing within the warranty period specified above.
5. Backyard Storage Solutions, LLC has had reasonable opportunity during the sixty (60) days following receipt of notification to inspect and verify the failure prior to commencement of any repair work.

REQUIREMENTS

Storage Buildings

To validate your warranty, it is necessary to properly maintain your Backyard Storage Solutions, LLC unit; shingle the roof and paint or solid-colored stain the siding using quality, 100% acrylic latex exterior product with a minimum of two (2) coats within thirty (30) days of assembly; caulk above all doors and all horizontal and vertical trim boards; paint and seal all exposed edges, sides and faces of siding/trim and OSB siding to include all exterior walls and all sides and all edges of doors.

Gazebos & Pergolas

To validate your warranty, it is necessary to properly maintain your Backyard Storage Solutions, LLC unit. This includes treating all of the exposed cedar and pine surfaces on your gazebo or pergola structure with an exterior grade wood preservative, an exterior oil-based semi-transparent stain, an acrylic latex exterior paint or an acrylic latex solid color exterior stain within 30 days of assembly and as needed thereafter to maintain your warranty.

Keep vegetation trimmed away from building and make sure siding panels and trim do not come in contact with masonry or cement. The minimum ground clearance for siding must be one half inch (½ inch) from concrete slab or two and one half inches (2 ½") from the ground when building is erected or constructed on a treated wood floor kit. Water from sprinklers must be kept off unit. In no event will Backyard Storage Solutions, LLC be responsible for any indirect, incidental, consequential or special damages nor for failure(s) that are caused by events, acts or omissions beyond our control including, but not limited to, misuse or improper assembly, improper maintenance (which eventually leads to rot or decay) and acts of God. Backyard Storage Solutions, LLC will not be held responsible for any labor costs incurred to construct your unit.

This warranty gives you certain specific rights that vary from state to state.

CLAIM PROCEDURE

To make a claim under this warranty, you can either call 1-800-827-9056 or email: customerservice@backyardproducts.com. Please have ready the information below when you call or include the information in your email:

1. The model and size of the product.
2. A list of the part(s) for which the claim is made.
3. Proof of purchase of the Backyard Storage Solutions, LLC item, as shown on the original invoice.
4. Run code: found on exterior product label or assembly instructions enclosed in the product package.

All other inquiries can be mailed to:

Backyard Storage Solutions, LLC
Attn: Customer Service
1000 Ternes
Monroe, MI 48162

***WARRANTY TERMS MAY VARY OUTSIDE THE U.S.A.**

IMPORTANT: This is your warranty certificate.

LDR: 12/21/2015