

KOHLER[®]

TELLIEUR[™] MIRROR

INSTALLATION INSTRUCTIONS

MATERIALS NEEDED:

- Level
- Drill
- Measuring Tape
- Pencil
- Safety Glasses
- Fasteners (see **step 2.**)

BEFORE YOU BEGIN

1.

Unpack the mirror and inspect for damage.

MIRROR INSTALLATION

2.


Determine the desired placement of the mirror.

Measure down 3-1/2" from where the top edge of the mirror will be located and 3-5/8" in from where the left edge will be located. Make a mark at this point.

While holding the cleat with the largest side facing away from the wall align the left hole in the cleat with the mark on the wall.


Make sure cleat is level and predrill holes into the wall to align with the holes in the cleat. Use a drill of adequate diameter to accommodate fasteners (not provided).

Secure cleat to wall with appropriate fasteners/inserts (not provided).

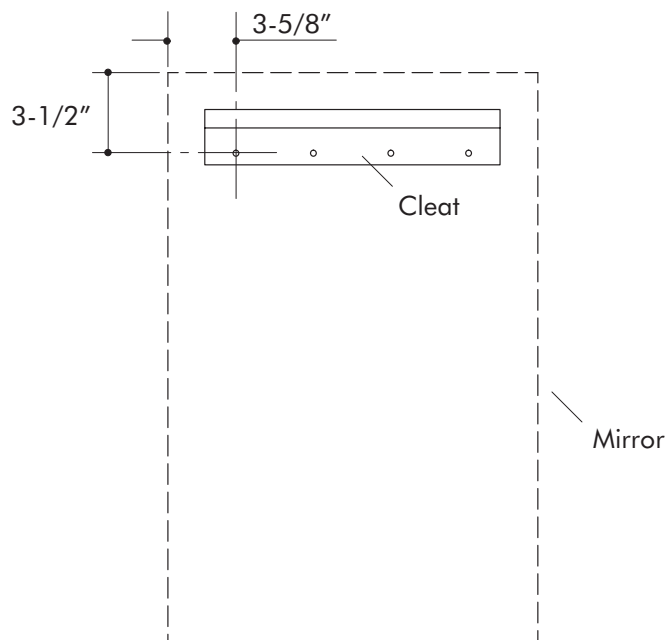

3.

Position the mirror on the wall so the pre-installed cleat on the back of the mirror rests on the cleat on the wall. Make sure that the cabinet is centered on the cleat.

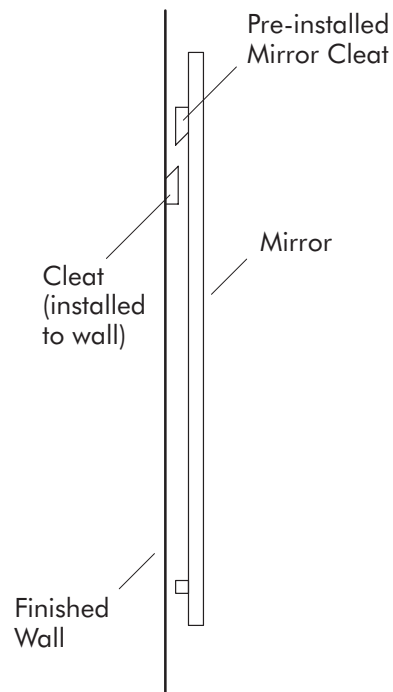

CALL US FOR HELP

Questions? Problems? First review the installation instructions to ensure correct installation. For additional assistance in the USA, call our Customer Service Department for direct help. You may also contact us at our web site.

THE BOLD LOOK
OF **KOHLER**®

1-800-4-KOHLER
www.kohlerco.com