




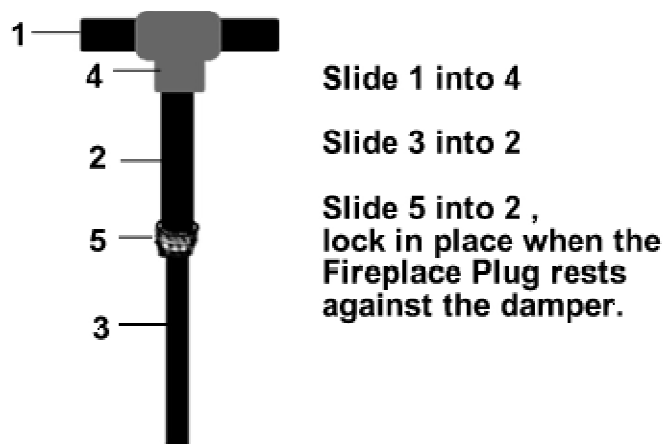


Additional Information to assist you with your first installation of the Fireplace Plug

Step 1. Assemble the Prop Parts:



- 1  upper tube
- 2  middle tube
- 3  lower tube
- 4  tee
- 5  sliding lock



Step 2. Attach the Prop to the Fireplace Plug:

For easy installation, prior to inflation, slide # 1 tube through # 4 tee then through outer loops of elastic as illustrated.

Assemble #3 tube into #2 tube using #5 (sliding lock) to adjust height. Insert into # 4 tee.

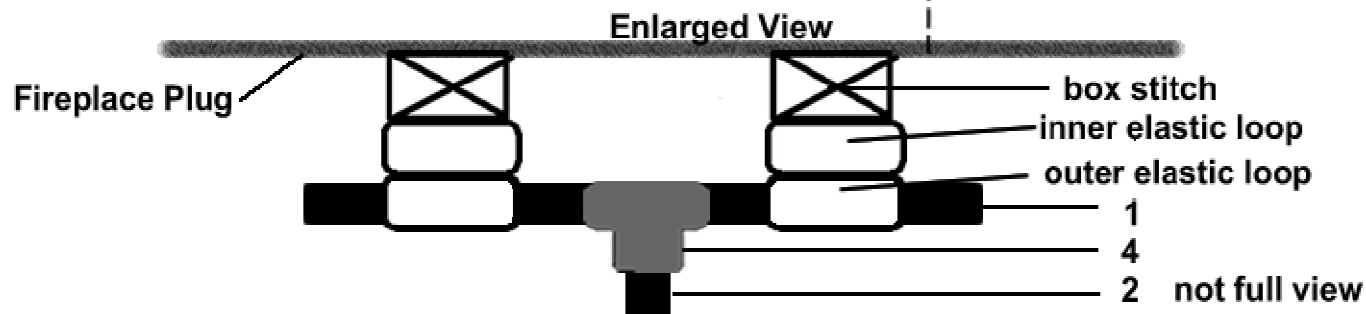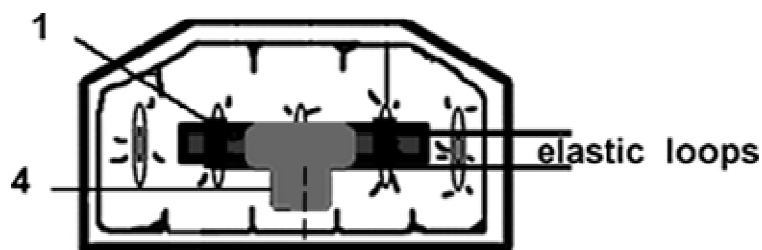

Step 3. Damper handle obstruction:

Note the 5 sealed areas in the Fireplace Plug. These areas can be slit to accommodate a damper handle if required. **Caution Do Not Cut into sealed edges.**

If your damper handle is obstructing the Fireplace Plug installation, either remove the handle or make a small slit in one of the appropriate slittable area.

Be extremely careful not to make the slit too large and do not slit past the sealed edges.

