

FOR COLOR CONSISTENCY
BUY ALL PANELS FROM THE SAME LOT

STUCCO WATERPROOF WALL PANEL

SOLID STUCCO

Interior STUCCO panels are the same material all the way through. Interior STUCCO waterproof panels pass ASTM Class II, USDA, and California's "Proposition 65" requirements.

STORAGE AND CONDITIONING

STUCCO panels must be stored flat on a smooth, dry surface. Allow panels to come to room temperature. Install panels at the temperature typical for the area after construction is finished.

ALLOWING FOR MOVEMENT

STUCCO expands & contracts with temperature changes. Space panels as shown. Do not use in structures subjected to extreme temperature changes such as trailers and recreational vehicles.



SURFACE PREPARATION

Ensure that walls are flat, clean, dry and solid. Remove or sand through all waterproof wall surfaces (if you are not using Parkland™ Panel Adhesive). Remove all bumps, loose plaster or paint and dust. Fill all low spots and voids. Concrete and block walls must be dry and cured.

CUTTING & FITTING PANELS

STUCCO can be sawed, cut with shears or scored and snapped like drywall. Cut-outs for switches or pipes, should be drilled at the corners to distribute stress. Test the panel fit by placing it in position without adhesive. Be careful to leave appropriate gap at panel edges.

STORE FLAT

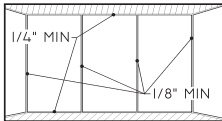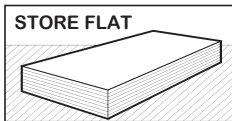

PANEL ADHESIVES

STUCCO panels should be installed using **Parkland™ Panel Adhesive**. This adhesive is applied to the wall, rather than the panel, and it has a long open time for ease of installation. Use a 1/8" notched trowel to spread the adhesive. Be sure to cover the entire area. The adhesive will go on milky and turn clear when it is ready to bond. This adhesive may be used with non-porous surfaces, such as DensArmor Plus®, Green Board or painted drywall. Complete installation instructions can be found on the can label or on our website. Adhesive coverage is about 1/3 gallon per 4' x 8' panel.

Other adhesives that may provide satisfactory results are listed below. Generally these adhesives **cannot be used over non-porous substrates such as DensArmor Plus®, Green Board or painted drywall**. Be sure to follow the manufacturer's instructions. To ensure adequate open time, spread the adhesive on the panel, not the wall. Leave only ridges of adhesive.

APPLYING THE PANEL

Position the panel and press against the wall. Take care to ensure that the panels are not fitted too tightly. Use a laminate roller over the entire surface of the panel to ensure that there is even and complete adhesive contact with the wall at all points. Remove fresh adhesive and/or caulk.



FIXTURE INSTALLATION: Allow adhesive to set minimum 24 hours, until panels are firmly bonded to wall prior to fixture installation.

CLEANING STUCCO

After installation panels may be cleaned with non-abrasive all-purpose cleaners or soaps. For difficult stains such as felt marker and graphite, use mineral spirits or acetone sparingly. Parkland™ Back Labels can be soaked off with penetrating oil such as WD-40. Wash afterwards with soap and water.

PCC0050M

Install With PARKLAND™ PANEL ADHESIVE / FRANKLIN FAST GRAB / LIQUID NAILS® FRP-310 / or Call Us

 **Parkland Performance™**

800-835-4110

www.WaterProofPanels.com

Stucco
.090 x 4 x 8
Bright White
Stucco

