
## 6021-3081-BB 2-Rod Garment Rack ©2011 Whitmor, Inc.

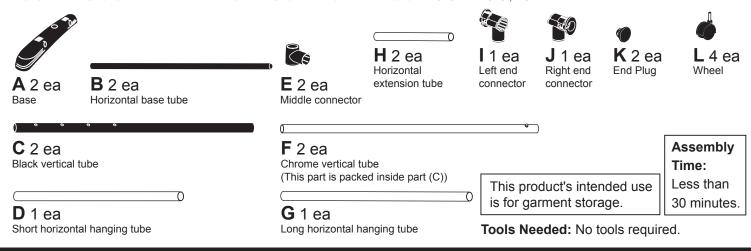

**STEP 1.** Start at the bottom by assembling two horizontal base tubes (B) into two bases (A). Insert black vertical tubes (C) into base (See note). Insert short horizontal hanging tube (D) into two middle connectors (E). Place assembled (D) and (E) section on (C). Align end of (C) with assembled parts (D) and (E) and press down until seated. The bottom section is now assembled.

**STEP 2.** Assemble top section by sliding chrome vertical tubes (F) into assembled black vertical tubes (C). Push down at the desired position until the two vertical tubes are locked in parallel positions. Insert long horizontal hanging tube (G) into the two right and left end connectors (I) and (J). Place assembled (G), (I) and (J) on top of (F) and press down until seated. Place end plugs (K) onto one end of each horizontal extension tube (H) and slide into (I) and (J) locking into place at the desired position.

**STEP 3.** Insert wheels (L) into bottom of base (A). Assembly is now complete.

Part	Reference
А	F7254
В	F7001
С	F7002
D	F7003
Е	F7004
F	F7005
G	F7006
Н	F7007
I	F7008
J	F7009
K	F7010
L	F7011

MADE IN CHINA

**NEED HELP?** For help with assembly, or if you are missing a part, please call Whitmor's Customer Service Department, 1-888-944-8667 between 8 a.m. and 4:30 p.m. (Central Standard Time) Monday through Friday. Or email: customer\_service@whitmor.com

O K Note: All metal tubing must be securely inserted into the plastic base and connectors to ensure proper assembly. **Note:** When inserting part (C) into base (A) make sure holes on the side of (C) are facing inside as shown in illustration.