




Page 1 OF 16

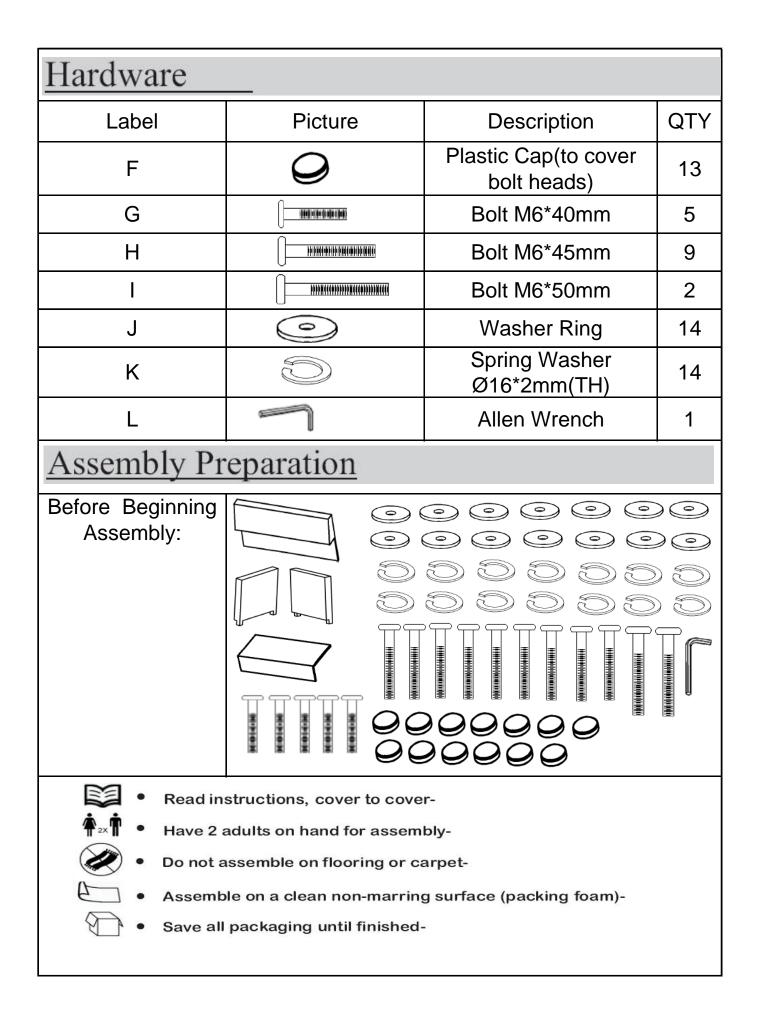

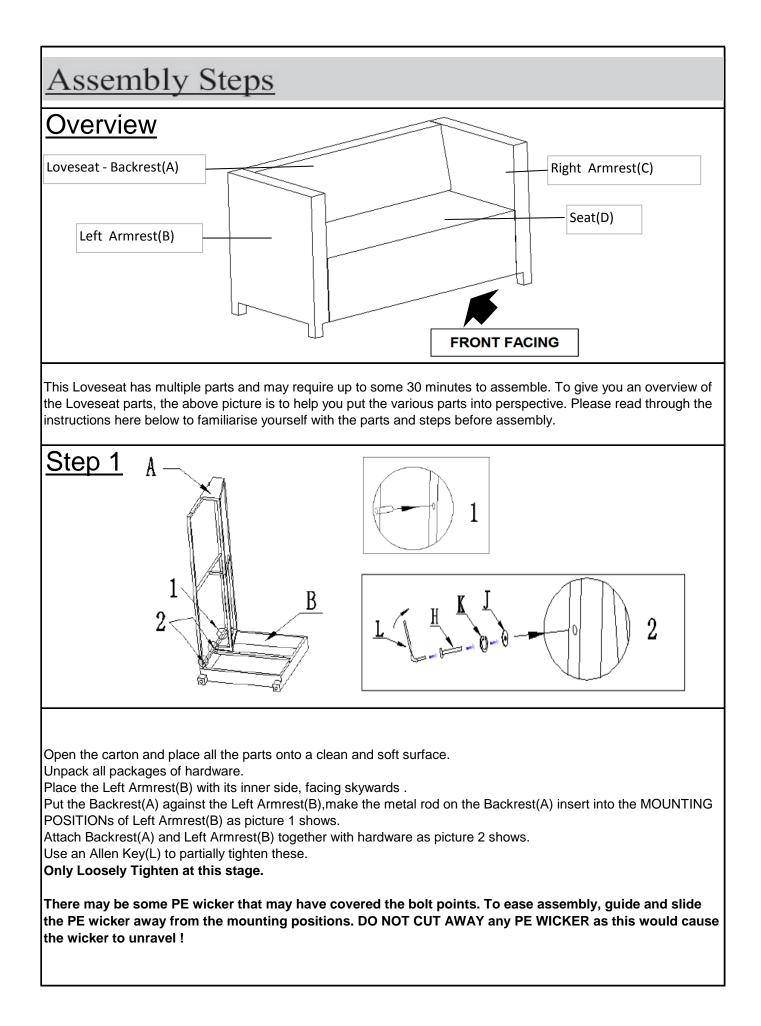

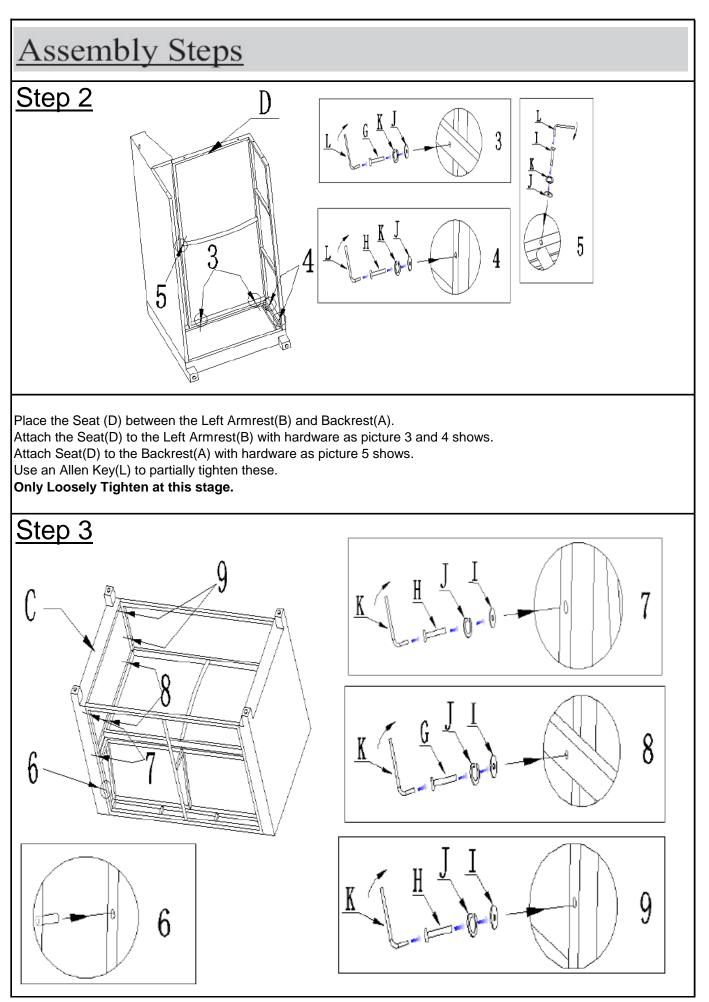

Page 4 OF 16


Place the Right Armrest (C) against the Backrest(A) and the Seat(D). Make the metal rod on Backrest(A) insert into the MOUNTING POSITIONs of Right Armrest(C) as picture 6 shows.


Attach the Backrest (A) to the Righ Armrest(C) with hardware as picture 7 shows.


Attach the Seat(D) to the Right Armrest(C) with hardware as picture 8 and 9 shows.

Use an Allen Key(L) to partially tighten these.


Only Loosely Tighten at this stage.

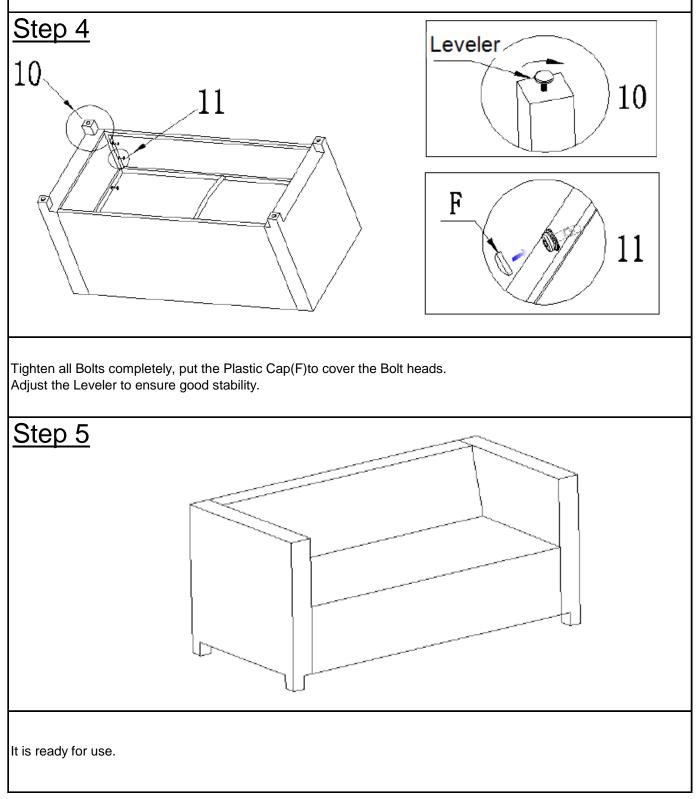


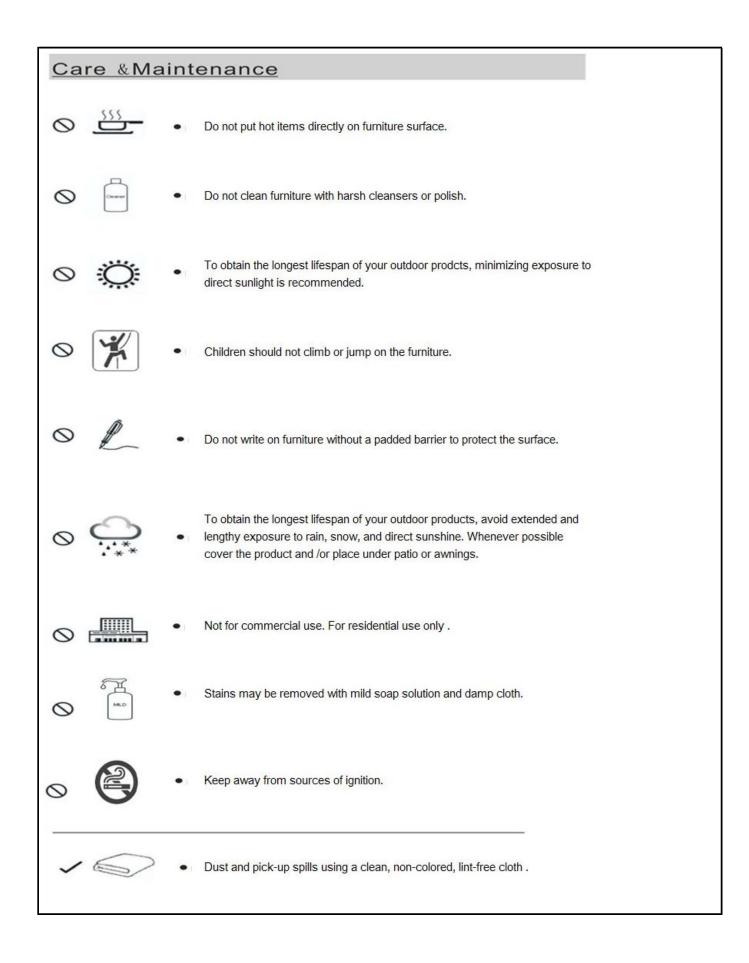

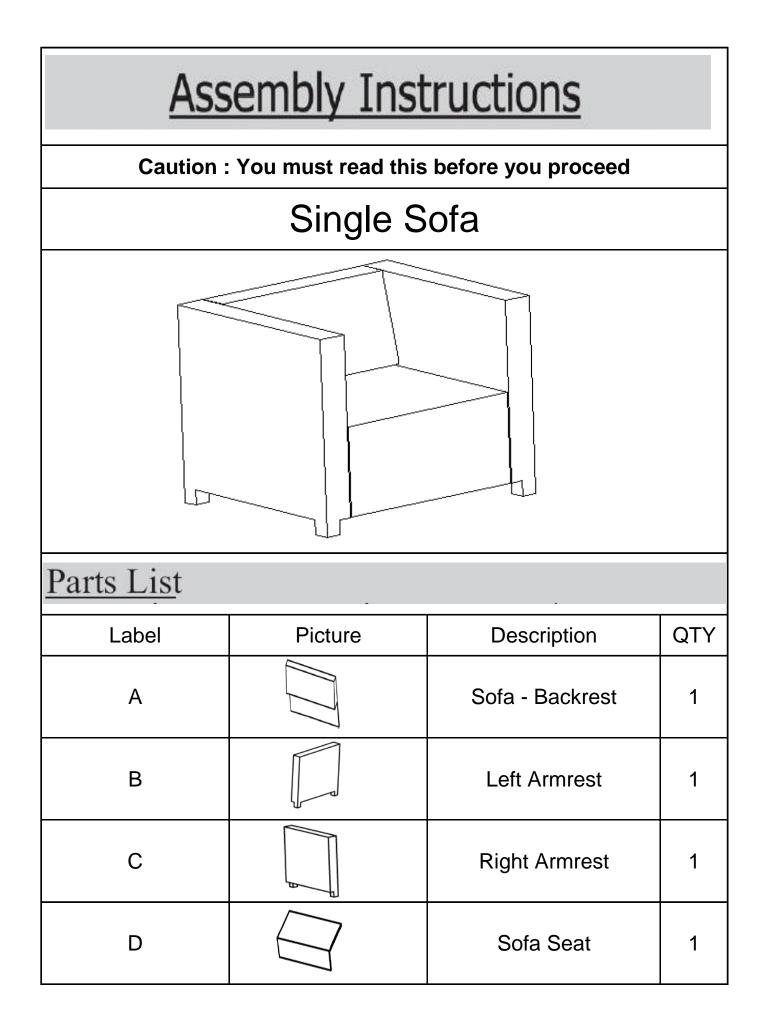

Hardware			
Label	Picture	Description	QTY
F	0	Plastic Cap(to cover bolt heads)	13
G		Bolt M6*40mm	5
н		Bolt M6*45mm	9
I	0	Washer Ring	13
J	Q	Spring Washer Ø16*2mm(TH)	13
К		Allen Wrench	1
Assembly Preparation			
Before Beginning Assembly:			
 Read instructions, cover to cover- Have 2 adults on hand for assembly- Do not assemble on flooring or carpet- Assemble on a clean non-marring surface (packing foam)- Save all packaging until finished- 			

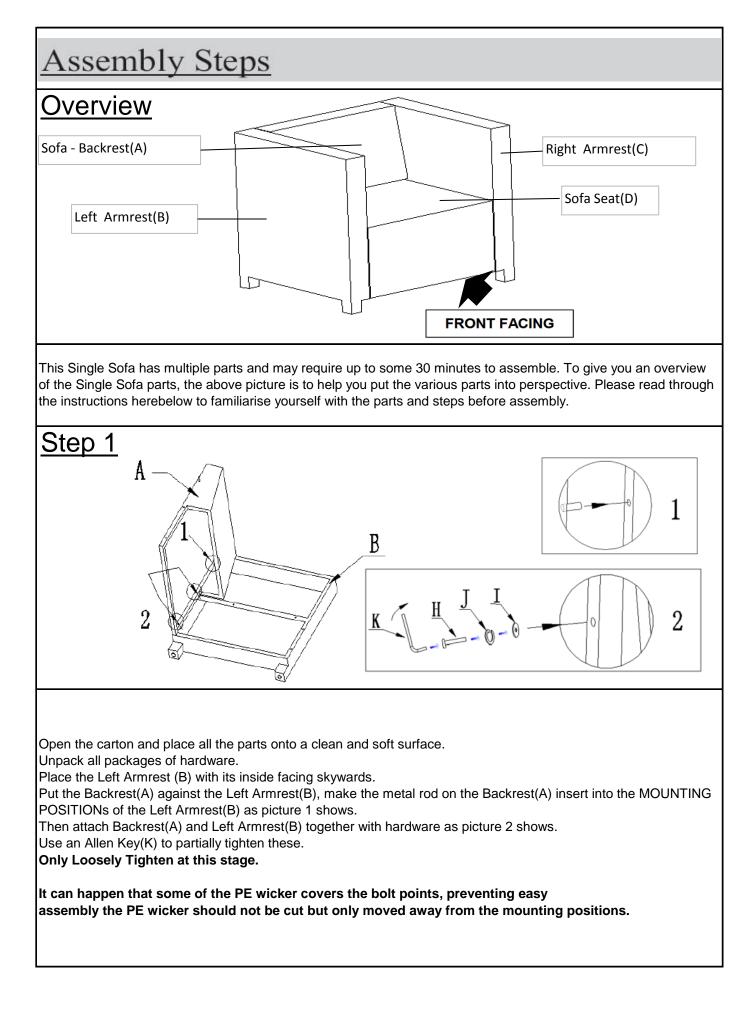

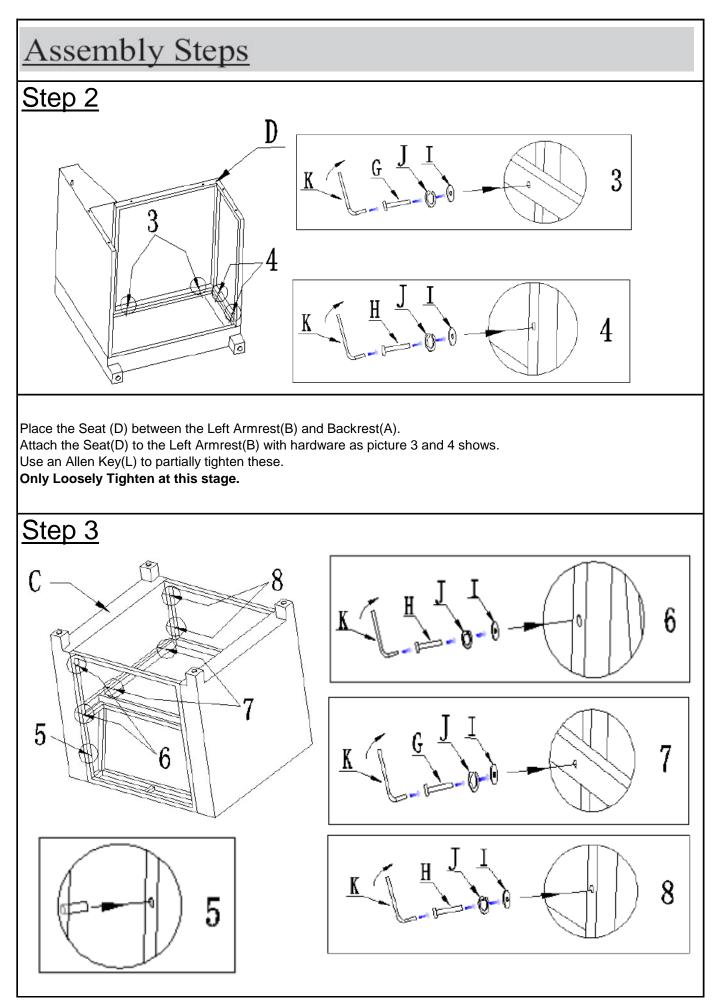

Page 10 OF 16

Place the Right Armrest (C) against the Backrest(A) and Seat(D).


Make the metal rod on the Backrest(A) insert into the MOUNTING POSITIONs of the Right Armrest(C) as picture 5 shows.


Attach the Right Armrest(C) to Backrest(A) with hardware as picture 6 shows.


Attach the Right Armrest(C) to Seat(D) with hardware as picture 7 and 8 shows.

Use an Allen Key(K) to partially tighten these.


Only Loosely Tighten at this stage.

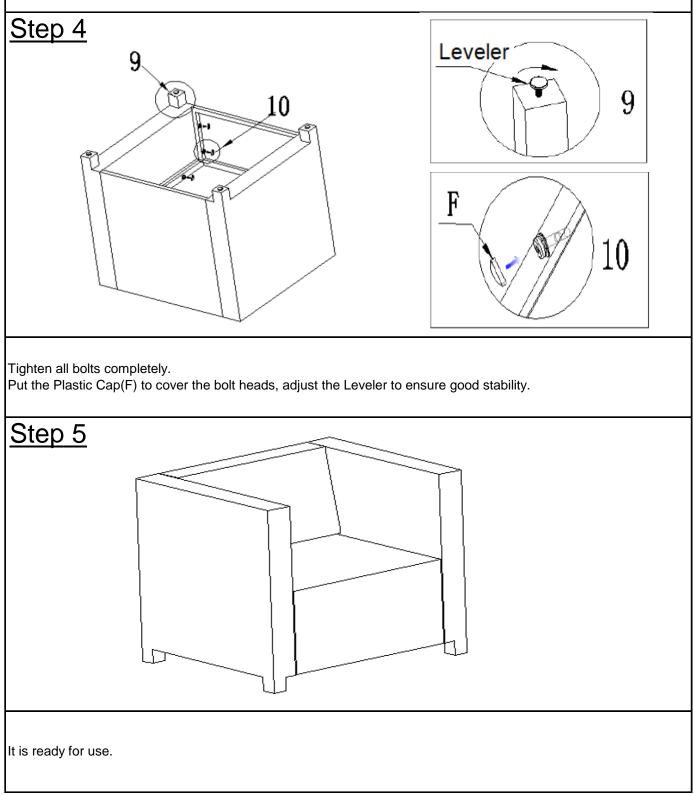


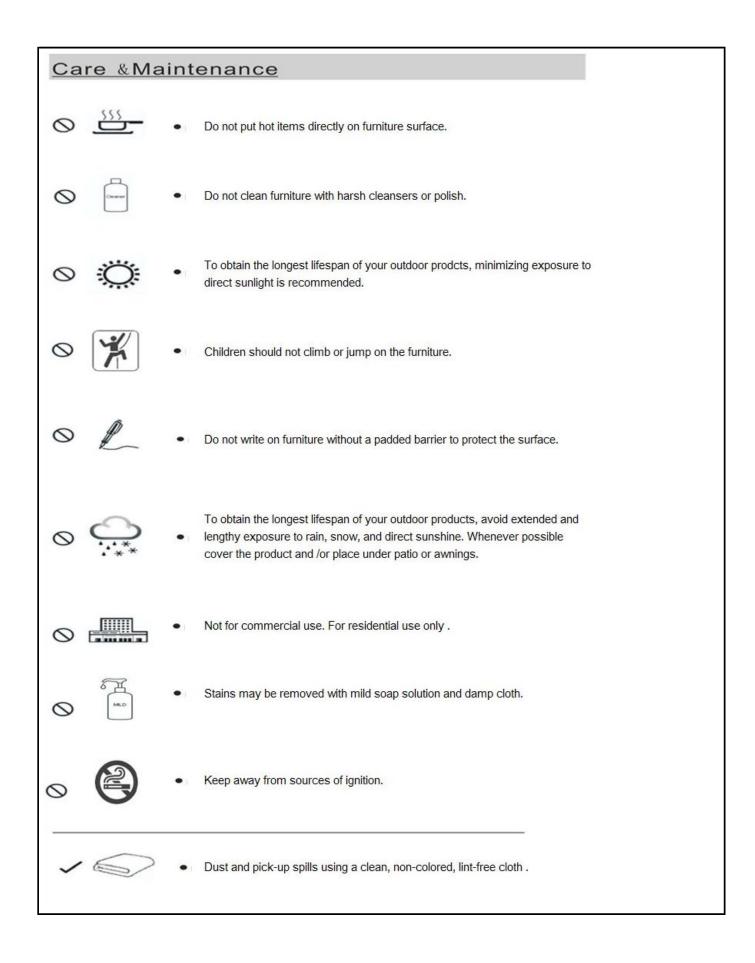

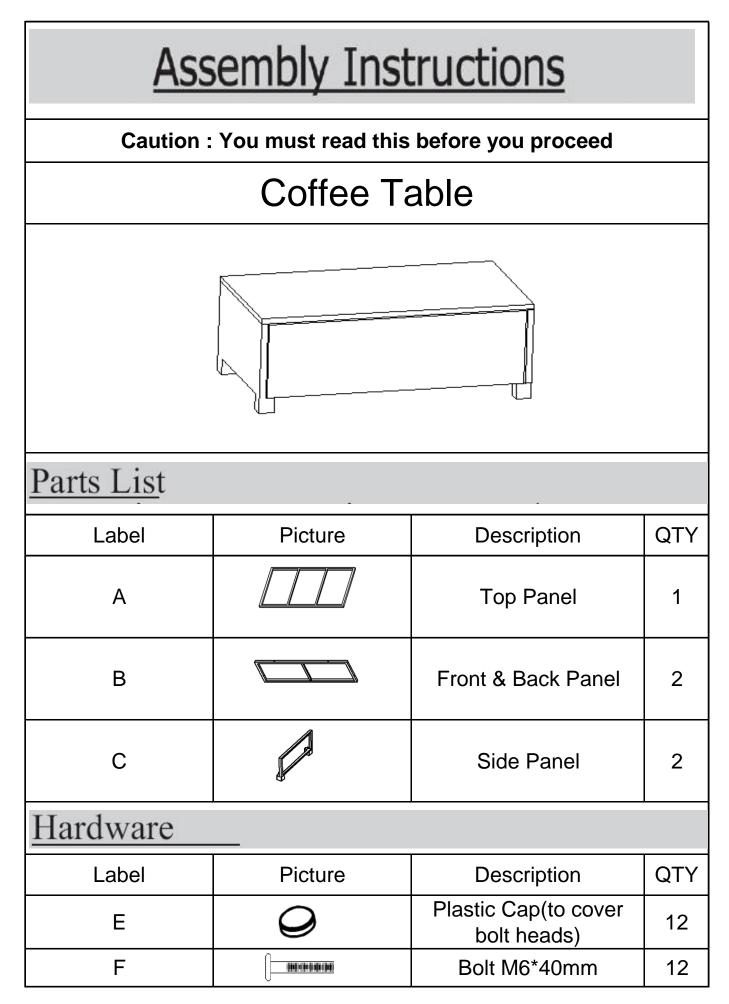

Page 13 OF 16

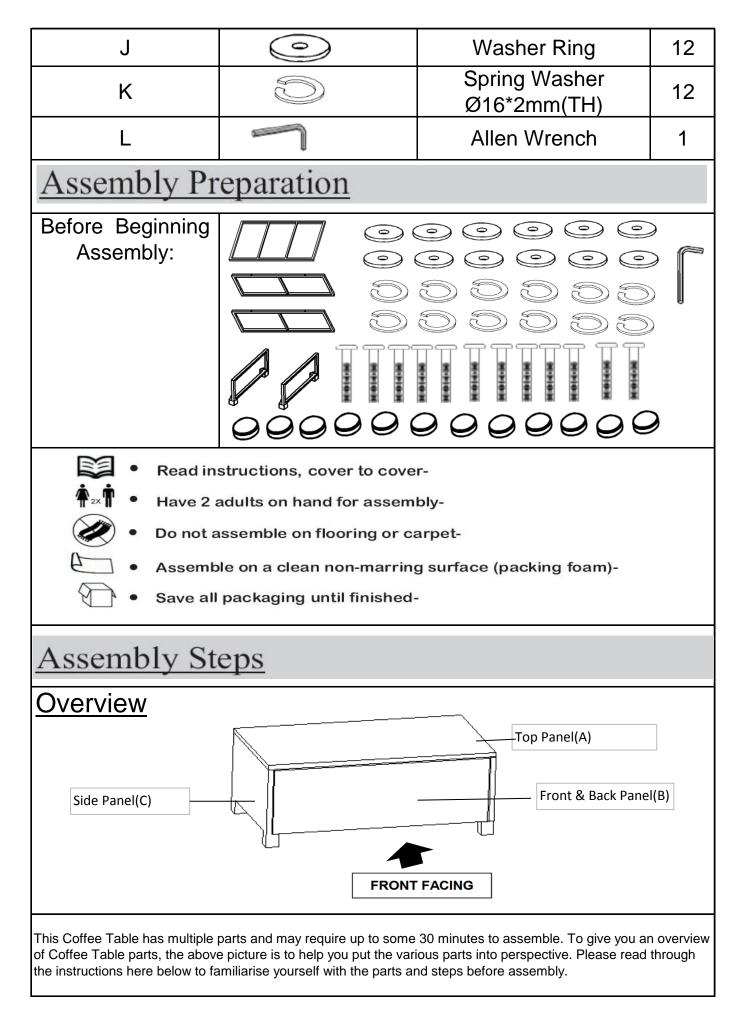

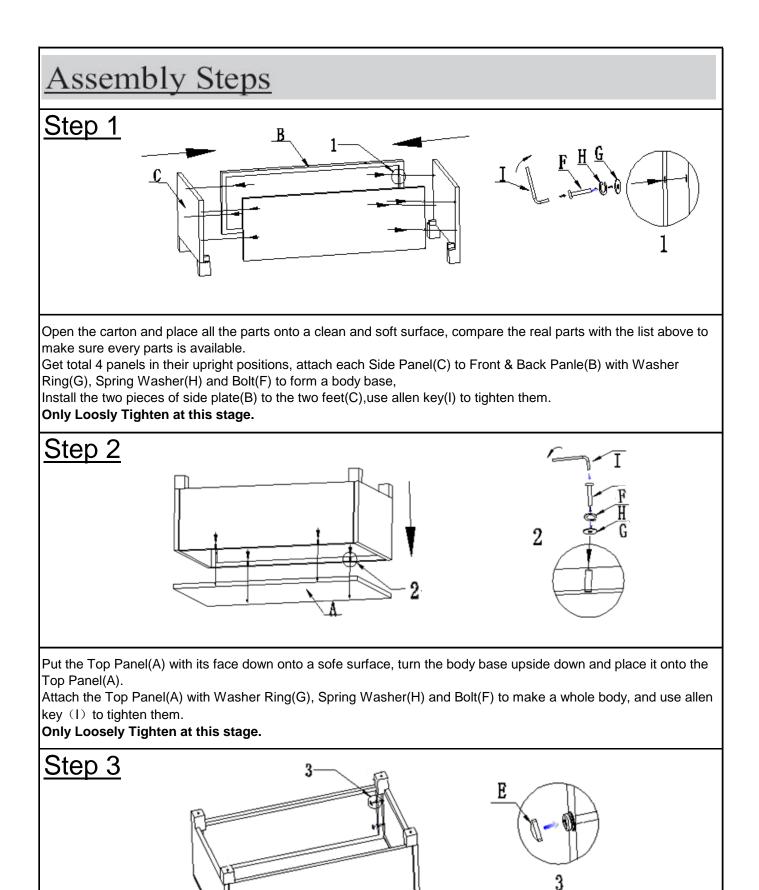

Tighten all Bolts completely, put the Plastic Cap(E)to cover the Bolt heads.

Adjust the Leveler to ensure good stability.

Page 15 OF 16

