
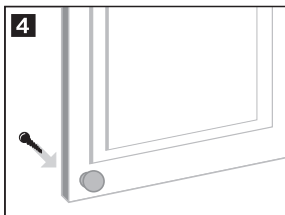






Knobs • Molette • Perilla

ALIGNright™

MARK IT. DRILL IT. MOUNT IT.™

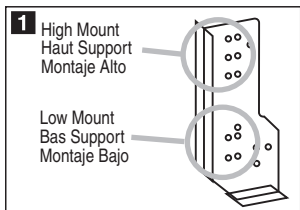

Pulls • Traction • Tirón

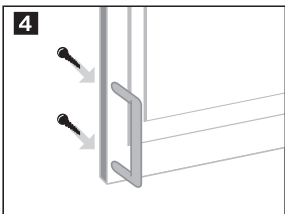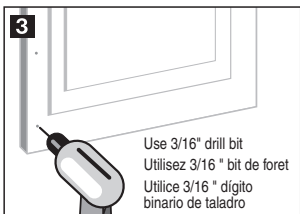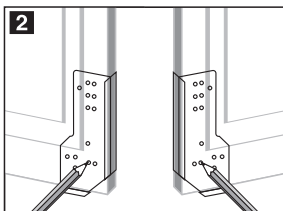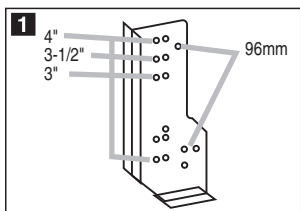

Wear Safety Goggles
Portez des Lunettes de Sécurité
Utilice Gafas Protectoras

Additional 3-inch span
for higher mount

Utilisez une cle de 3 pouces
pour le montage du haut.

Tres pulgadas de extension
adicionales para una
montura mas alta

