

LOCKiT!

Verify that all required parts are included:



LOCKiT! Body



LOCKiT! Cover Plate



Door Latches (2)



Latch
Spacers (2)



$\frac{3}{4}$ " Screws
(4)



$1\frac{1}{2}$ " Screws
(3)



Masonry
Anchors (3)

EASY INSTALLATION INSTRUCTIONS



1.



2.



3.



4.

Assemble the recommended tools for easy installation:
Drill • $\frac{1}{8}$ " Drill Bit • Phillips Drill Bit • Pen or Pencil

Decide where to position the LOCKiT! sliding glass door lock. Suggested placement is half-way between the existing sliding door lock and the top of the door. If there are small children in the home, install the LOCKiT! sliding glass door lock high enough to be out of their reach. Do not install within 3" of the top of the door to allow the top slide bolt to operate properly.

Once the location is selected, open the door and decide which door latch fits the sliding glass door jamb. The flat pre-drilled latch plate should fit flat in the back of the door jamb and flush with the front edge of the jamb. If the door jamb is deeper than the latch plate, place one or both spacers, as needed, between the latch plate and the door jamb for a flush fit.

Mark the position of the three pre-drilled holes of the latch plate on the inside of the door jamb with a pen or pencil.

1. Remove the latch and, using a $\frac{1}{8}$ " drill bit, drill starter holes on the door jamb as marked. Attach the latch (including spacers and masonry anchors, if needed) with the drill and $1\frac{1}{2}$ " screws provided.

*Masonry anchor instructions (Designed for use in concrete, hollow block, brick, and tile, but may also be used in drywall.) With $\frac{1}{8}$ " drill bit, drill hole at least $\frac{1}{4}$ " deeper than the anchor length. Insert anchor until flange is flush with base material. Attach latch by inserting screw through latch and into anchor, tighten. For drywall, tighten additional turns.

If door does not close correctly over latch, do not force. Instead, verify that the latch is seated as close to the side of the frame as possible, then bend bolt receptor away from door slightly. If your original lock does not lock correctly, this may be caused by the height of the latch. To correct, simply remove the original door manufacturer's latch and re-install it with washers (not included) placed behind it.

2. Remove the cover from the LOCKiT! sliding glass door lock to reveal the 4 screw holes. Open the lock by sliding the top slide bolt up and the bottom slide bolt down. Close the door and attach the LOCKiT! sliding glass door lock to the latch by aligning the lock with the latch and closing the slide bolts at the top and bottom of the lock. **Make sure the latch is centered between the bolts.** Mark the position of the 4 screw holes on the door with a pen or pencil. Unlock and remove the lock and, using a $\frac{1}{8}$ " drill bit, drill starter holes for the screws. Install the LOCKiT! sliding glass door lock using a drill and the $\frac{3}{4}$ " screws provided.

3. Snap the cover on and you're done!

4. Safety, security, and easy installation . . . LOCKiT!

Disclaimer: These instructions are generic in nature and each individual is responsible to ensure that these instructions are applicable to their particular door.

Please visit www.homefashiontech.com to see LOCKiT! in action.

Customer Service Toll-Free 1.866.658.7530



HOME FASHION
TECHNOLOGIES

12614 Hempstead Road | Houston TX 77092 | 713.457.8324 | Toll-Free 1.866.658.7530 | Fax 713.934.9149

053012

LOCKiT!

Verifique que se incluyen todas las partes requeridas:



Caja LOCKiT!



Placa de cubierta LOCKiT!



Retenes de puerta (2)



Espaciadores de retenes (2)



Tornillos de $\frac{3}{4}$ pulg. (4)



Tornillos de $1\frac{1}{2}$ pulg. (3)



Ancillas de la albañilería (3)

INSTRUCCIONES DE INSTALACIÓN FÁCIL




1.



2.



3.

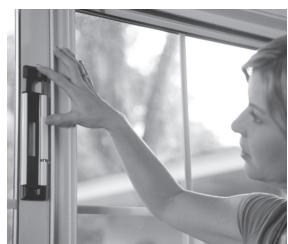

4.

Reúna las herramientas recomendadas para facilitar la instalación:
Taladro • Broca de $\frac{1}{8}$ pulg. • Broca Phillips • Pluma o lápiz

Decida dónde situar el cerrojo para puerta corrediza de vidrio LOCKiT! Se sugiere el punto medio entre el cerrojo existente y el extremo superior de la puerta. Si hay niños pequeños en casa, instale el cerrojo para puerta corrediza de vidrio LOCKiT! suficientemente alto para que quede fuera de su alcance. No lo instale a menos de 3 pulg. del extremo superior de la puerta para que el pestillo deslizante superior funcione correctamente.

Una vez seleccionada la ubicación, abra la puerta y decida cuál retén es el que calza en el montante de la puerta corrediza de vidrio. La placa de retén plana preperforada debe quedar plana en la parte posterior del montante de la puerta y a ras con el borde delantero del montante. Si el montante de la puerta es más profundo que la placa de retén, coloque uno o ambos espaciadores, según sea necesario, entre la placa de retén y el montante de la puerta para que la placa calce a ras.

Marque la posición de los tres agujeros preperforados de la placa de retén en la parte de adentro del montante de la puerta con una pluma o lápiz.

1. Quite el retén y, con una broca de $\frac{1}{8}$ pulg., taladre agujeros iniciales en las posiciones marcadas del montante de la puerta. Instale el retén (con los espaciadores si es necesario) con el taladro y los tornillos de $1\frac{1}{2}$ pulg. proporcionados.

*Instrucciones para mecanismos de anclaje en mampostería (Diseñados para uso en concreto, bloque hueco, ladrillo y baldosa, pero también se pueden usar en paneles de yeso.) Con una broca de $\frac{3}{16}$ pulg., taladre un agujero al menos $\frac{1}{4}$ pulg. más profundo que el largo del mecanismo de anclaje. Inserte el mecanismo de anclaje hasta que la brida esté a ras con el material base. Conecte el retén insertando el tornillo a través del retén y en el mecanismo de anclaje, y apriételo. En el caso de un panel de yeso, apriete varias vueltas más.

2. Quite la cubierta del cerrojo para puerta corrediza de vidrio LOCKiT! para ver los cuatro agujeros para tornillos. Abra el cerrojo deslizando el pestillo deslizante superior hacia arriba y el pestillo deslizante inferior hacia abajo. **Cierre la puerta e instale el cerrojo para puerta corrediza de vidrio LOCKiT! en el retén alineando el cerrojo con el retén y cerrando los pestillos deslizantes en los extremos superior e inferior del cerrojo.** Marque la posición de los 4 agujeros para tornillos en la puerta con una pluma o lápiz. Destrabe y retire el cerrojo y, con una broca de $\frac{1}{8}$ pulg., taladre agujeros iniciales para los tornillos. Instale el cerrojo para puerta corrediza de vidrio LOCKiT! con un taladro y los tornillos de $\frac{3}{4}$ pulg. proporcionados.

3. ¡Instale a presión la cubierta y eso es todo!

4. Seguridad, protección y fácil instalación... LOCKiT!

Descargo de responsabilidad: Estas instrucciones son de naturaleza genérica y cada individuo es responsable de asegurar que sean aplicables a su puerta específica.

Visite por favor www.homefashiontech.com para ver LOCKiT! en la acción.

Servicio de atención al cliente gratis 1.866.658.7530



HOME FASHION
TECHNOLOGIES

12614 Hempstead Road | Houston TX 77092 | 713.457.8324 | Toll-Free 1.866.658.7530 | Fax 713.934.9149