



# SETTING UP YOUR S100 STAINLESS PROFESSIONAL SPRAYER 190441




## **1. Assemble Hose To Tank**

**IMPORTANT: Do not attempt to heat or alter hose or hose nut.**

1. Align hose and screw on to tank. **(See Figure A).**
2. Tighten with two 5/8" wrench. **(See Figure B).**



**Figure A**

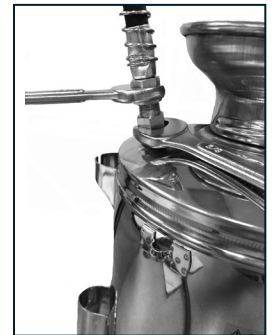


**Figure B**

## **2. Assemble 18" Extension**

Remove cap and place check valve inside of extension. Then place 4-way nozzle on extension and fasten tightly. **(See Figure C)**


**Note: Check valve must always be used.**

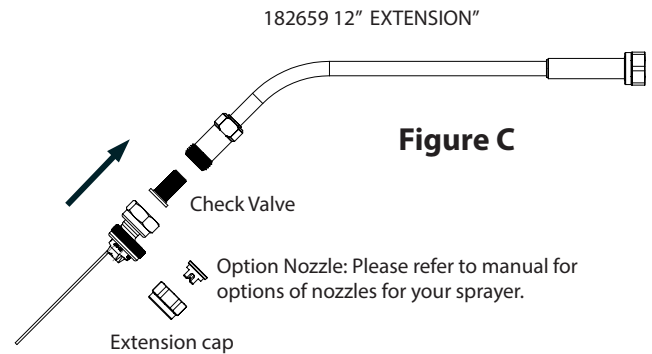

**Figure C**

## **3. Assemble Shut-off to Hose**


Screw on SS Shut-off to end of hose from sprayer **(See Figure D)**

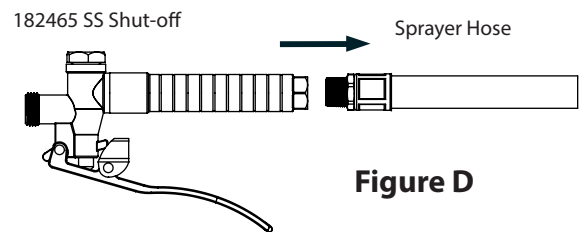

**Figure D**

## **4. Assemble Wand to Shut-off**

Screw on Wand Assembly to SS Shut-off **(See Figure E)**

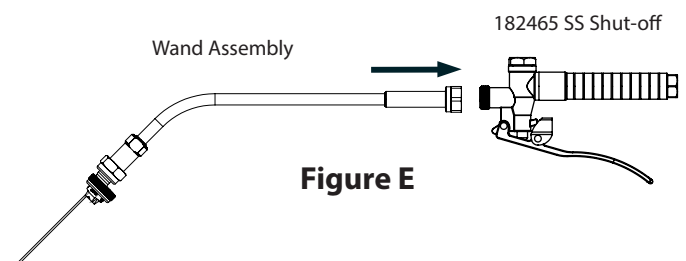


**Figure E**


PARTS INCLUDED WITH YOUR  
S100 SPRAYER  
190441




182786  
CHECK VALVE

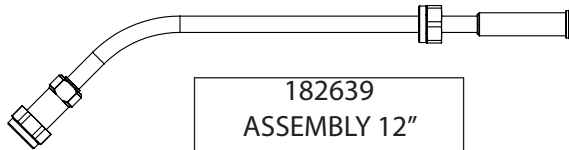

182639  
ASSEMBLY 12"  
SS EXTENSION

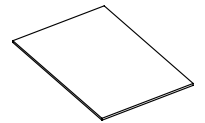


182643  
SEAL KIT S100



182379  
4-WAY  
BRASS NOZZLE




182570  
HOSE 50"

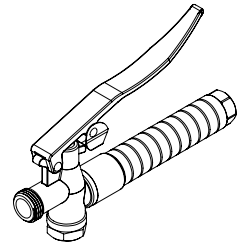

182465  
SS SHUT-OFF



182618  
WARRANTY CARD

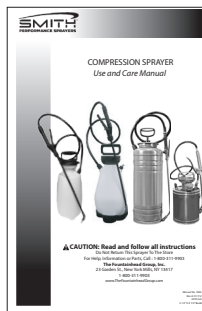

182617  
MANUAL



182677  
SHOULDER HARNESS