


### 1 Parts Identification Box 1

TFPBRB 24-48

Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

If any pieces are missing or replacement parts are required, contact Gronomics at 1-855-299-6727.

NOTE: It is recommended to place a protective layer between the ground and the pieces during assembly. This will help prevent damage to the pieces.

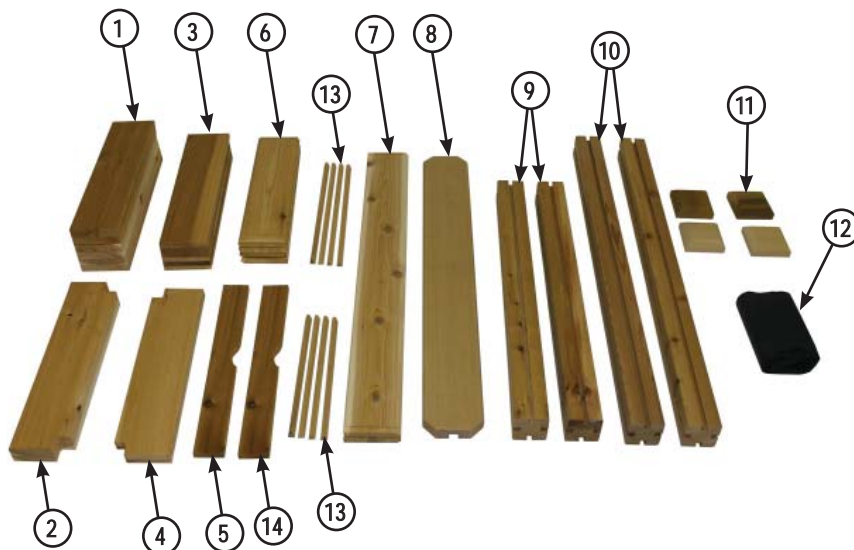

#### Box 1 of 3

ITEM	QTY.	PART #	DESCRIPTION
1	6	2178BB	Bottom Board, 5/4" x 6" x 21-7/8"
2	2	2178BN	Bottom Notched Board, 5/4" x 6" x 21-7/8"
3	6	22525BSLB	Bottom Storage Lid Boards, 22" x 5-1/4" x 5/8"
4	2	22525BSLN	Bottom Storage Lid Notched Board, 22" x 5-1/4" x 5/8"
5	1	22525BSLF	Bottom Storage Lid Filler Board, 22" x 2-3/4" x 5/8"
6	4	2100T	Side rail, 21" x 5-1/2" x 7/8"
7	2	4500T	Side rail, 45" x 5-1/2" x 7/8"
8	1	PBSB43	Shelf Board, 43-3/4" x 5-1/2" x 1-3/8"
9	2	3600TFPB	Corner Post, 4" x 4" x 36"
10	2	4650TFPB	Corner Post, 4" x 4" x 46-1/2"
11	4	4545	Post Cap, 4-5/8" x 4-5/8" x 1-1/2"
12	1	FL3652	Fabric Liner, 36" x 52"
13	8	TFFS14	Filler Strips, 3/4" x 3/4" x 14"
14	1	22275TTF	Table Top Filler Board, 22" x 2-3/4" x 5/8"

Packaged & Inspected by:

Date:


Continued

## 2 Parts Identification Box 2

Remove contents from Box 2 of 3.  
Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

If any pieces are missing or replacement parts are required, contact Gromonics at 1-855-299-6727.

NOTE: It is recommended to place a protective layer between the ground and the pieces during assembly. This will help prevent damage to the pieces.

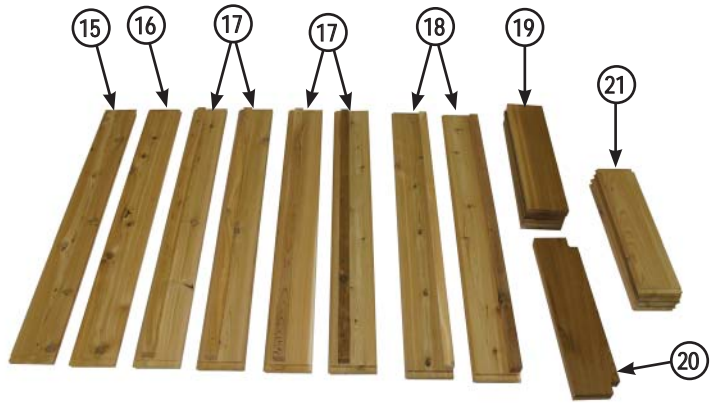

### Box 2 of 3


ITEM	QTY.	PART #	DESCRIPTION
15	1	TR4500T	Top Rail, (Top Rail for Shelf Board), 45" x 5-1/2" x 7/8"
16	1	L4500T	Side rail, (w/Logo), 45" x 5-1/2" x 7/8"
17	4	4503TC	Side Rail, w/Top Cleat, Side rail, 45" x 5-1/2" x 7/8"
18	2	4502TC	Side Rail, w/Bottom Cleat, Side rail, 45" x 5-1/2" x 7/8"
19	6	22525TTB	Table Top Board, 22" x 5-1/4" x 5/8"
20	2	22525TTN	Table Top Notched Board, 22" x 5-1/4" x 5/8"
21	4	2100T	Side rail, 21" x 5-1/2" x 7/8"

## 3 Parts Identification Box 3

Remove contents from Box 3 of 3.  
Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

If any pieces are missing or replacement parts are required, contact Gromonics at 1-855-299-6727.

NOTE: It is recommended to place a protective layer between the ground and the pieces during assembly. This will help prevent damage to the pieces.

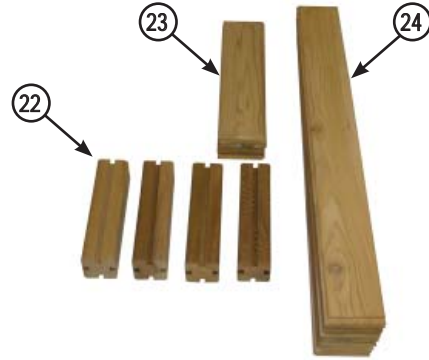

### Box 3 of 3

ITEM	QTY.	PART #	DESCRIPTION
22	2	R1300	Corner Post, 4" x 4" x 13"
23	4	2100T	Side rail, 21" x 5-1/2" X 7/8"
24	8	4500T	Side rail, 45" x 5-1/2" X 7/8"

Continued


#### 4 Corner Post / Side Rail Assembly

Stand two 4" x 4" x 46-1/2" corner posts (Item 10) upright. Install a side rail (Item 7) between the posts and slide to the ground.

Stand two 4" x 4" x 36" corner posts (Item 9) upright. Install a 45" x 5-1/2" x 7/8" side rail (Item 7) between the posts and slide to the ground.

Install two 21" x 5-1/2" x 7/8" side rails (Item 6) at each end of the potting bench and slide down.

NOTE: Make sure the boards tongue and grooves fully seat together.

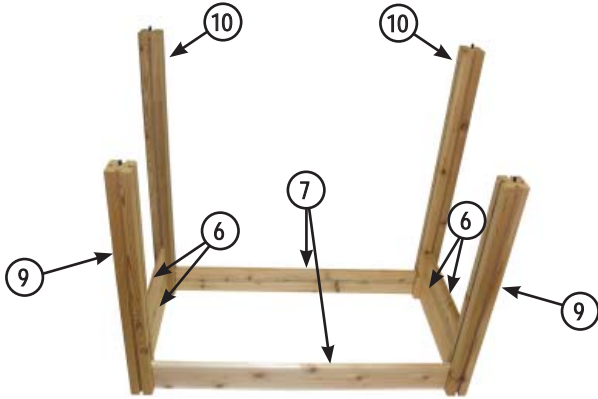


#### 6 Bottom Storage Lid Installation

Place one 22" x 5-1/4" x 5/8" bottom storage lid notched board (Item 4) on each end of the potting bench.

Place six 22" x 5-1/4" x 5/8" bottom storage lid boards (Item 3) onto potting bench.


Place the 22" x 2-3/4" x 5/8" bottom storage lid filler board (Item 5) onto the potting bench.

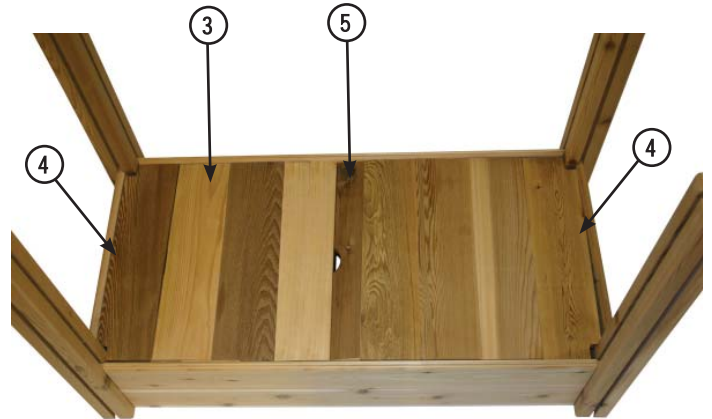

#### 5 Side Rail w/Top Cleat Assembly

Install a 45" x 5-1/2" x 7/8" side rail w/top cleat (Item 17) on each side, with the cleat located at the top and the cleat facing inward. Slide the side rails w/top cleat between the posts and slide down.

NOTE: Make sure the boards tongue and grooves fully seat together.

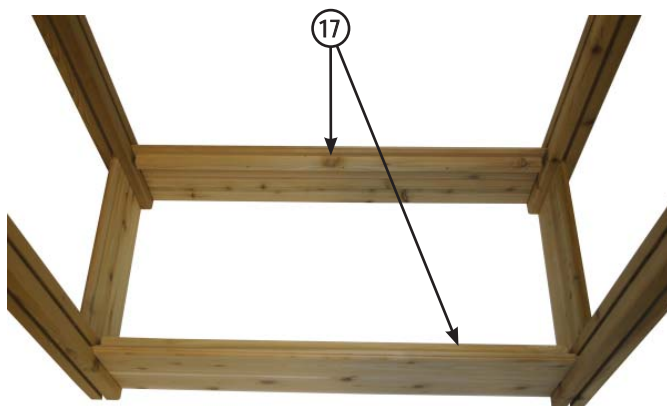


#### 7 Filler Strip And Side Rail w/ Bottom Cleat Assembly

Install two 3/4" x 3/4" x 14" filler strips (Item 13) into the grooves on adjacent sides of each post as shown and slide the filler strip down.

Install a 45" x 5-1/2" x 7/8" side rail w/bottom cleat (Item 18) on each side, with the cleat located at the bottom and the cleat facing inward. Slide the side rails w/bottom cleat between the posts and slide down until the side rails contact the filler strip.

Install a 21" x 5-1/2" x 7/8" side rail (Item 21) between the posts at each end and slide down until the side rails contact the filler strip.

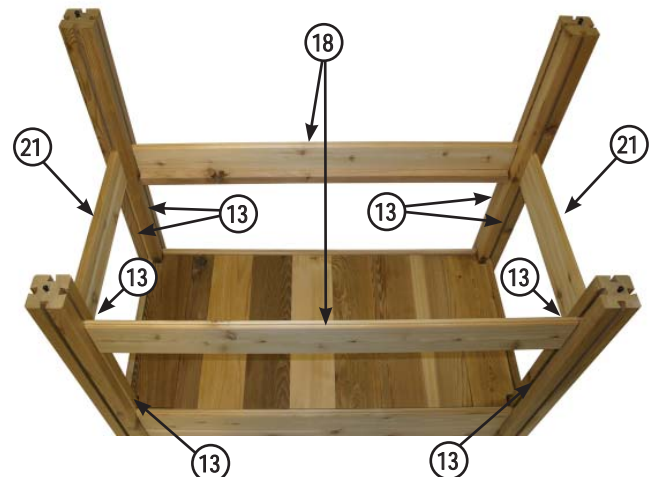


Continued

## 8 Side Rail w/Top Cleat Assembly

Install a 45" x 5-1/2" x 7/8" side rail w/top cleat (Item 17) on each side, with the cleat located at the top and the cleat facing inward. Slide the side rails w/cleat between the posts and slide down.

Install a 21" x 5-1/2" x 7/8" side rail (Item 21) between the posts at each end and slide down.

NOTE: Make sure the boards tongue and grooves fully seat together.

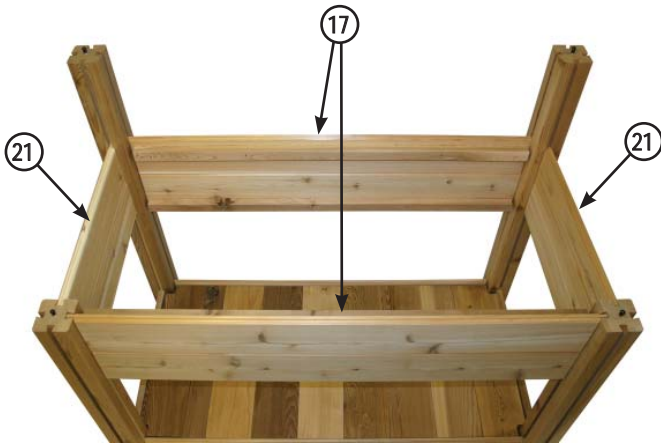


## 10 Side Rail / Shelf Assembly

Install one 45" x 5-1/2" x 7/8" side rail (Item 16) (w/Logo) between the posts and slide down.

Install the 45" x 5-1/2" x 7/8" top rail for shelf board (Item 15) and slide down.

NOTE: Make sure the boards tongue and grooves fully seat together.


Install the 43-3/4" x 5-1/2" x 1-3/8" shelf board (Item 8) onto the side rail.

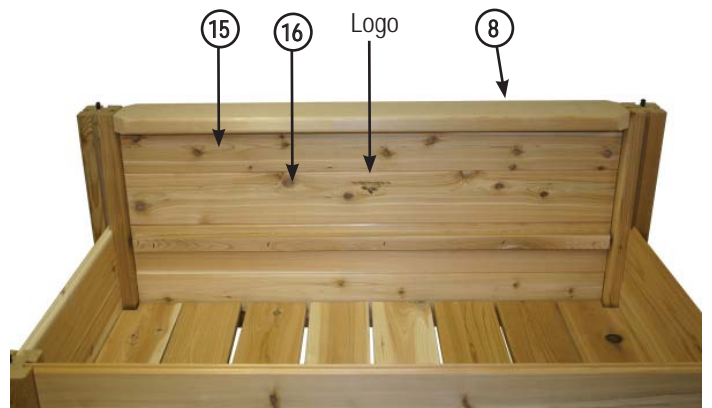

## 9 Bottom Board Installation

Install the one 5/4 x 6" x 21-7/8" bottom notched board (Item 2) at each end of the potting bench.

Place six 5/4" x 6" x 21-7/8" bottom boards (Item 1) onto potting bench.

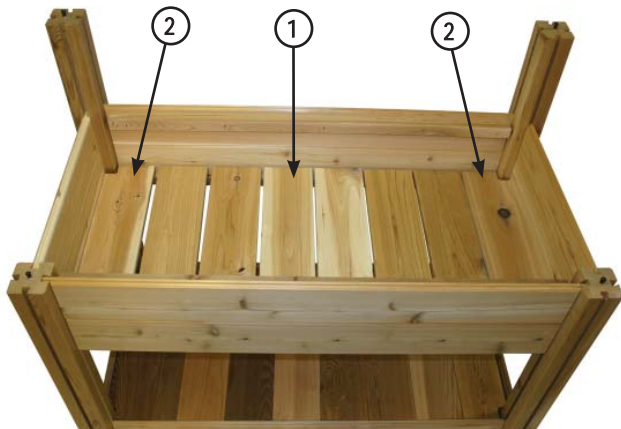

## 11 Raised Garden Bed Assembly

Install two 45" x 5-1/2" x 7/8" side rails (Item 24) into the corner post slots on each side and slide to the ground.

Repeat procedure on the opposite end of the potting bench.




Continued

## 12 Raised Garden Bed Assembly

Install the 4" x 4" x 13" corner posts (Item 22) onto the 45" side rails.

Install two 21" x 5-1/2" x 7/8" side rails (Item 23) between the posts and slide down.

Repeat procedures on the opposite end of the potting bench.

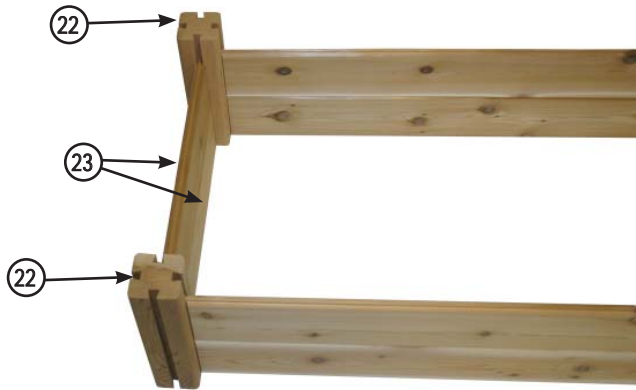

## 14 Top Bench Notched Board and Fabric Installation

Place the 36" x 52" fabric liner (Item 12) into the potting bed.

Install the two 22" x 5-1/4" x 5/8" table top notched boards (Item 20) at each end of the potting bench.




## 13 Post Cap Installation

Remove the rubber cap from the corner posts.

Align the hole of the 4-5/8" x 4-5/8" x 1-1/2" post cap (Item 11) with stud and tighten until the cap makes contact with the post. Repeat procedure on all corner posts.

NOTE: Do not overtighten.

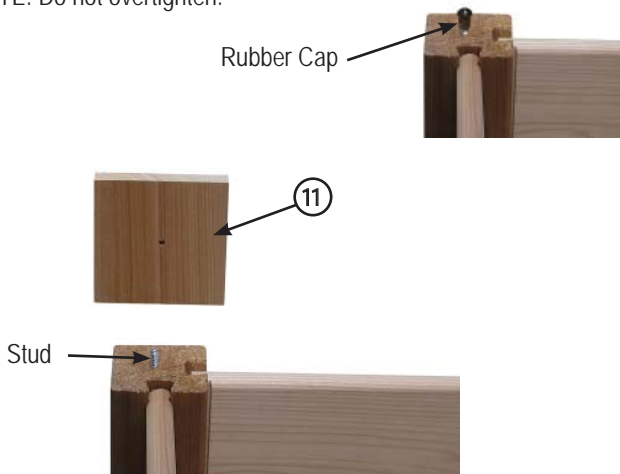

## 15 Table Top Board Installation

Place six 22" x 5-1/4" x 5/8" table top boards (Item 19) onto potting bench.

Place the 22" x 2-3/4" x 5/8" table top filler board (Item 14) onto the potting bench.



