


1 Parts Identification

Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

If any pieces are missing or replacement parts are required, contact Gronomics at 1-855-299-6727.

NOTE: Ground preparation is optional, however we recommend leveling area under frame of product, or place product directly on a flat level surface before filling with soil.

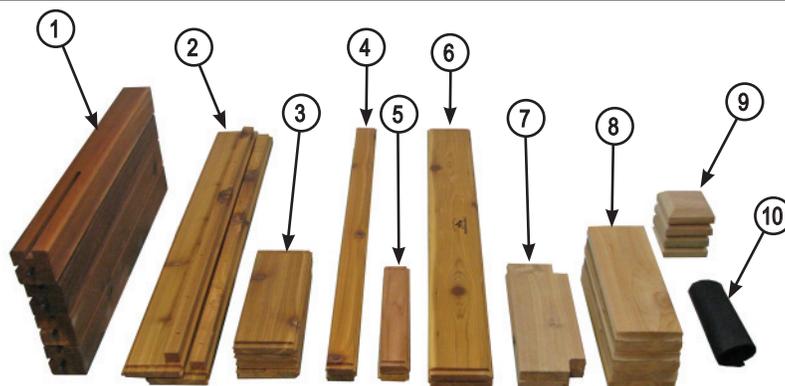

Parts List

ITEM	QTY.	PART #	DESCRIPTION
1	4	3200E	Corner Post, 4" x 4" x 32" w/2 dovetailed sides 12-3/4
2	2	3102T	Side Rail w/Cleat, 31" x 5-1/4" x 7/8"
3	4	1450T	Side Rail, 14-1/2" x 5-1/4" x 7/8"
4	2	3101T	Side Rail Narrow Center, 31" x 2-1/2" x 7/8"
5	2	1451T	Side Rail Narrow Center, 14-1/2" x 2-1/2" x 7/8"
6	2	3101T, 3101TL	Side Rail (one w/Logo), 31" x 5-1/4" x 7/8"
7	2	1538NR	Corner Notched Bottom Board, 15-3/8" x 4-1/2" x 1"
8	4	1538	Bottom Board, 15-3/8" x 5-1/2" x 1"
9	4	4545	Post Cap, 4-5/8" x 4-5/8" x 1-1/2"
10	1	FL3622	Fabric Liner 36"x 52"

Product Care and Maintenance

Western Red Cedar will turn a weathered grey if left unfinished. Although no finish is required for cedar when used outdoors, a natural oil finish applied regularly will help maintain the beauty and minimize cracking and drying. It is recommended to use **Gronomics Garden Bed Oil (Item # GBO-1Q)**, a non-toxic, food safe finish that is very easy to apply. Apply Oil when air and wind temperatures are between 50-90degrees. Avoid applying in direct sunlight.


2 Side Rail Assembly

Stand two 4" x 4" x 32" corner posts (Item 1) upright with slots facing you and slots facing each corner post.

Locate a 31" x 5 1/4 " side rail w/cleat (Item 2). With the cleat located at the bottom and facing you, install side rail w/cleat into the slots and slide down to the bottom of the slots.

Repeat procedure for the two remaining corner posts and 31" x 5-1/4 " side rail w/cleat.

(Soil depth option: Cleats located as shown will provide a soil depth of approximately 10". Reverse side rail w/ cleat installation, cleats located at top, if a soil depth of approximately 6" is desired).

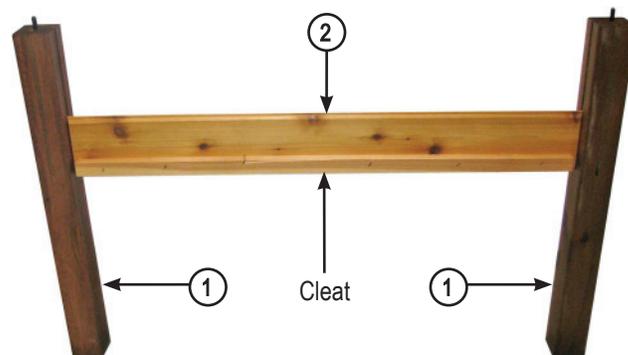


Packaged & Inspected by:

Date:

Continued

3 End Rail Assembly


Install two 14" x 5-1/4" side rails (Item 3) (with the groove down) into the slots and slide down to the bottom of the slots.

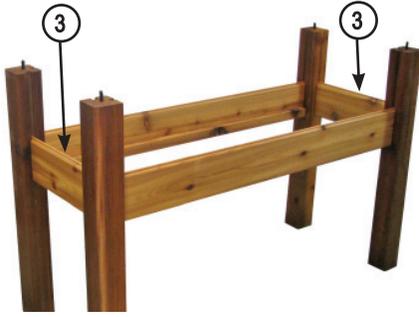

4 Narrow Center Side Rail Assembly

Install two 31" x 2-1/2" side rails (Item 4) into the slots on each side of the garden bed and slide down.


Install two 14" x 2-1/2" side rails (Item 5) into the slots on each end of the garden bed and slide down.

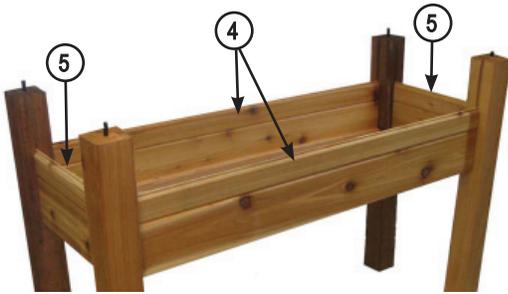

5 Final Side Rail Assembly

Install two 31" x 5-1/4" side rails (Item 6) (one with Logo) into the slots on each side of the garden bed and slide down.

Install two 14" x 5-1/4" side rails (Item 3) into the slots on each end of the garden bed and slide down.

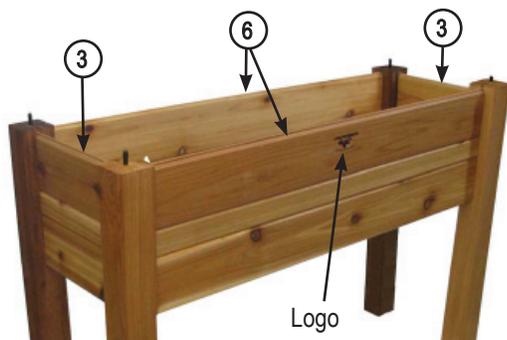

6 Bottom Board and Fabric Installation

Place one 15" x 5-1/2" corner notched bottom board (Item 7) on each end of the garden bed.

Place six 15" x 5-1/2" bottom boards (Item 8) into the garden bed. (Gap boards evenly to allow for water drainage).

Place fabric liner into the garden bed.

Soil Depth: approximately 12-1/2"

Soil Capacity: 3 Cubic Feet



7 Post Cap Assembly

Remove the rubber cap from the corner posts studs.

Align the hole of the 4" x 4" post cap (Item 9) with stud and tighten until the cap makes contact with the post.

NOTE: Do not overtighten.

Repeat procedure on all posts.

