


INSTALLATION GUIDELINES


3-WAY ROOF EDGE

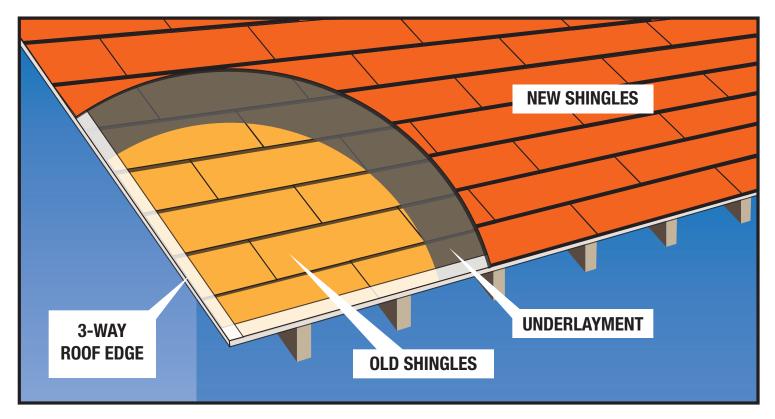

Recover: Applying a new, additional layer of shingles on top of an already existing shingle roof. Typically, the maximum number of layers allowed is two, on roofs with a 4/12 slope or less.

Trim any curled shingle corners and remove any curled tabs, replacing them with flat shingle scraps. Install 3-Way Roof Edge on rakes and eaves, leaving a neat protected edge.

Start with the eave edge then the rake. Overlap sections at least 2 inches. 3-Way Roof Edge should be nailed every 12 inches or more nails in highwind conditions.

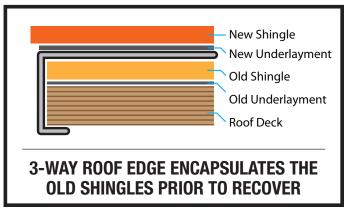



CAUTION!

Working above grade is inherently dangerous, be sure that proper fall protection measures are in place. When working with power tools and sheet metal, gloves and eye protection are absolutely required.

These installation guidelines are for use with typical or standard applications. Refer to SM-Rib installation guide for panel and flashing install details. It is always recommended to seek advice from a licensed professional, and to check with your local building inspector or building permit office for approvals and possible variations that may apply.