

ORNAMENTAL FENCE PANEL

2 - Rail, Flat Top/Flat Bottom

Model No. NAR7942-T

VISIT OUR WEBSITE @ <http://www.xcelfence.com>



Please read these instructions carefully before installing your fence panels. If you have any questions or need assistance with installing the fence, please contact us at 866-392-0808 for assistance. Installation video also available via e-mail.

Item Description

Fence installation and assembly has never been so easy to install until now. Our non-welded component fence panel system allows you to assemble a fence panel in matter of minutes. No welding needed, and our knocked down style packaging allows you to install a fence panel at the "job site" with ease. Built from strong wrought iron, pre-galvanized inside and out and double-powder coated in black.

Features

- 2-Rail, Flat Top/Flat Bottom
- 4'H x 6.5'W (Actual 45"H x 76"W)
- US Patented Design allows DIY Assembly with Ease
- No Welding or Painting Required
(Snap together Concept/Powder Coated Black)
- On-site assembly
- Zero Maintenance
- Easily Transported/Compact Box
- Complete Panel in a "Box"

Package Contents

- 2 Rails (1 Thru – Bottom Rail & 1 Closed – Top Rail)
- 16 Pickets
- 4 Brackets
- Installation Instructions

Before You Begin ...

Check your local zoning laws.

- Local zoning laws and HOA may regulate the location, type and height of your fence.
- If needed, contact local utility companies for assistance in clearing electrical, gas or water lines to avoid hitting any unseen underground utilities.


Sketch Plan and Confirm Materials

- Draw and sketch out your fence plan. Plan the location of corners and gates.
- Measure accurately with tape measure and identify all measurements on your drawing.
- Make sure all location of fence lines and gates are carefully planned.
- Determine total number of sections and posts needed.

Installation Tips


- Fence panels should be installed so that the bottom of the fence is 2" above the ground level to allow for lawn maintenance/cutting.
- Once installed, the top of the post will be at the same height as the top of the tallest part of the fence panel.

Please Follow Measurements Below

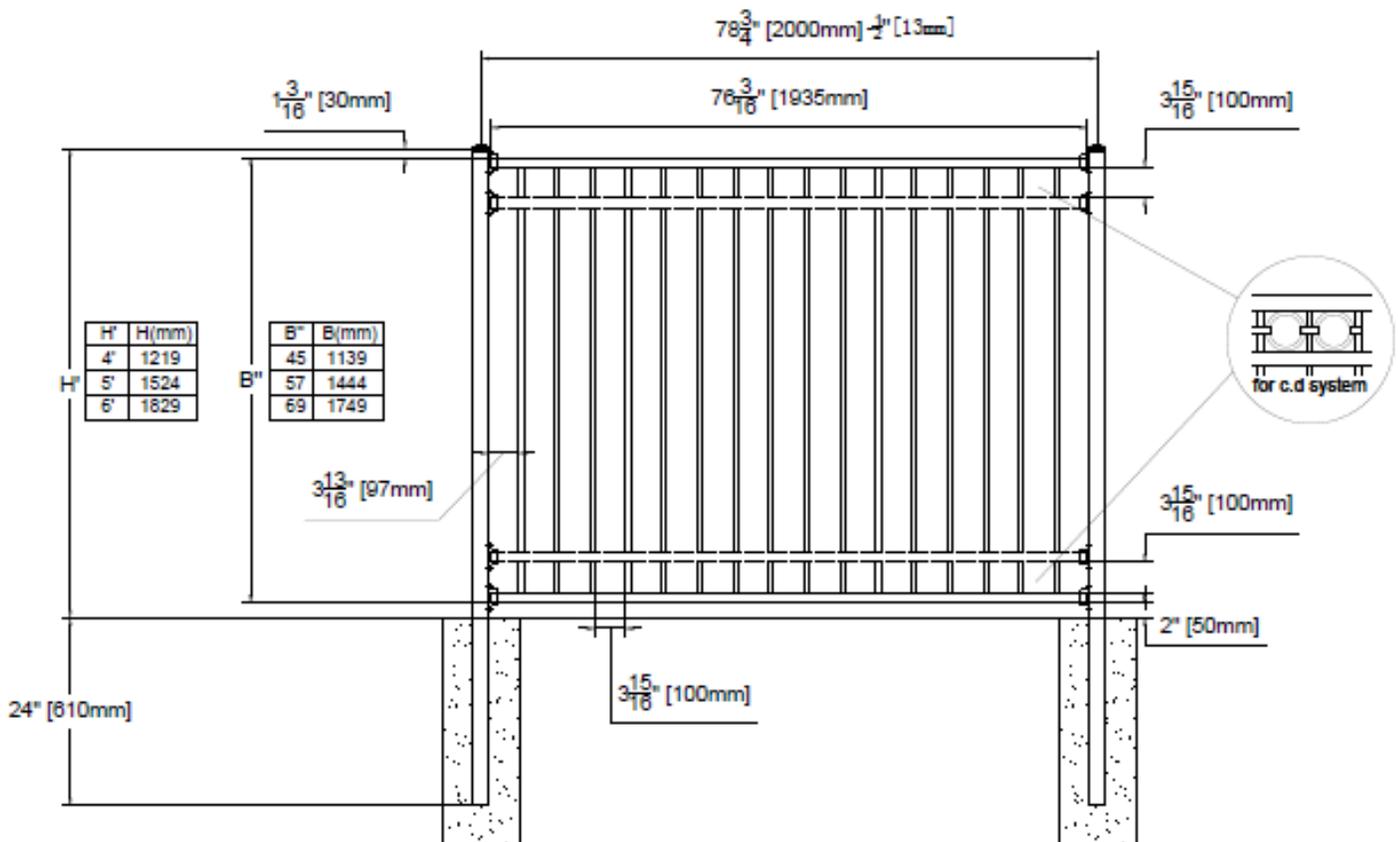


Installation Instructions (Panels ONLY)

1. Locate Top Rail (closed rail) and Bottom Rail (thru rail)
2. Place Bottom Rail on the Floor, facing Up
3. Insert individual Pickets into the Rail Holes
4. Make sure holes are facing to the Right and Left
5. Place Top Rail on opposite side of Pickets
6. Make sure Grommets face the Pickets

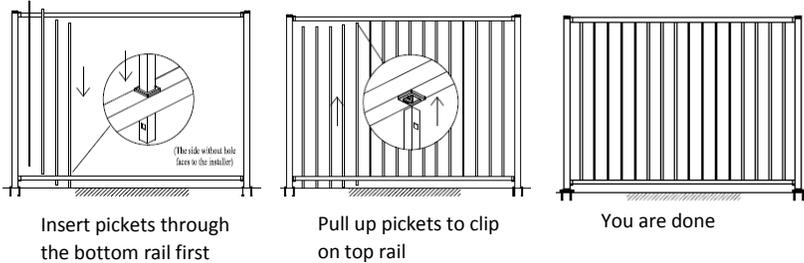

Installation Instructions (At Job Site)

1. Draw and measure layout of where the fence will be installed
2. Mark locations and distance between posts to 76" apart
3. Set posts (dig hole 18-24" deep or use Flange for concrete)
4. Use and attach brackets to posts
5. Install Rails to brackets (rails will follow your terrain)
6. Insert pickets through the bottom rail, then pull up to attach the top rail.
7. You are done!

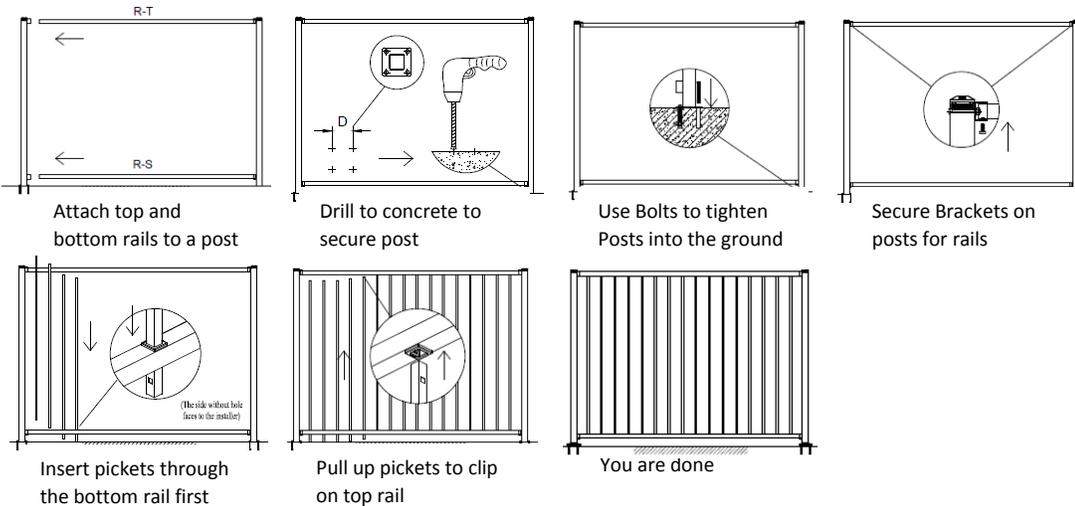

THANK YOU FOR PURCHASING OUR FENCE PANELS!

ATTENTION:

PLEASE MAKE SURE ALL CONTENTS ARE IN THE FENCE KIT.

DO NOT ATTEMPT TO ASSEMBLE THE FENCE IF PARTS ARE MISSING OR DAMAGED.

Please do not return the product to the store, for assistance or replacement parts call:

866-392-0808