



Findyourniche



VERSATILE AND MODERN



# MÖD BOOKCASE NBC2930, NBC4230, NBC6530, NBC7230

## ASSEMBLY INSTRUCTIONS

### BEFORE YOU ASSEMBLE:

- Place all parts on a clean, smooth surface to avoid scratching the parts
- Check to be sure you have all parts and hardware
- Remove all wrapping materials, including any staples & packing straps
- Keep all hardware, small parts and packaging out of reach of children

featuring



### IN THE BOX:

A: Bottom



C: Lip (2)



D: Shelf (Varies)



F: Back



B: Side (2)



E: Stringer



G: Top



H: Glide (4)



I: Shelf Pin (Varies)





Findyourniche



VERSATILE AND MODERN




## ASSEMBLY INSTRUCTIONS

## MŌD BOOKCASE NBC2930, NBC4230, NBC6530, NBC7230


### STEP 1

Attach **Bottom (A)** to one of the **Sides (B)** by lining up the E-Clips with the pre-drilled slots and sliding the pieces into place.  
(Note: *You may need a rubber mallet as the fit can be snug.*)

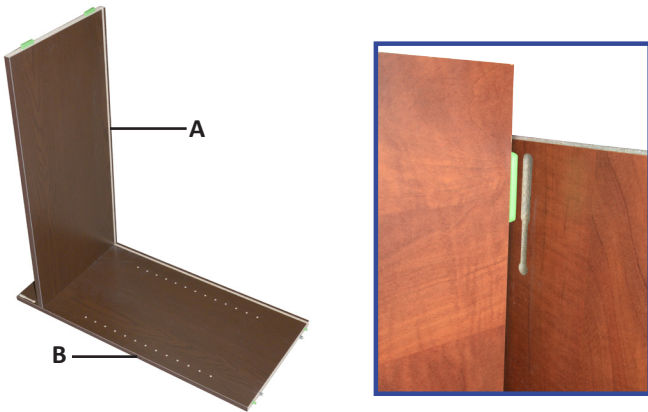


### STEP 2

Attach the other end of the **Bottom (A)** to the other **Side (B)** by lining up the E-Clips with the pre-drilled slots and sliding the pieces into place.

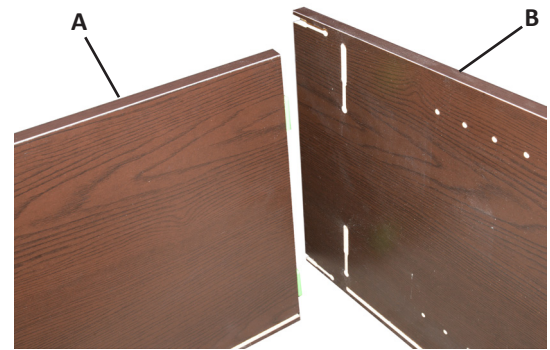


### STEP 3

Assemble the base by attaching the **Stringer (E)** to both **Lips (C)** by lining up the E-Clips with the pre-drilled slots and sliding the pieces into place.

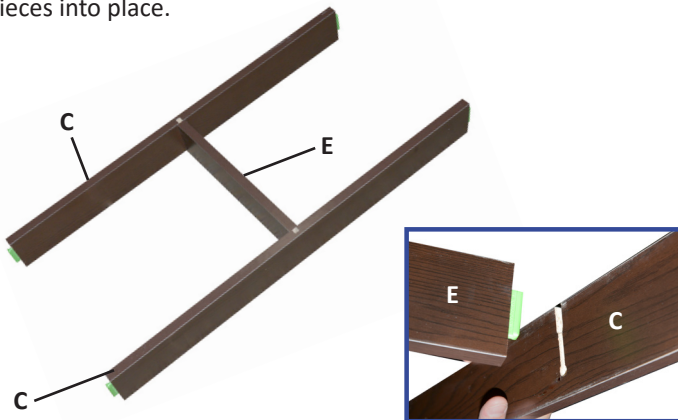

### STEP 4

Attach the assembled base to the **Bottom (A)** by lining up the E-Clips with the pre-drilled slots and sliding the pieces into place.

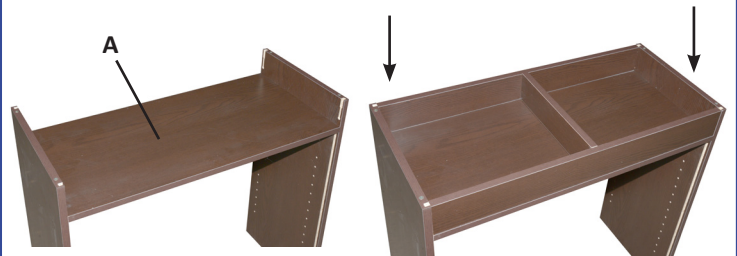





Find your  
niche



VERSATILE AND MODERN




## ASSEMBLY INSTRUCTIONS

## MÖD BOOKCASE NBC2930, NBC4230, NBC6530, NBC7230


### STEP 5

Slide the **Back (F)** along the slots in the **Sides (B)** until it engages with the bottom slot. (Note: *With larger bookcases, it is easiest to perform this step with the bookcase lying on its back.*)

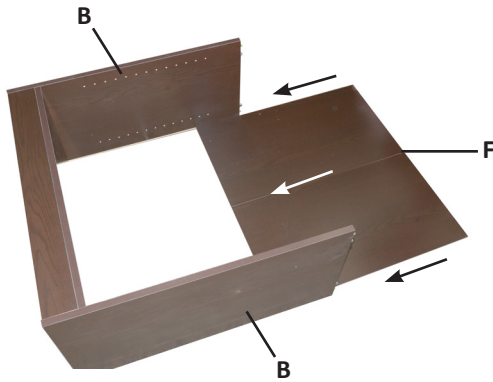


### STEP 6

Attach **Adjustable Glides (H)** to the bottom of the assembled bookcase, by inserting them into the pre-drilled holes in the **Sides (B)** and twisting them to your desired height.

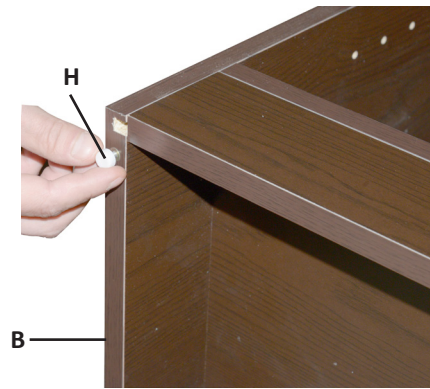

### STEP 7

Attach the **Top (G)** by lining up the pins and lockdowels with the pre-drilled holes on the **Sides (B)**, lining up the back with the groove in the underside of the **Top (G)** and pressing down into place.

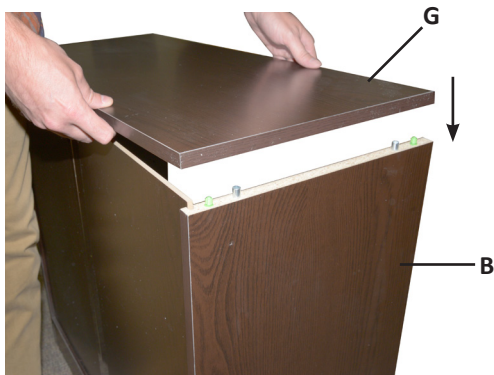

### STEP 8

Insert **Shelf Pins (I)** into pre-drilled holes in both **Sides (B)** where desired, and place the **Shelves (D)** on top of the **Shelf Pins (I)**.

