

















Assembly Instructions
Model 1569
Open Storage Cuisine Cart



GENERAL:

1. You have purchased model 1569. Overall dimensions of an assembled unit is 22 1/8" x 15 1/4" x 34"
2. Should you need assistance or need to replace a damaged or missing part, DO NOT RETURN THE UNIT TO THE STORE where you purchased it, simply give us a call at 607-652-7321 from 7:30 - 4:00 PM Eastern time and we'll send you the prepaid part via UPS usually that same day! Please have model number and part description ready when you call.
3. Read the assembly instructions and the enclosed brochure before beginning assembly. Assembly is very easy if you read and follow the instructions step by step.
4. Tools required: Phillips screwdrivers, medium and small; medium flat blade screwdriver and hammer.

CABINET PARTS

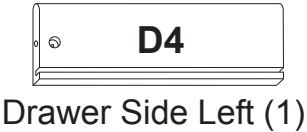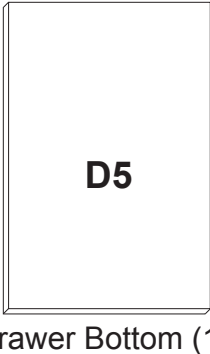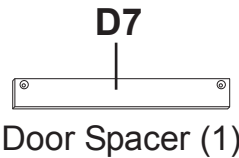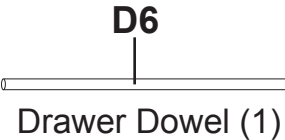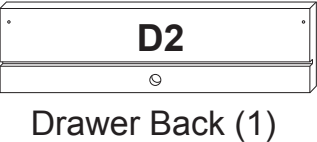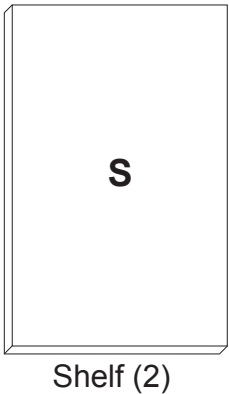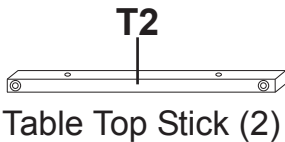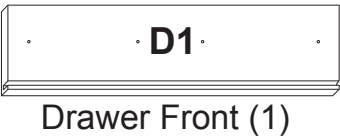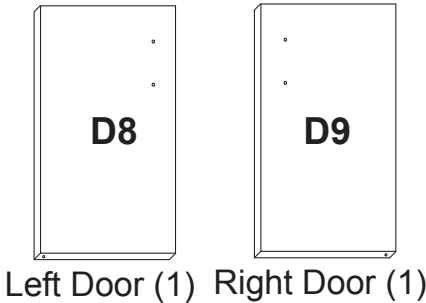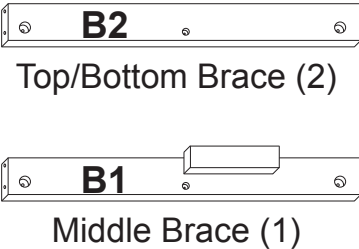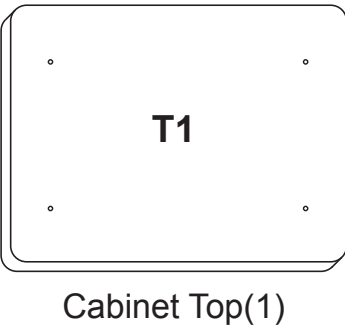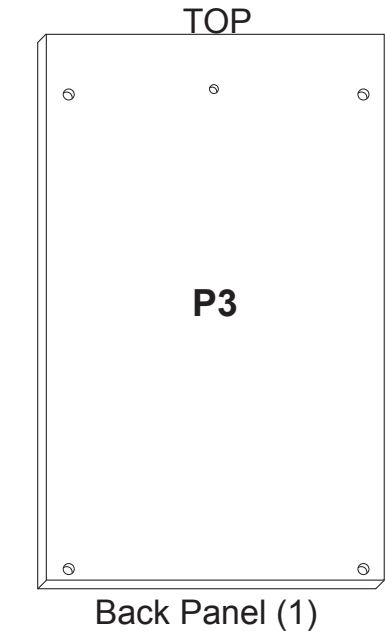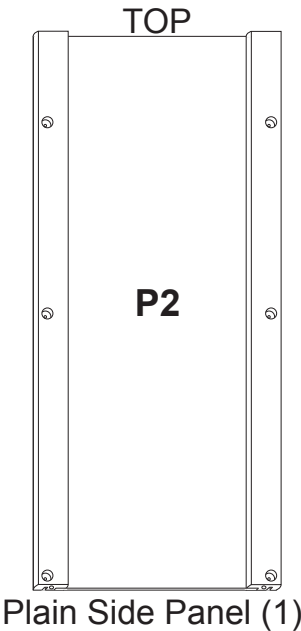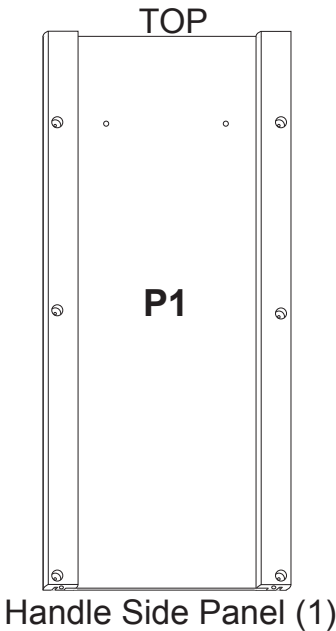

CABINET HARDWARE



1 3/4" Phillips Flat Head Machine Screw (10)



1 1/4" Phillips Flat Head #8 Screw (14)



5/8" Phillips Flat Head #8 Screw (2)




1/2" Truss Head Machine Screw (2)



1 1/4" Truss Head Machine Screw (2)



1 1/2" Long 3/16" DIA. Steel Pin (4)



1" Long 3/16" DIA. Steel Pin (8)



3/4" Long 3/16" DIA. Steel Pin (6)



included in
magnet pack

5/8" Pan Head Screw (2)




included in
magnet pack

1/2" Phillips Flat Head #4 Screw (1)




Magnet (1)




Magnet Plate (1)


included in
magnet pack

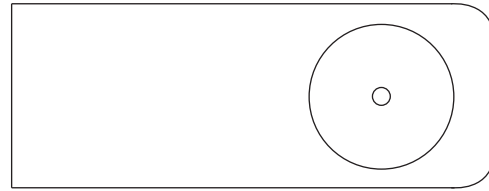

Towel Bar Post (2)



3/16" Flat Washer (4)




Cam (2)




10-24 Hex Nut (10)




5/8 Wooden Disk (12)




Cam Posts (2)

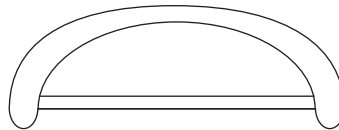


Cup Handle (1)




Door Knob (2)

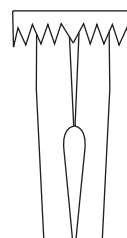

Caster Socket (4)

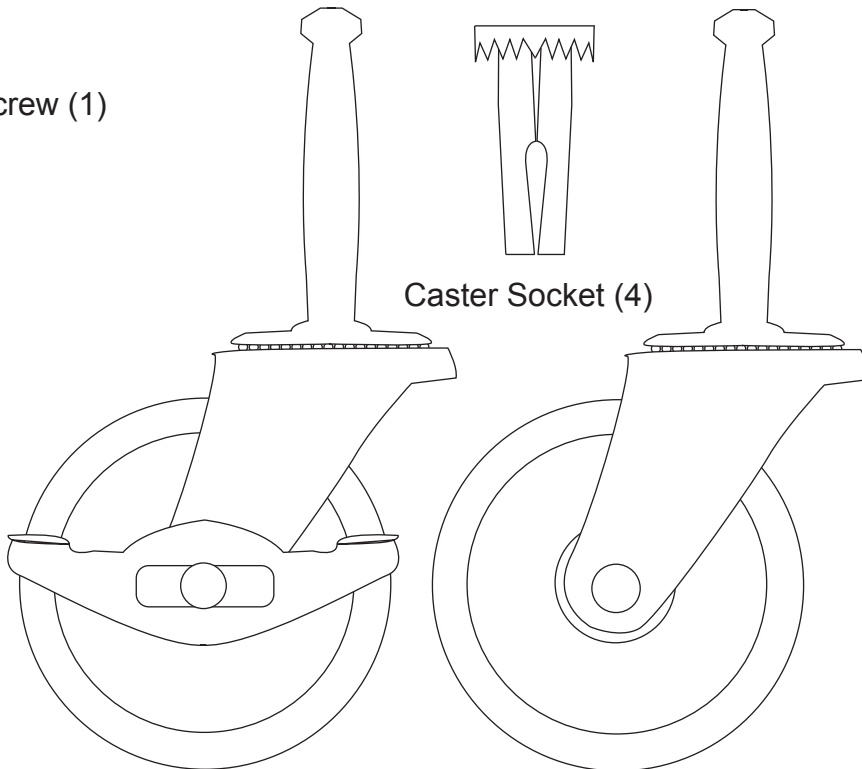


Locking Wheel Caster (2) Non Locking Wheel Caster (2)

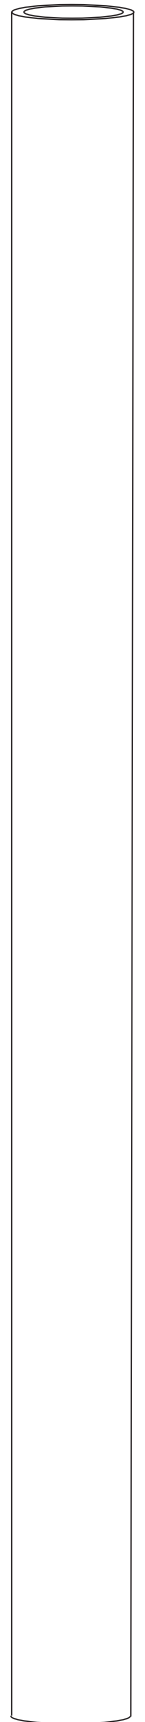


Polished
Nickel Towel
Bar (1)


STEP 1

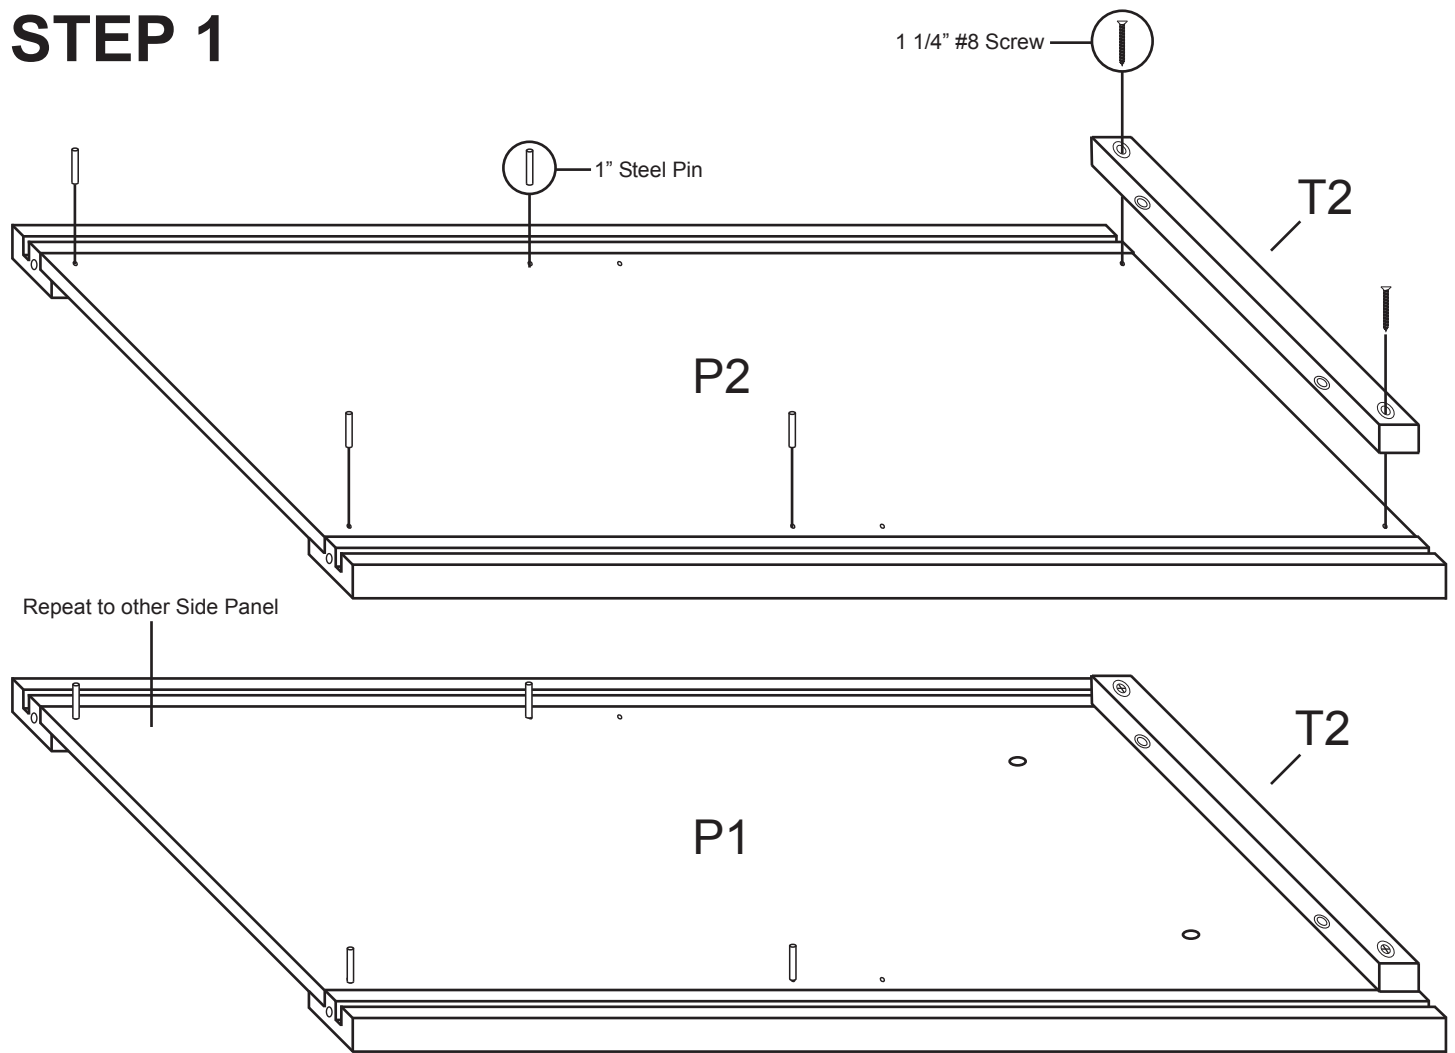

STEP 2

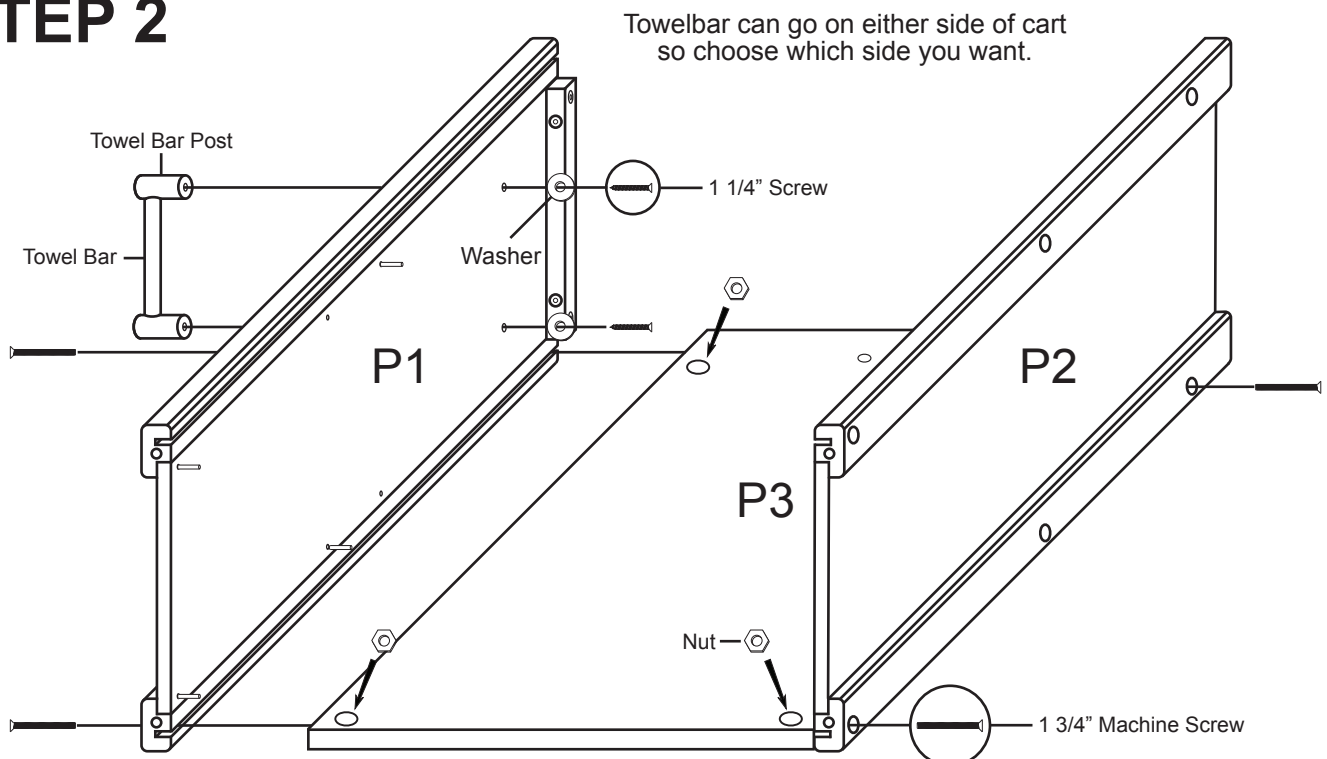

STEP 3

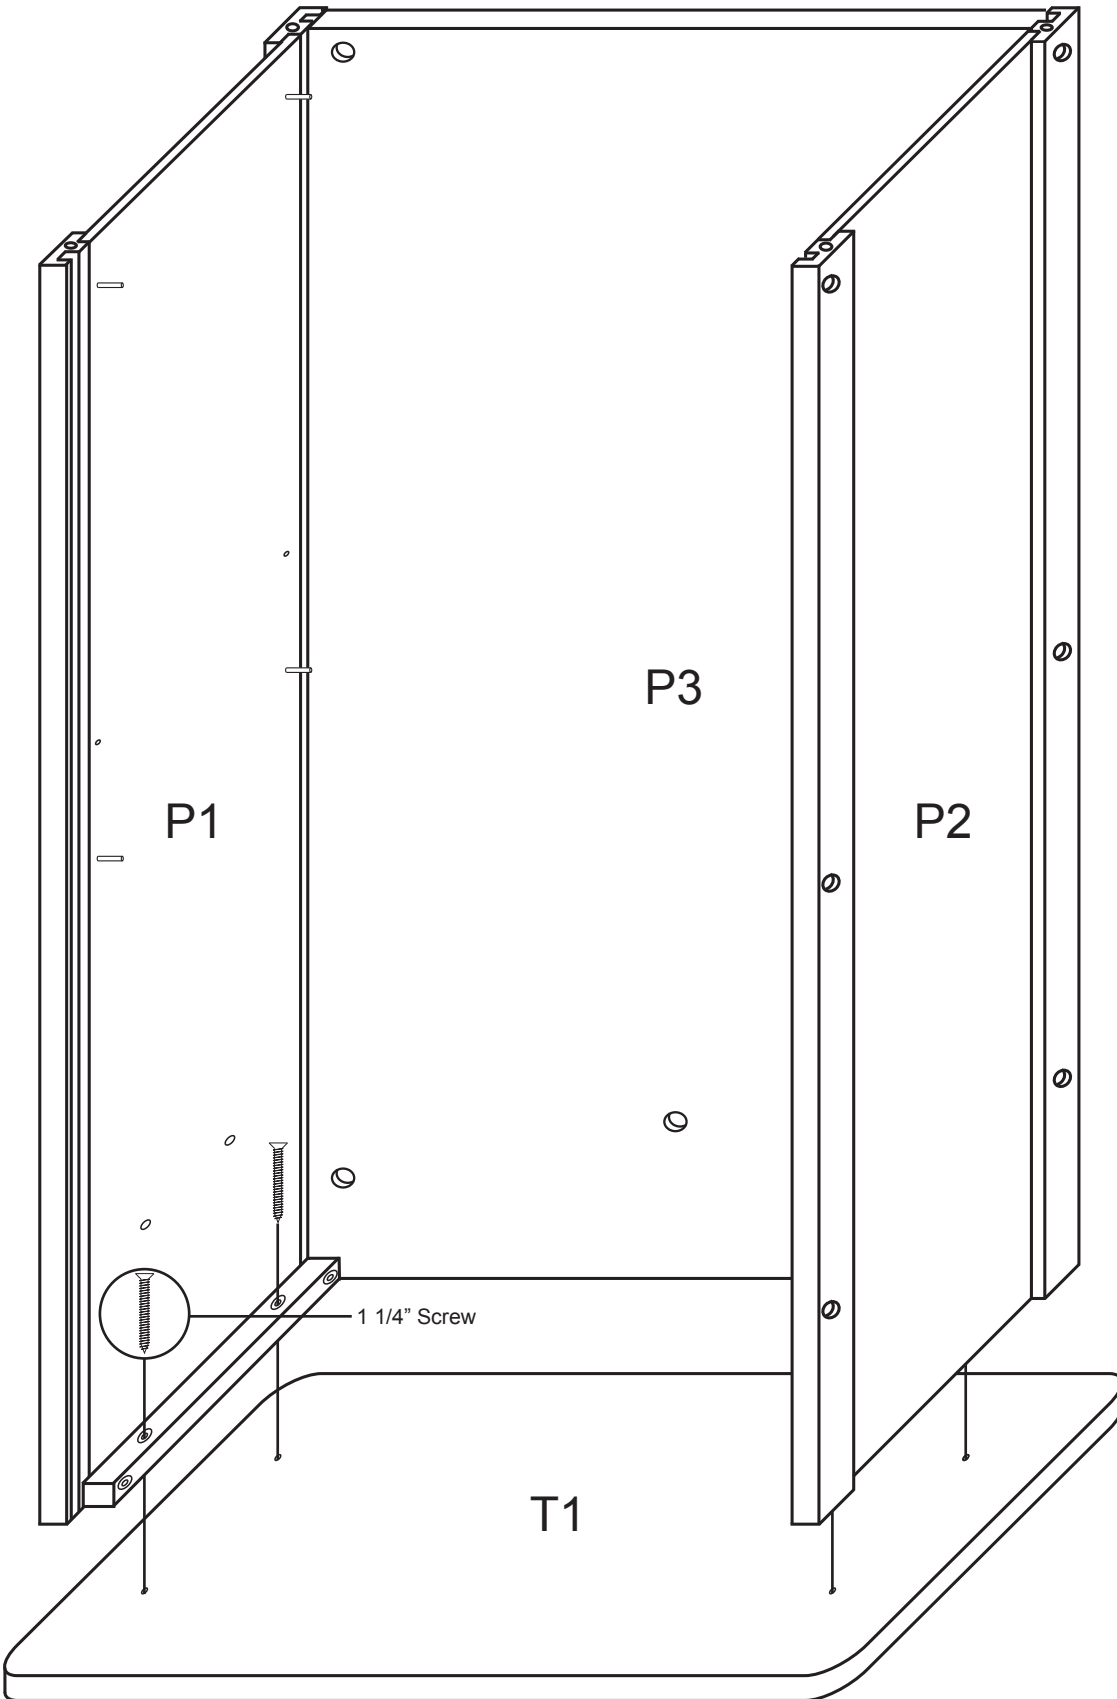

STEP 4

A. Attach the drawer back to the drawer sides with four 1 1/4" #8 screws. Make sure parts are aligned as in illustration 4A.

B. Insert drawer bottom into the slots in the drawer sides, best side to inside of drawer. Slide down until seated in the slot in the drawer back.

See illustration 4B.

C. Screw the cam posts into the two outside holes on the inside face of the drawer front until seated. Only 3/8" of this post goes into the wood, leaving the 4 guide rings/head exposed. See illustration 4C.

D. Insert the posts into holes in the drawer sides until seated against the front end of the drawer sides. Insert cams so that slot in the cam fits over the post and turn with Phillips screwdriver until seated. Don't over-torque! See illustration 4D.

E. Attach drawer handle with the two handle screws (no illustration).

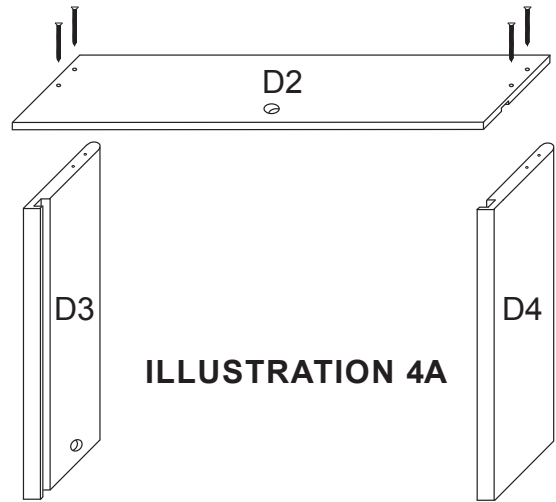


ILLUSTRATION 4A

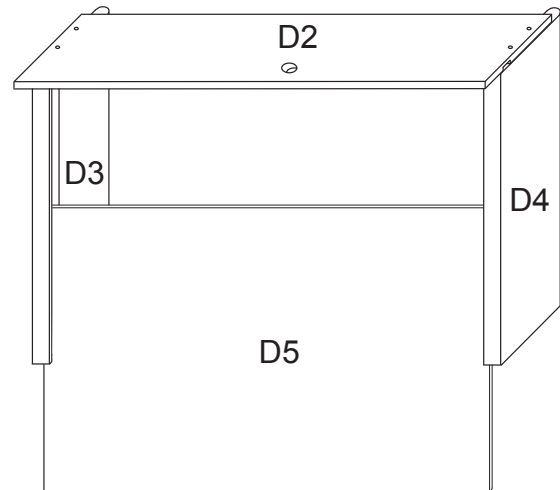


ILLUSTRATION 4B

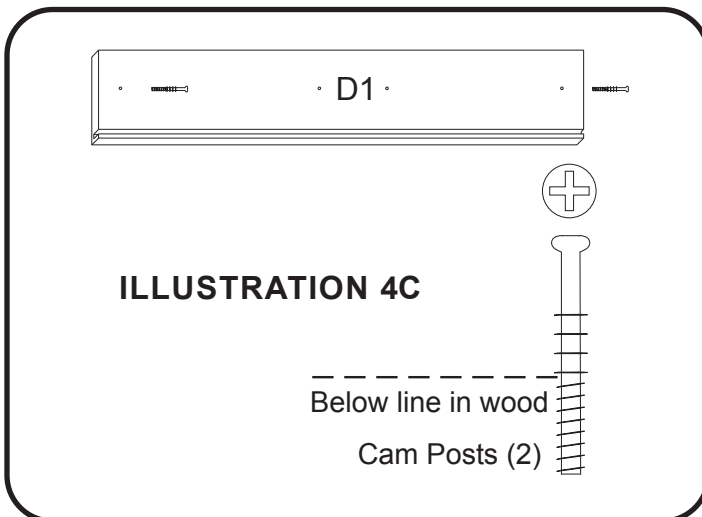


ILLUSTRATION 4C






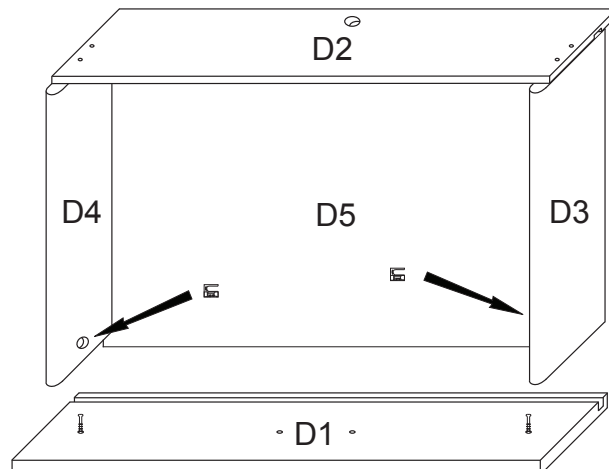


ILLUSTRATION 4D


STEP 5

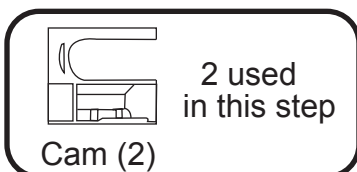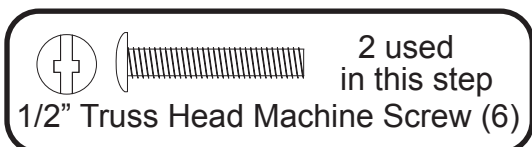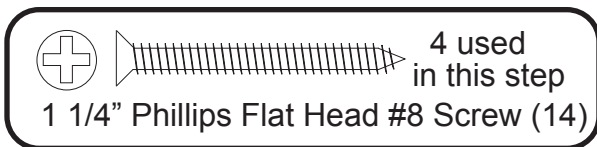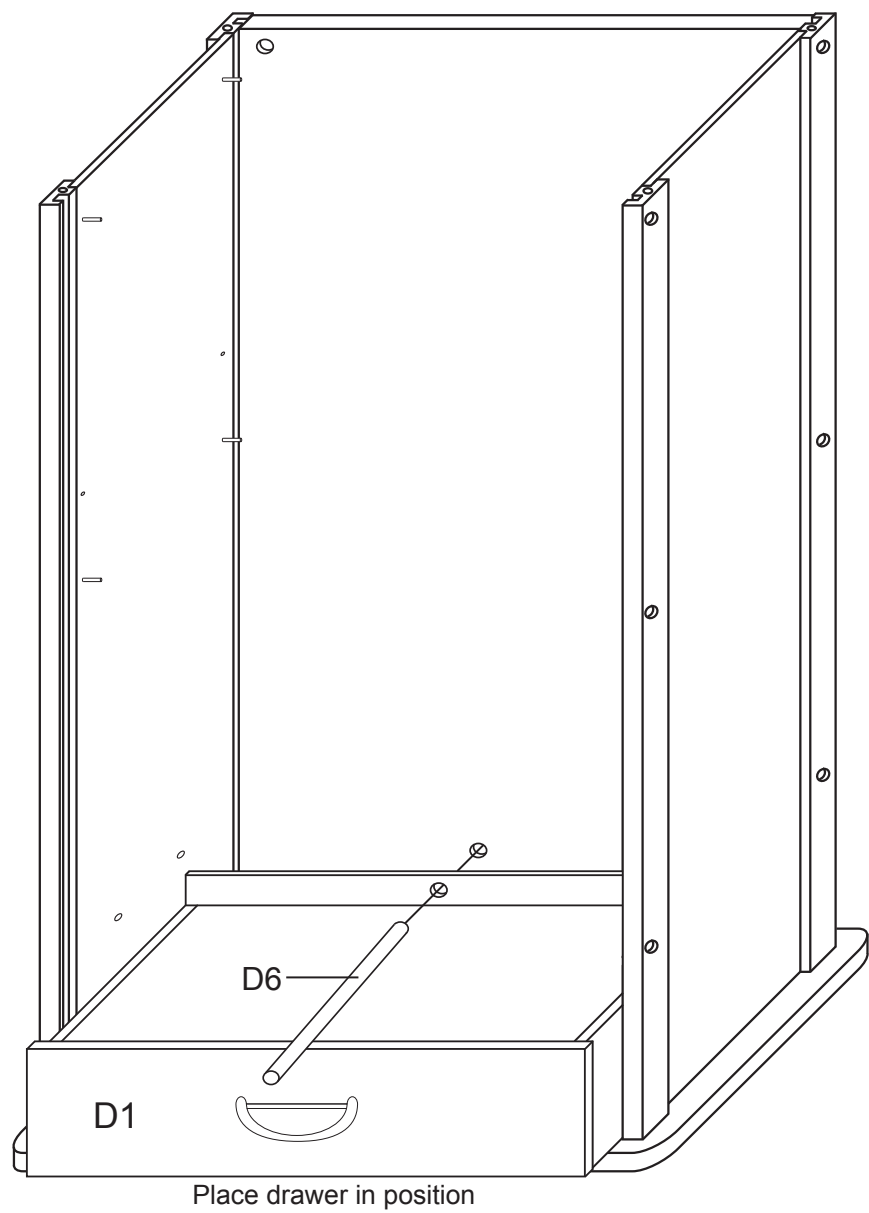


STEP 6

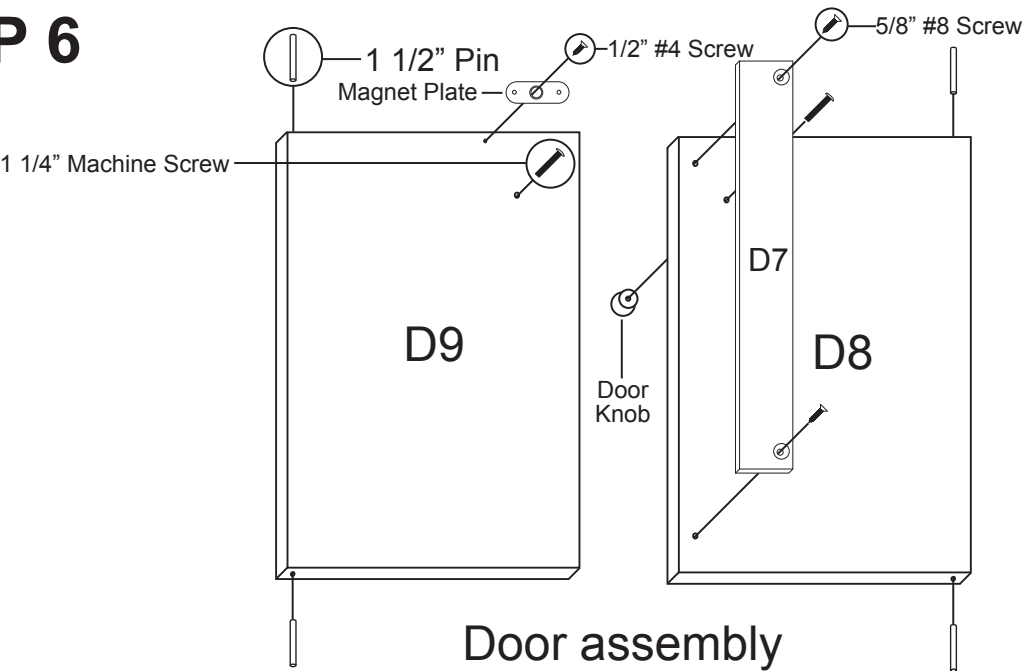


STEP 6

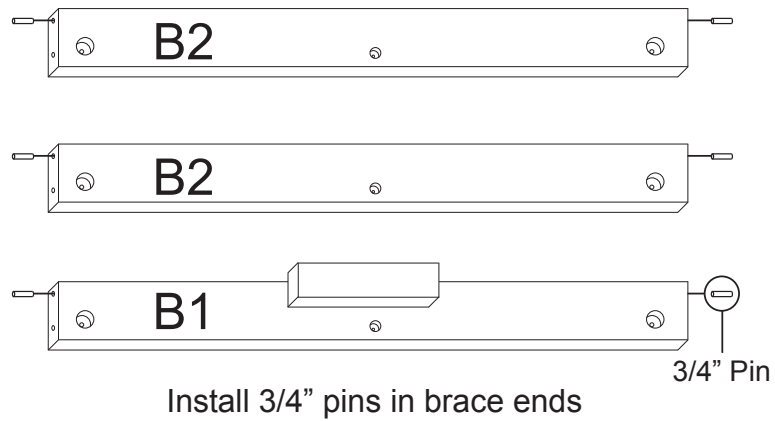


STEP 7

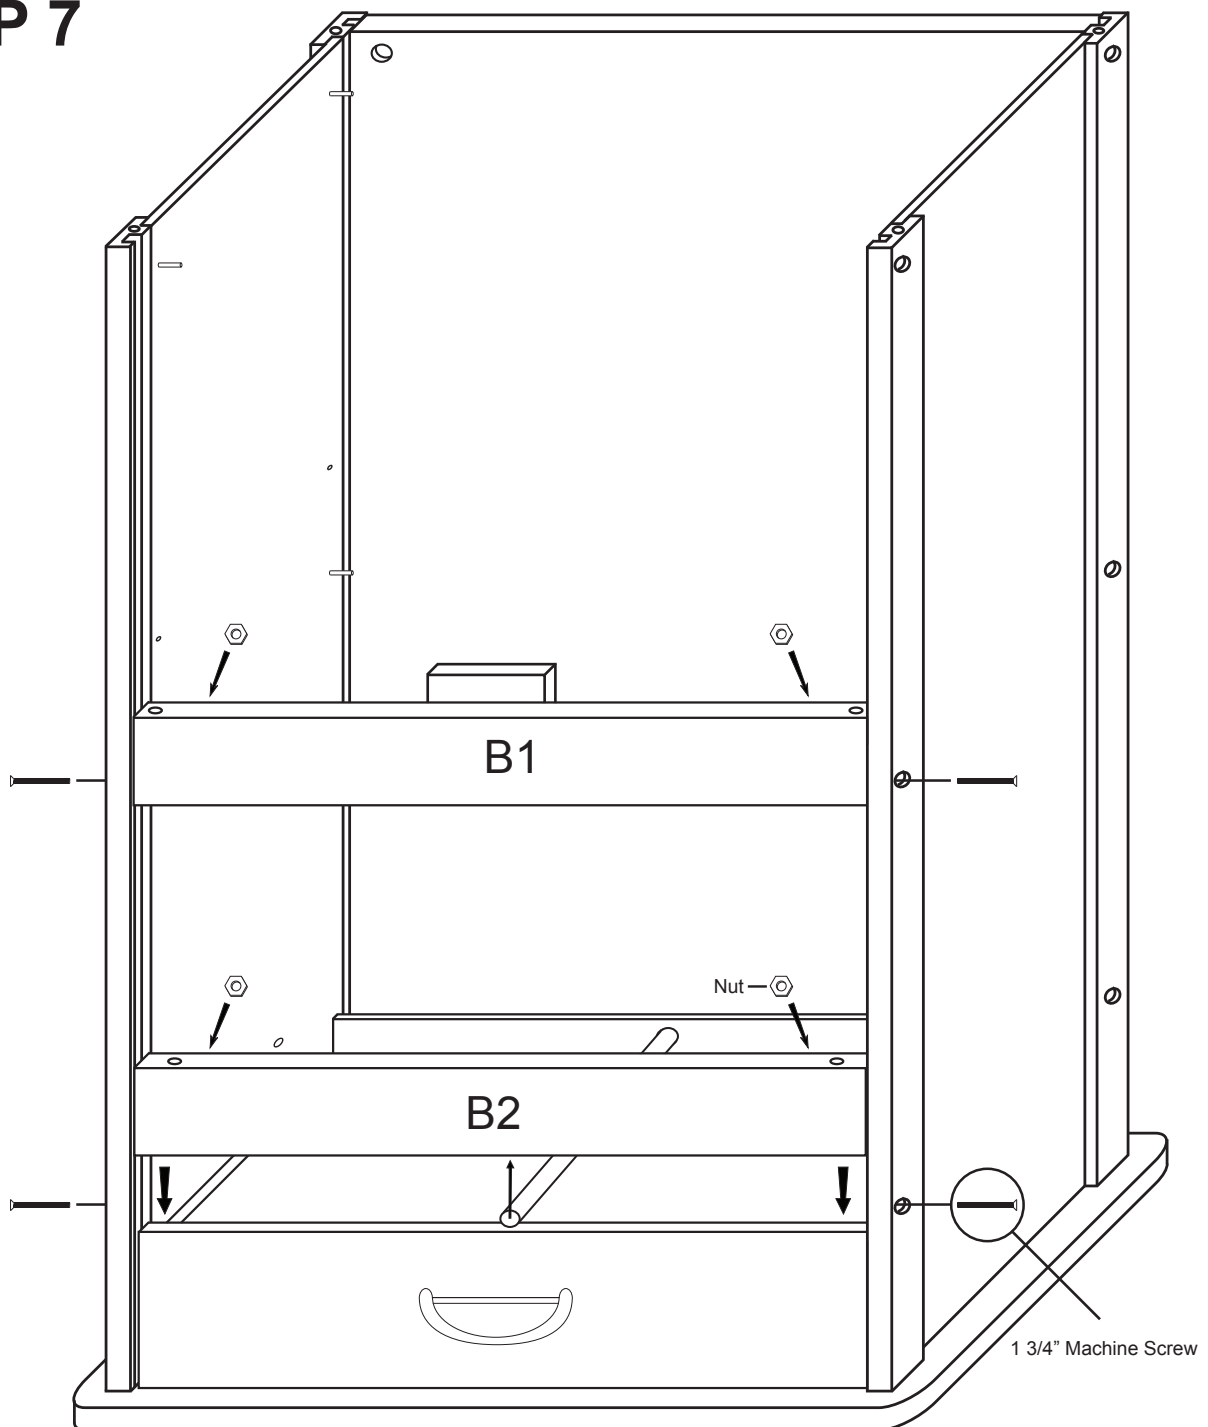

STEP 7

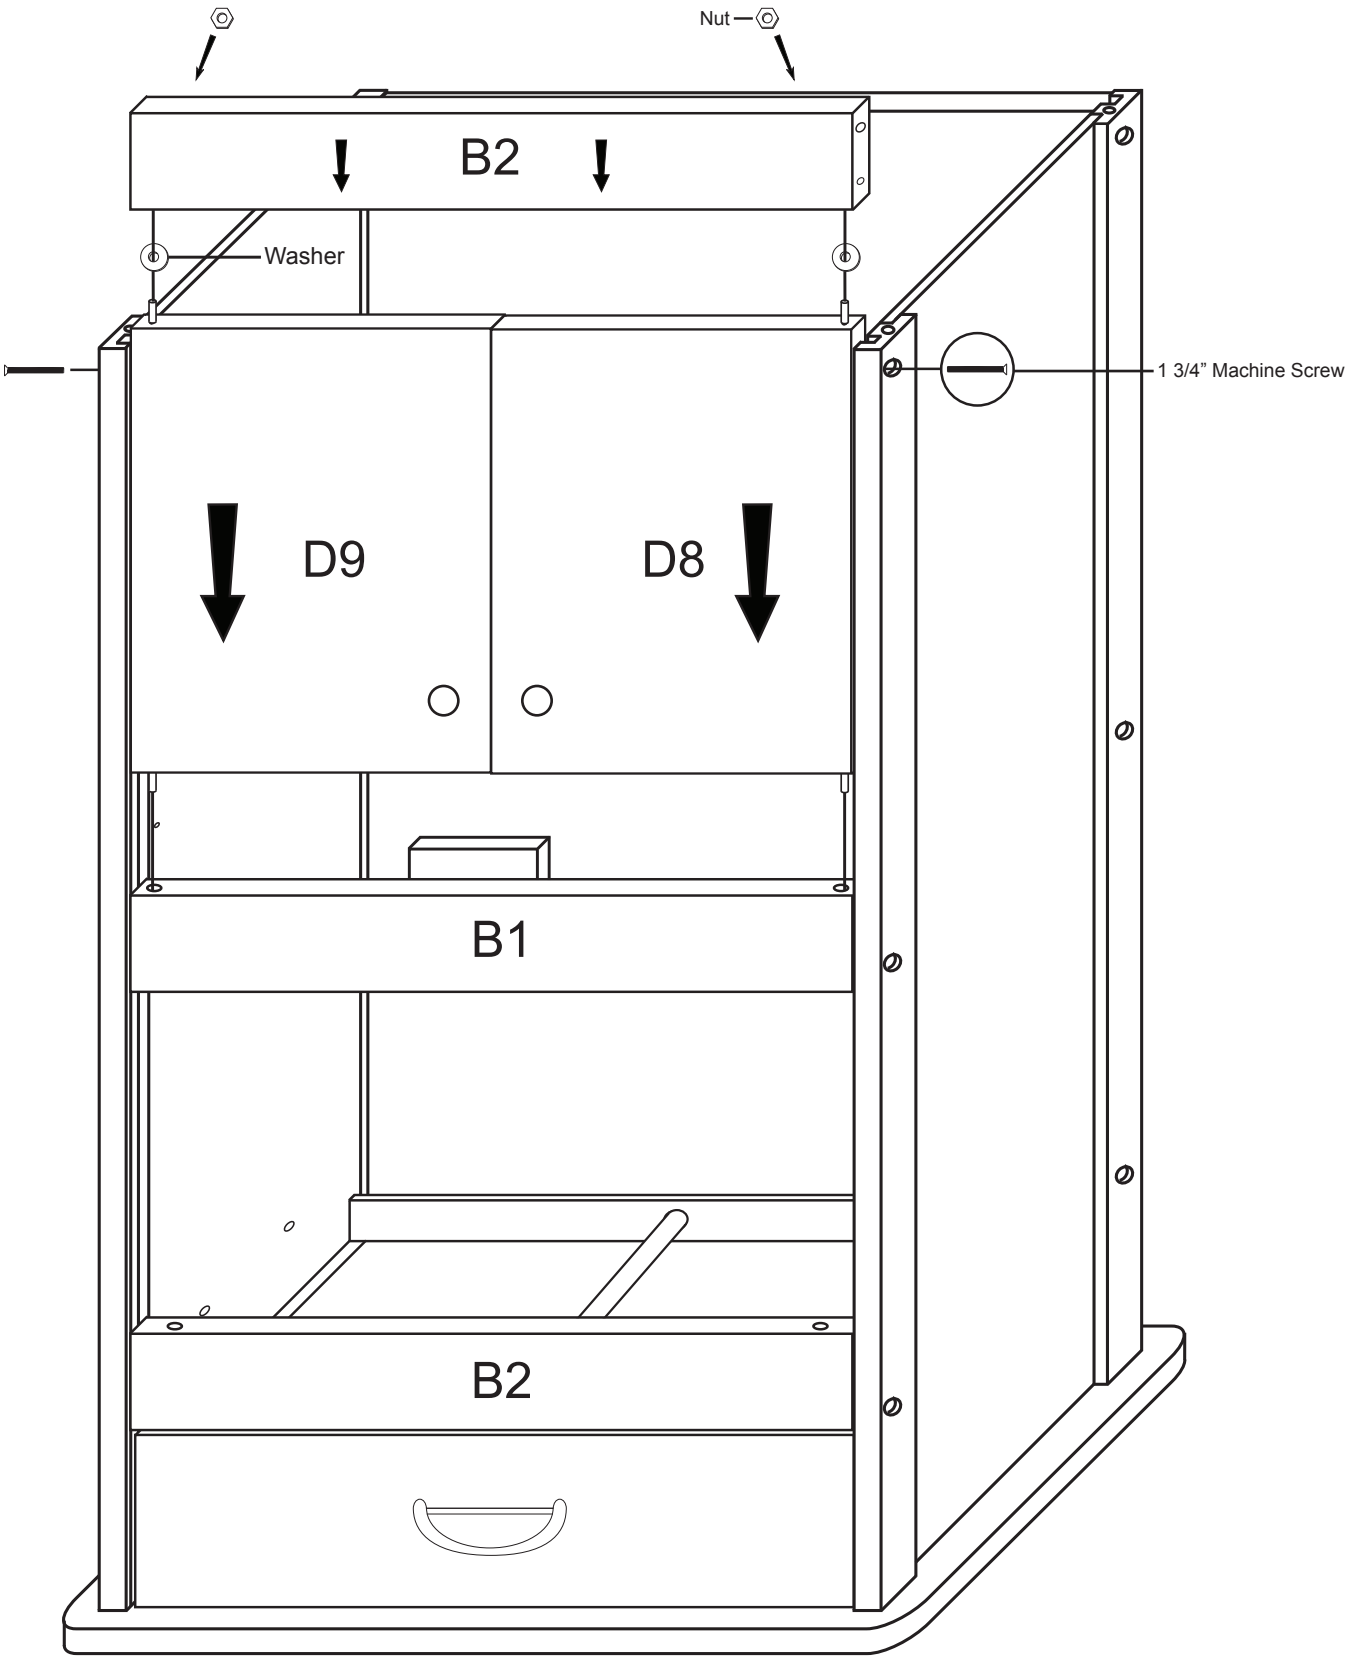

STEP 8

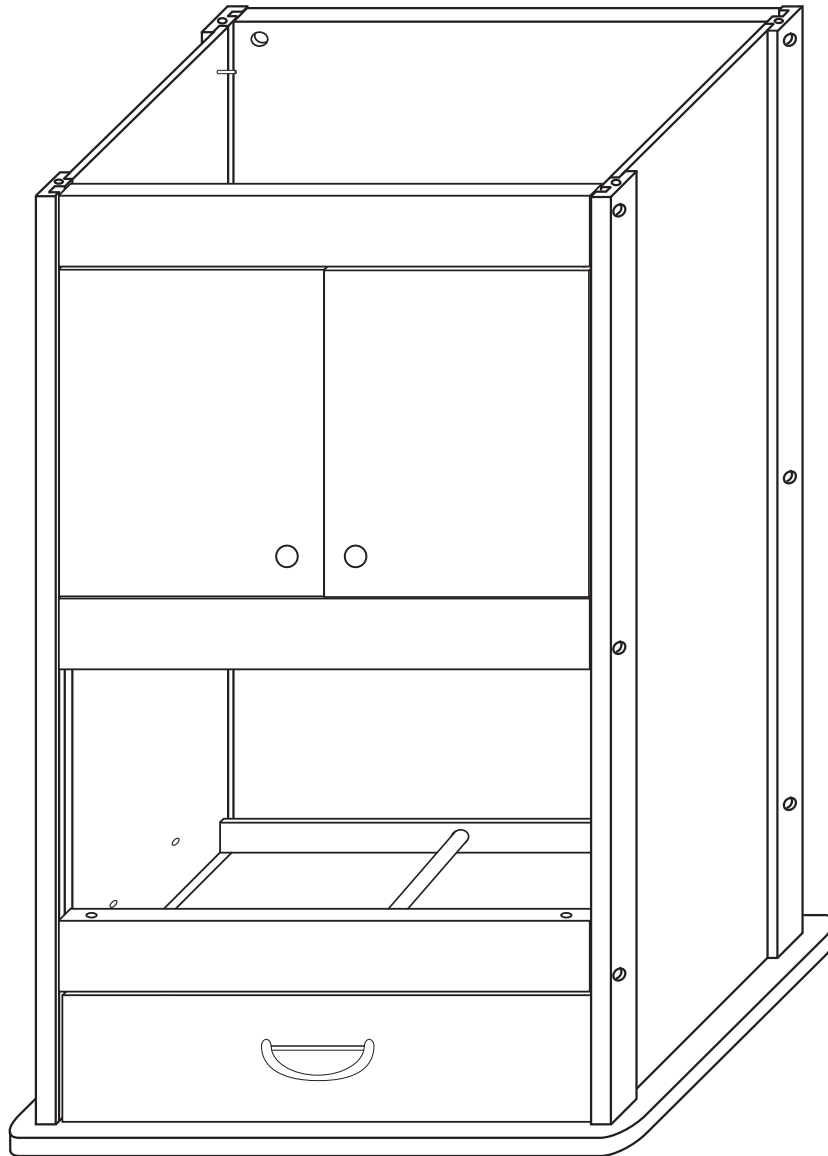


A. Stick magnet to magnet plate on right door.

B. With left door open, close the right door. The magnet should be positioned over the wooden block on the bottom of the top front brace. Hold the magnet in place with your thumb, and open the right door. The magnet will be in the correct position on the block.

C. Secure magnet with the two round head screws in the magnet packet. Center screws in the slots in the magnet. This will allow adjustment later, if needed.

NOTE: No pilot holes in block, as softwood!

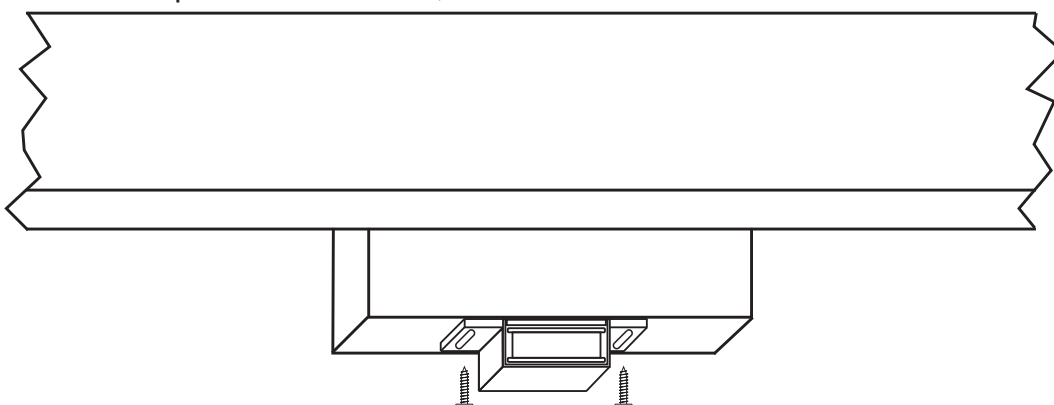


2 Used
in this step

5/8" Pan Head Screw (2)



Magnet (1)

STEP 9

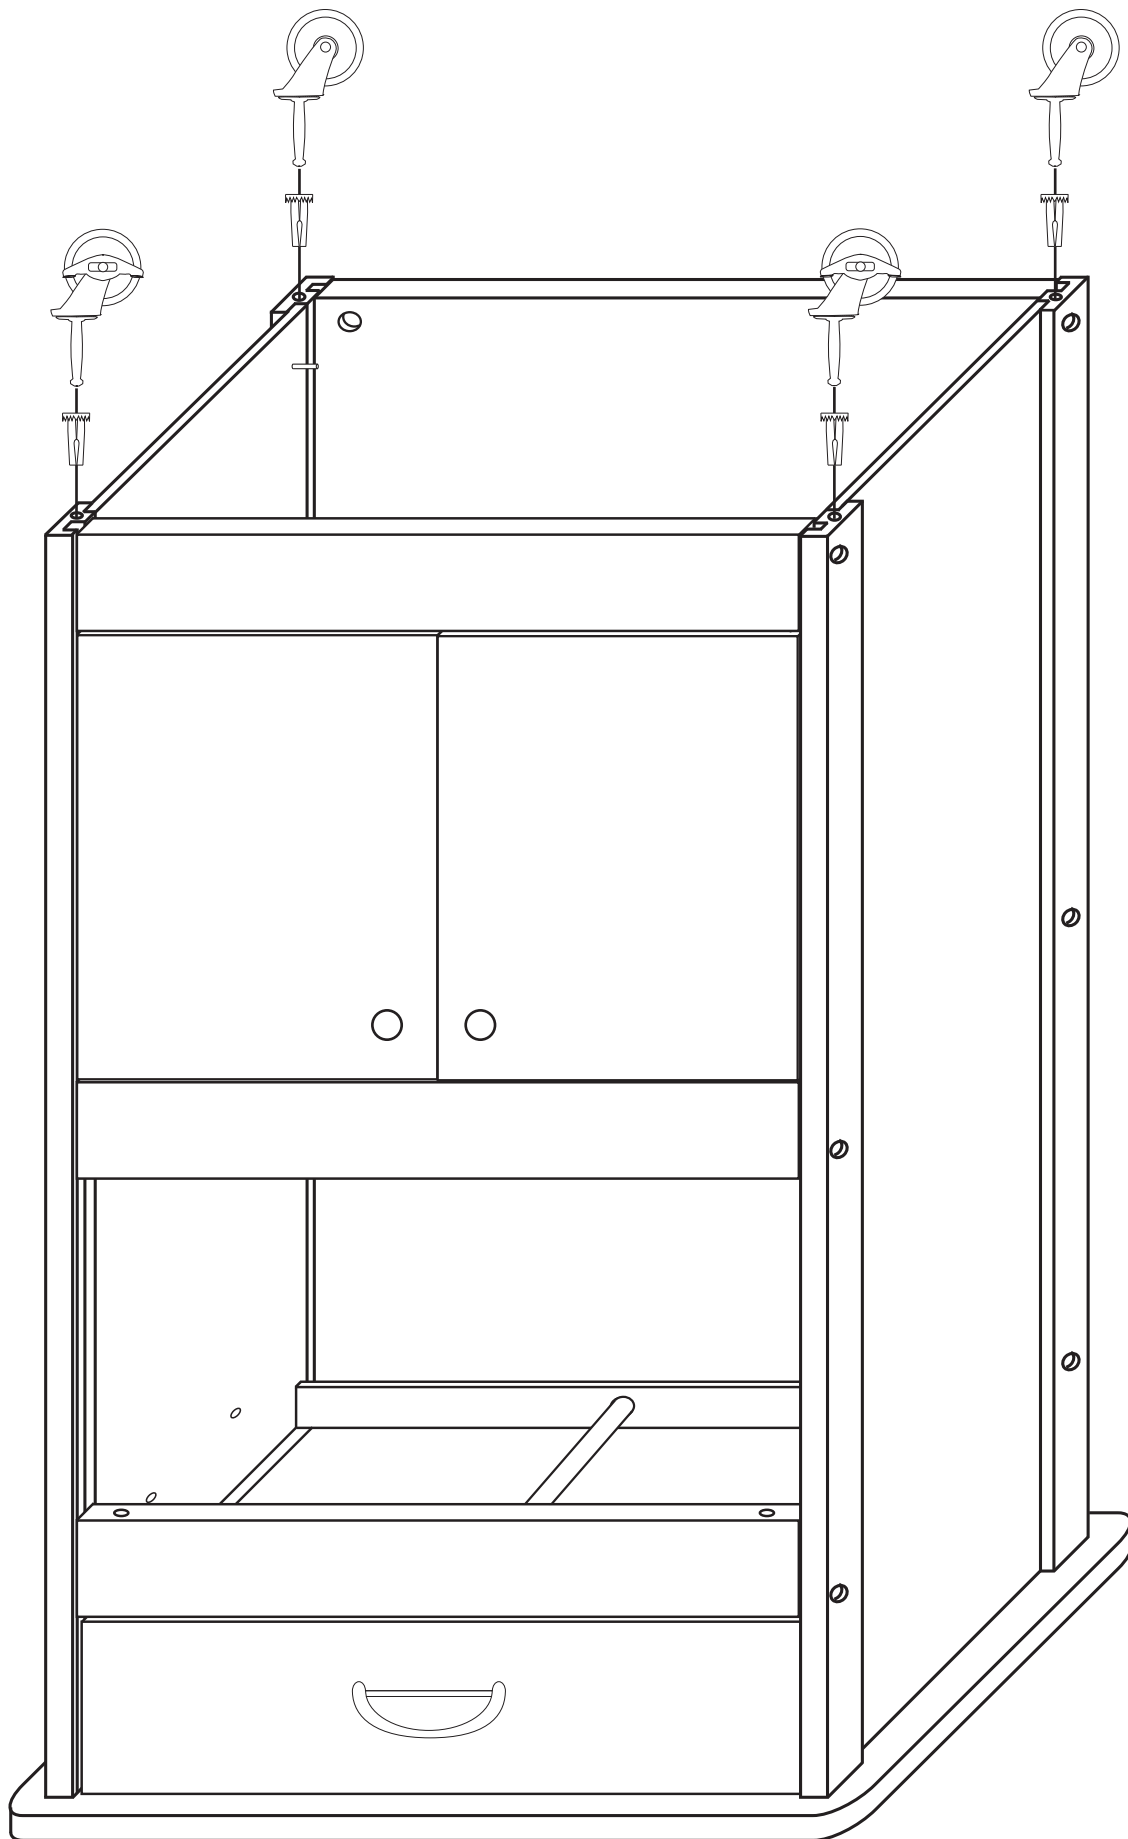

STEP 10


Attach handle/towel bar to side panel with 1 1/4" #8 screws from inside side panel.

NOTE: Put washers in between the screws and the Side Panel so the screws don't pull through the Side Panel.





2 Used in this step

1 1/4" Phillips Flat Head #8 Screw (12)





2 Used
in this step


3/16" Flat Washer (2)

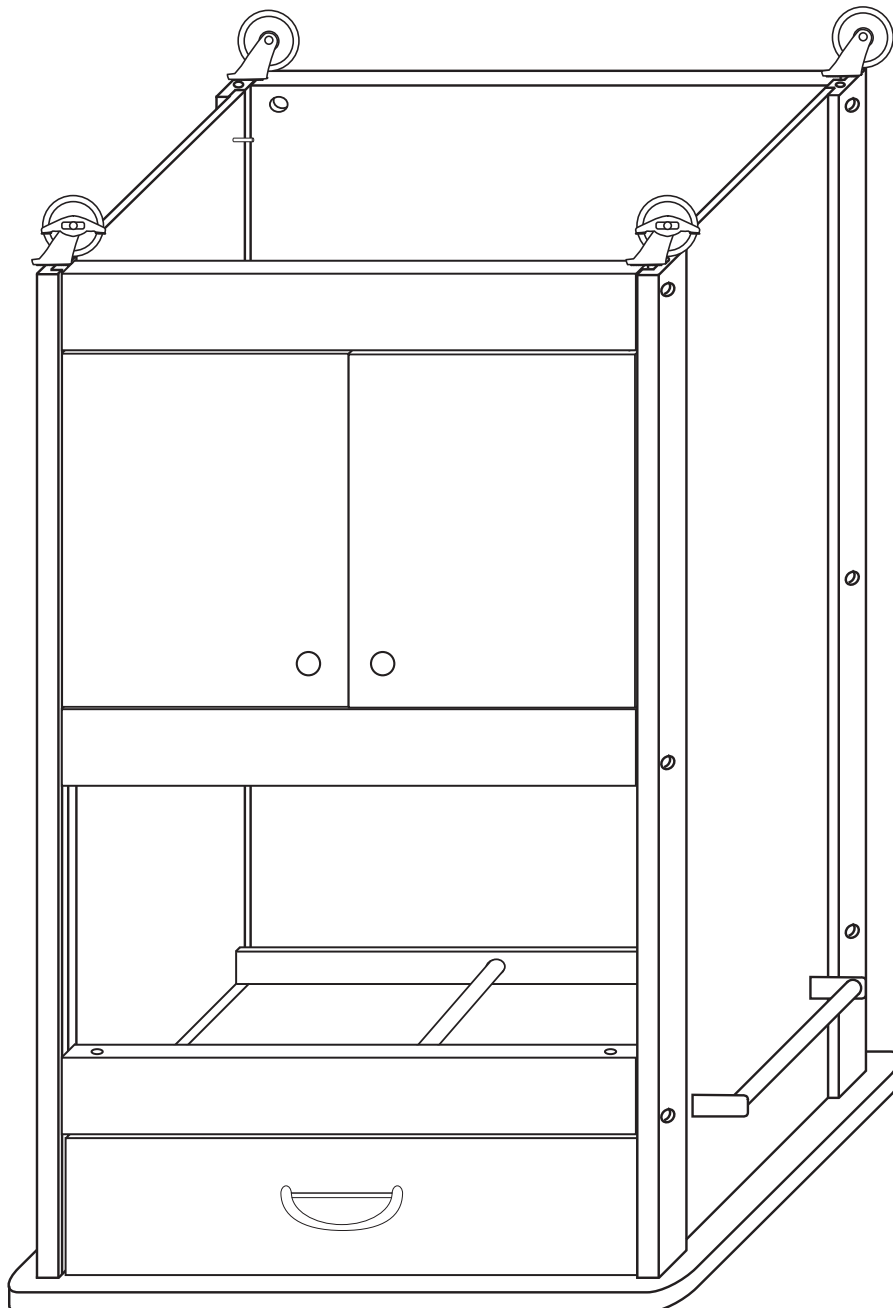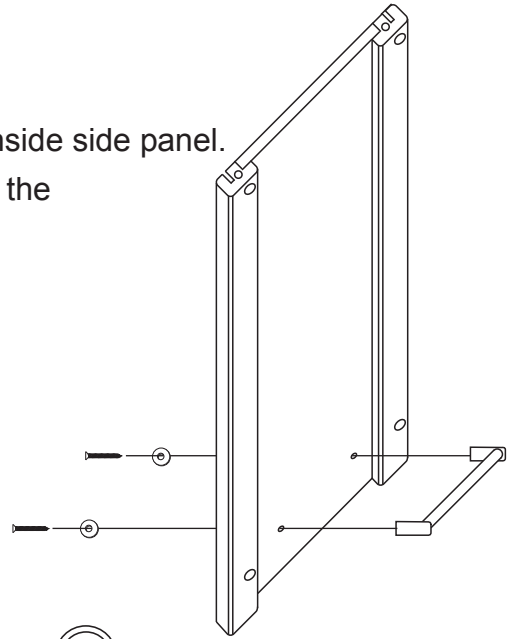

STEP 11

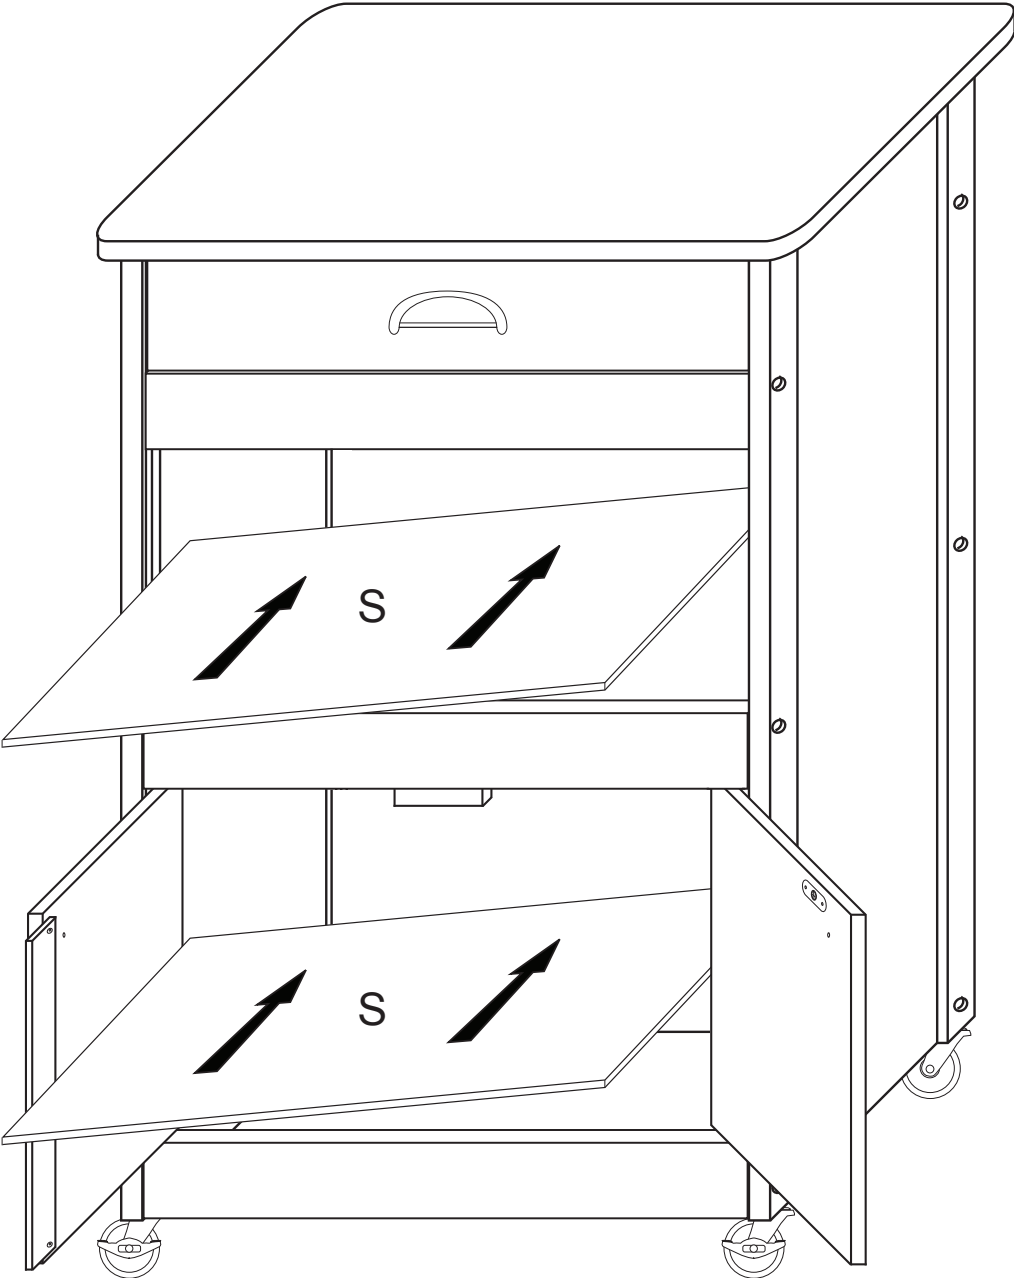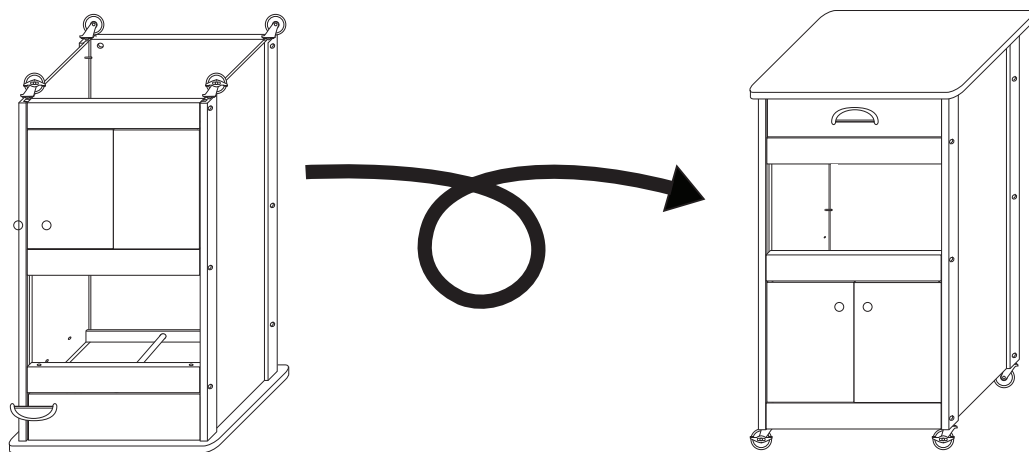

STEP 12

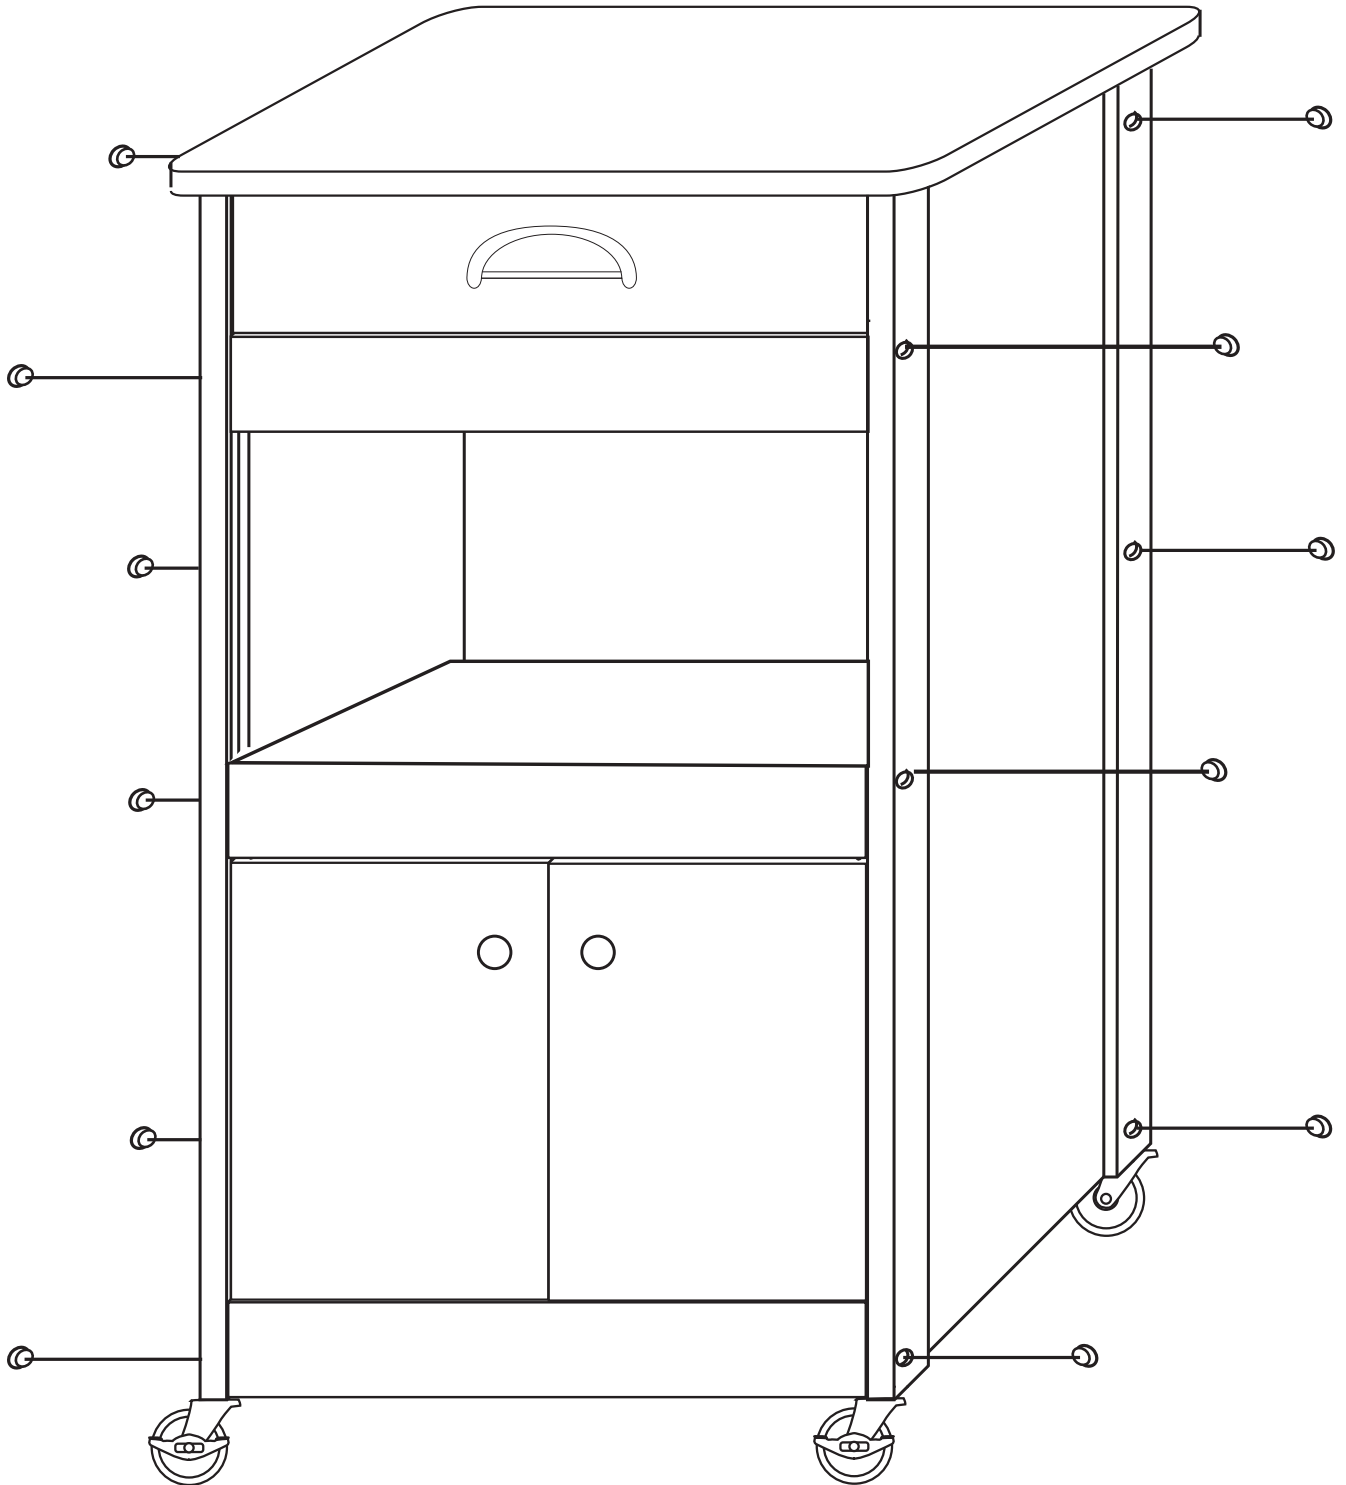

Tap in the 5/8" wooden disks. If you are afraid of marring the disks, you can cover them with a piece of paper.



For continued beauty and long life of your Catskill Craftsmen cart, we recommend Catskill Craftsmen's Butcher Block Oil.

If you would like to purchase Butcher Block Oil directly from Catskill Craftsmen's factory, we offer a reduced price. For one eight ounce (8 fl. oz.) bottle, which is sufficient for two applications, simply send \$6.95 along with the completed coupon to the address below or visit us online at www.catskillcraftsmen.com for other ordering options.



Catskill Craftsmen, Inc.
15 West End Ave.
Stamford, NY 12167-1296

CATSKILL
CRAFTSMEN, INC.

BUTCHER BLOCK OIL COUPON

Please send me _____ # of bottle(s) of the Catskill Craftsmen Butcher Block Oil at \$6.95. My Check or Money Order is enclosed for a total of \$_____.

Item Code: 1569

NAME _____

ADDRESS _____

CITY _____

STATE _____ ZIP _____

Please make checks payable to: Catskill Craftsmen Inc.
15 West End Ave. Stamford, NY 12167-1296