


## POLY FOAM Self-Stick Weatherseal

For best results, ensure surfaces are completely dry and free of dust, grime or grease. Install while temperatures are roughly between 40° & 90° F (5°-32° C).

**Installation:** Unwind approximately 12" to start. Peel off backing paper to expose adhesive. Press adhesive side of tape firmly onto window or door frame. Apply around door or window as needed and cut excess with scissors or razor.

**Windows:** Apply on upper and lower window sashes between window and window sill.

**Doors:** Apply to door stop molding across the top and down latch side. On hinge side, apply to door frame next to molding.

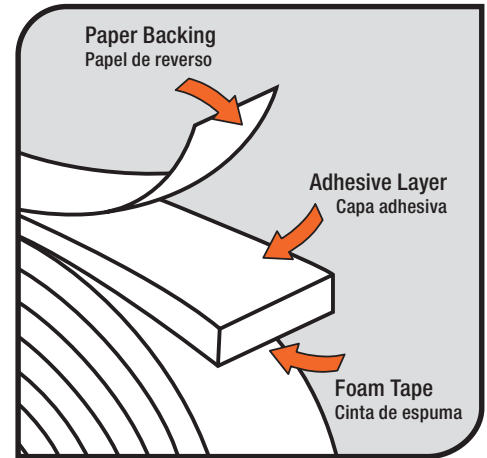

## Burlete autoadhesivo ESPUMA DE POLIURETANO

Para mejor resultado, asegúrese que las superficies estén secas y libre de polvo, sucio o grasa. Instále cuando las temperaturas estén alrededor de 40° & 90° F (5°-32° C).

**Instalación:** Desenvuelva aprox. 12" para comenzar. Desprenda el papel de reverso para exponer el lado adhesivo. Presione el lado adhesivo del burlete firmemente contra el marco de la ventana o puerta.

Aplique alrededor de la puerta o ventana según sea necesario y corte el exceso con tijeras o navaja.

**Ventanas:** Aplique al marco superior e inferior entre la ventana y la repisa.

**Puertas:** Aplique al molde del marco a lo largo del tope y del lado del herraje.

En el lado de los goznes, aplique al marco de la puerta al lado del molde.

