

LP (Propane) Conversion

- A. Replace the Natural Gas Orifice Holder (*Part #17*) from Kit (Model **CVS-303** or **RVS304**) with the L.P. Orifice Holder(#19) This kit also contains (2) L.P. Orifices, Part 20 and Part 21. *Part 20*, the orifice with the small inner hole is used on the 18" Log Sets. *Part 21* (orifice with the larger hole) is used on 24" and 30" log sets. Install the correct orifice into the LP orifice holder (See **Figure 2**).

Now install the Orifice Holder directly to the Burner System for proper operation. (See **Figure 1**)

NOTE: Refer to the Safety Pilot Valve instructions supplied with the Model **CVS-303** or **RVS 304** for detailed instructions on pilot installation.

- B. To Replace the Natural Gas Pilot Burner Orifice with the L.P./ Propane Orifice (Not Shown) supplied with this kit:

Remove Pilot Supply Line Nut (*Part #10*) from the Pilot Burner (*Part #5*). Replace Natural Gas Orifice with the L.P. Gas Orifice (Not Shown) included with this conversion kit.

NOTE: Refer to the detailed Safety Pilot Illustration on front cover for placement of the L.P. Pilot Orifice.

- C. Replace Heavy Media (Granules) supplied with the Natural Gas Log set with ACC18 Vermiculite Granules, sold separately. DO NOT USE Heavy Media Granules as improper combustion will occur. After the Vermiculite Bed has been put in place, spread the Glowing Embers (insulation type material) supplied with the Gas Log Set over the Vermiculite Bed.

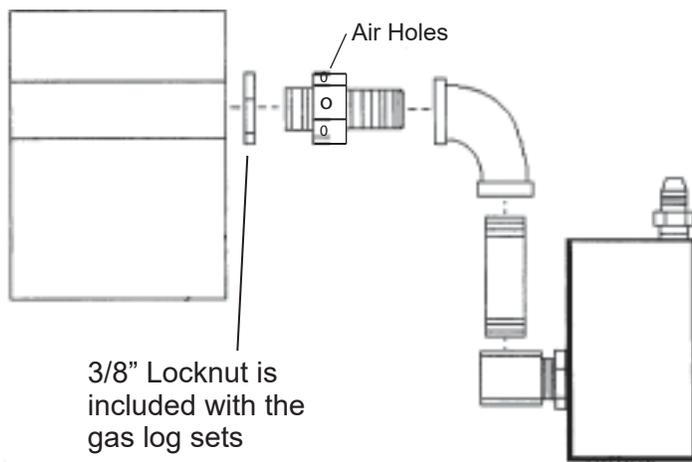


Figure 1

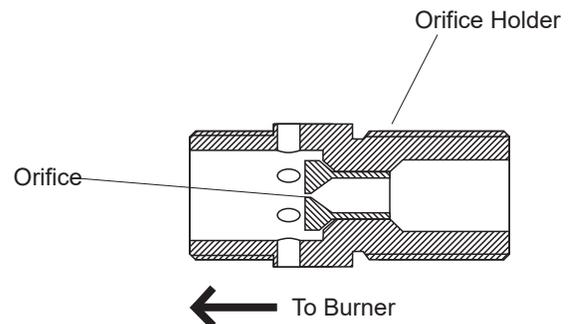


Figure 2