

FRONT BRACE

21 3/4 "

Parts List:

- (1) Hardware pack
- (2) Leg
- (1) Front brace
- (1) Back brace
- (1) Seat assembly
- (2) Arm rest
- (1) Back assembly

TOOLS REQUIRED



Allen Wrench Included


Phillips Screw-Driver Not included

Note:

Do not use an impact driver to install hardware. Use battery operated drill or provided Allen wrench


- (4) A $\frac{1}{4}$ -20 x 2- $\frac{5}{8}$ " Lag screw
- (4) B 1-1/2" Phillips screw
- (2) C $\frac{1}{4}$ -20 x 1- $\frac{1}{2}$ Machine screw
- (6) D $\frac{1}{4}$ -20 x 1- $\frac{1}{4}$ Machine screw



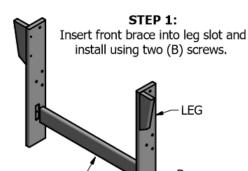


STEP 3:

Install the leg assembly on to the seat frame using six (D) screws.

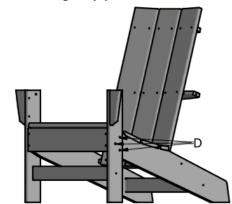

STEP 2:

Lay seat frame on the ground. Install the back frame by putting one side into the slot and swinging it into place. Install using two (A) screws.

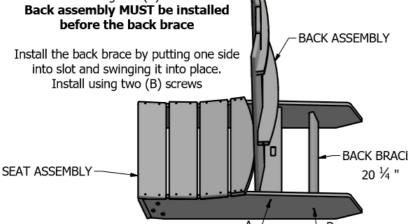

STEP 4:

