












Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. The product of Hillsdale Furniture, LLC is designed for residential use only. Customer Service Phone Number: 502-562-0000

CODE	QTY	HARDWARE	
A	8	M8 x 20mm Bolts	
B	2	M6 x 70mm Bolts	
C	2	Wood Dowels	
D	6	M4 x 32mm Screws	
E	1	M5 x 65mm Allen Wrench	
F	1	M4 x 100mm Allen Wrench	
G	6	M6 x 35mm Bolts	
H	10	M6 x 40mm Bolts	
I	10	M6 x 13mm Spring Washers	
J	10	M6 x 13mm Flat Washers	

CODE	QTY	COMPONENTS	CODE	QTY	COMPONENTS
K	1	Headboard	L	1	Footboard
M	2	Feet	N	2	Side Rail
O	3	Slat	P	6	Support Legs with Adjustable Feet
Q	2	Rail Filler Cleat			



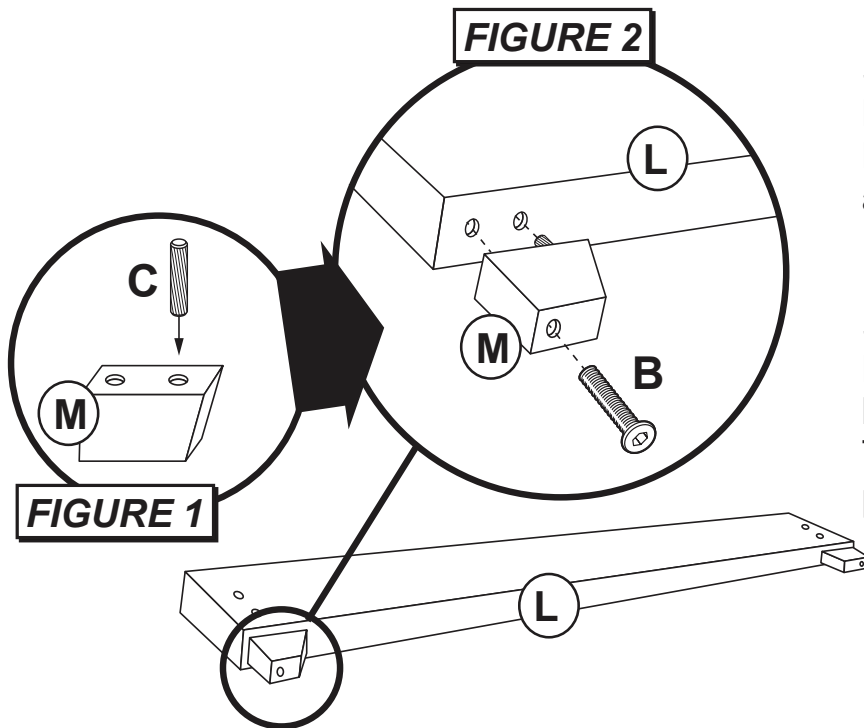
STEP 1 - Figure 1

Begin assembly by inserting 1 Wood Dowel (C) into each Foot (M) on the angled side.

STEP2 - Figure 2

Next attach Foot (M) to Footboard (L) by using 1 Allen Bolt (B) per foot. Tighten bolts with Allen Wrench (F) provided.

Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. The product of Hillsdale Furniture, LLC is designed for residential use only. Customer Service Phone Number: 502-562-0000

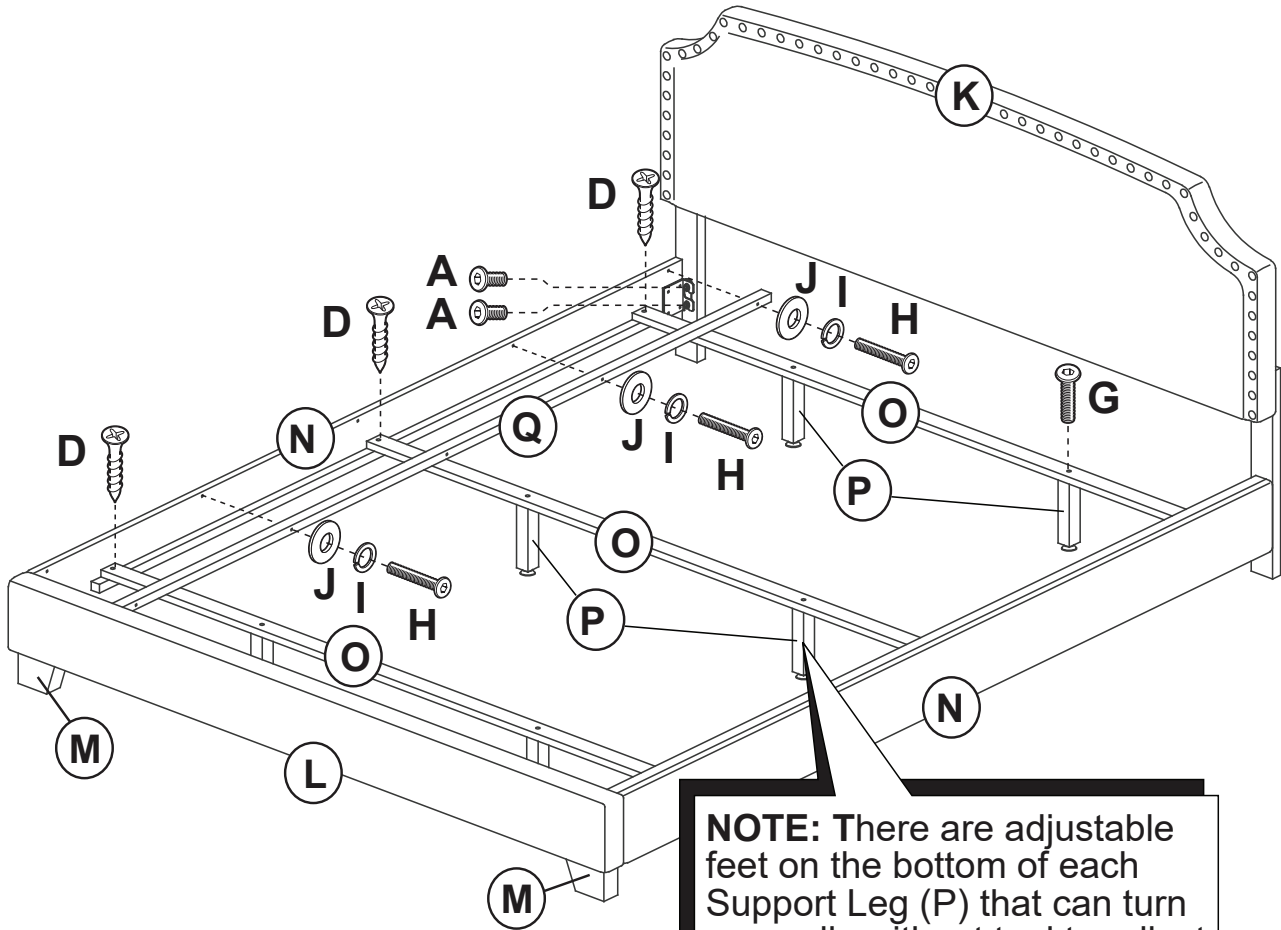

NOTE: There are adjustable feet on the bottom of each Support Leg (P) that can turn manually without tool to adjust to level the bed with the floor.

STEP 3

Next attach each Side Rail (N) to Headboard (K) and Footboard (L) using 2 Allen Bolts (A) per side. Tighten all bolts with Large Allen Wrench (E) provided.

STEP 4

Next attach 2 Support Legs (P) to each Slat (O) using 2 Allen Bolt (G). Tighten all bolts with Allen Wrench (F) provided.

STEP 5

Place each Slat (L) to the Side Rail (K) using 1 Wood Screw (D) per side. Tighten screws with Phillips head screwdriver (not included).

STEP 6

Finally attach each Rail Filler Cleat (Q) to the Side Rail (N) by using 5 Allen Bolts (H), 5 Spring Washers (I) & 5 Flats Washers (J). Tighten all bolts with Small Allen Wrench (F) provided. The assembly is now complete.