

Weathered Wall Boards

Installation Instructions

There are so many amazing ways to use Weaber Weathered Wall Boards to achieve a spectacular designer rustic look in your home. This type of wall has been used time and time again. The unique beauty of a weathered wood wall is timeless and can be used in different areas of your home.

Ready to get started?

Remove all furniture and artwork from the wall.

1. MEASURE THE WALL

Using a tape measure, measure the height and width of your wall in inches. Multiply the height times the width then divide that number by 144. This will give you an idea about how many square feet you will need. Add 5% to 10% for cutting and waste.

Each Weaber Weathered Wall Board bundle contains enough material to cover 10.5 square feet.

2. PREPARE SURFACE


The surface must be clean, dry, flat, and structurally sound. Clean the wall with soap and water, and make sure to remove any nails or outlet covers that may cause an issue when you hang the boards. Next paint the wall with a dark complementary color by Behr to offset possible gaps between the boards.

3. FIND THE STUDS


Using a stud-finder, mark where the studs are located on the wall.

4. DETERMINE A PATTERN


Now is the time to decide the design of your accent wall. You may want to use a herringbone, diagonal, or staggered pattern to complement your decor. There are many choices - be creative. Our example is a staggered horizontal design.

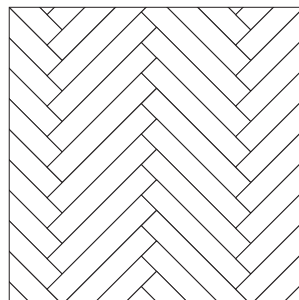

Herringbone

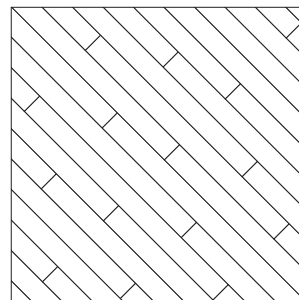

Diagonal

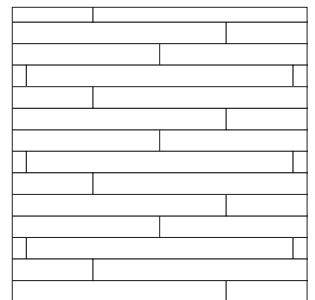

Staggered

Tools Needed:

Safety Glasses

Dust Mask

Tape Measure

Miter Saw or Miter Box

Pencil

Level

Paint

Roller and Roller Pan

Nails


Liquid Nails

Caulking Gun

Hammer or Air Nail Gun



You can find everything you need at Home Depot.

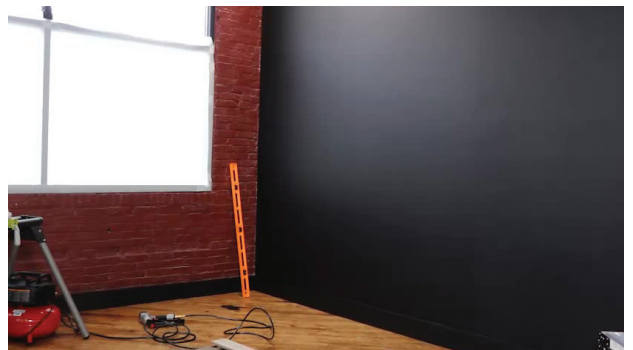


Use a dark complementary color by Behr.

5. DRAW A REFERENCE LINE

Using your level and pencil, draw a straight line across the area where you'll be laying the boards. This will be your starting point.

6. ADD BOARDS ON REFERENCE LINE

For a permanent installation apply a liberal amount of liquid nails (or other construction adhesive) to the back of your board before nailing. Place the first board directly above or below your reference line and press it onto the wall. Make sure this board is level, then nail into studs. (For a semi-permanent installation attach your board with nails only.) Continue adding pieces end to end following your reference line. Trim the final piece as needed with a miter saw for a flush fit. Recheck with level again. (Due to the natural characteristics of Hardwood each row should be rechecked with a level.) If everything is level, continue on with each row until the wall is complete. Make sure to stagger the boards as you attach each row. Try not to have two seams sit directly above each other in adjacent rows.

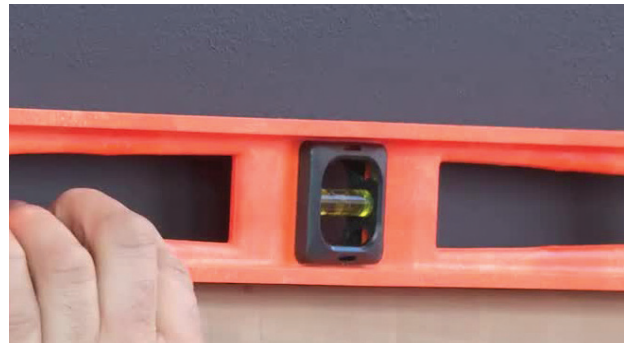

Check every row with a level before moving onto the next row.

7. MEASURE AND CUT AROUND THE OUTLETS

If a cut-out is needed in a board to make room for an outlet, measure the distance the outlet starts from the closest wall, the width of the outlet (allowing some clearance), and the height the cut-out needs to be. Be sure to account for the outlet and the cover plate, as the cover plate needs to be mounted flush on the drywall, not on the weathered board. Mark these measurements on the board and cut out with a jigsaw before attaching to the wall.



8. FINISH

Finish as you desire. We recommend using square edge trim, possibly ripping a weathered board for a step-up over lap.

For more information on how to install our Weathered Wall Boards please visit our web site or scan the QR code.

www.weaberlumber.com

