

LB2-B, R, T, W - (2) 24" x 42-1/2" x 9/16" LocBoard®(s)

Read all instructions completely before installing. Should you have any questions about your installation, please call Customer Service at 440-248-5480

2 pcs. 24" x 42-1/2" x 9/16" LocBoards (B=Blue, R=Red, T=Tan, W=White)

- These rugged steel tool boards can be easily and quickly positioned to conform to your storage requirements.
- Boards can be positioned side by side or above one another in vertical and horizontal mounting positions.
- Additional boards and hooks can be added to your system as your needs continue to grow.
- LocBoards fasten directly to concrete, solid wood and hollow wall structures without the use of furring strips. (Mounting hardware not included.)
- LocBoards are designed with internal ribbed support members that not only keep mounting hardware hidden from sight but also add to the board's structural integrity and holding power.

LocBoard™ Installation:

For Concrete block installation: (mounting hardware not included.) You can use either masonry screws or concrete plastic anchors with appropriate sized #8 screws. Head diameter of screw should not exceed .36 (3/16" masonry screws will work.)


For Drywall and plaster installation: (mounting hardware not included.) Use either self-drilling drywall anchors or normal heavy-duty plastic drywall anchors in addition to #8 screws.

- Select a wall location for your LocBoards and the desired vertical or horizontal mounting pattern you wish to mount in.
- **See Figure 1-1:** There are 2 mounting/internal ribbed support brackets on the back of each LocBoard. Each bracket has 6 pre-punched mount holes that are accessible from the front side of each panel through the square holes. For a typical installation use one hole from Group "A" and one hole from Group "B" for each bracket.
- Determine which holes you would like to use for the mounting of your board.
- Holding panel in-place with mounting brackets/ribbed supports flat against wall and making sure each panel is level and plumb. From the front side of your panel mark each hole's location you wish to use for mounting using a pencil or marker. Mark at least two (2) holes per bracket equally spaced to ensure proper holding power.
- Once you have marked a minimum of 2 mount hole locations per bracket using figure 1-1: You are now ready to pre-drill all holes in accordance to the specifications called out by the manufacturer of mounting hardware to be used.
- Once all holes are drilled and all wall anchors are securely in place where needed, you're ready for the final attachment.
- Installation mounting screws will be inserted through the front square opening of each panel in alignment with the pre-punched mounting holes in your back braces. Mounting screw heads should not be visible from the front of each screw and should be securely tightened.


Hook Installation: Insert the hook back locking tabs into front square openings of tool board. Slide each hook securely into place and install required number of LocScrews (LocScrews are supplied with each pack of LocHooks.)

Each LocHook has the unique capability of being securely mounted vertically and horizontally. Panels must be securely fastened to sound wall structures to support heavy loads.

MOUNTING INSTRUCTIONS FOR LB2-B, R, T, W

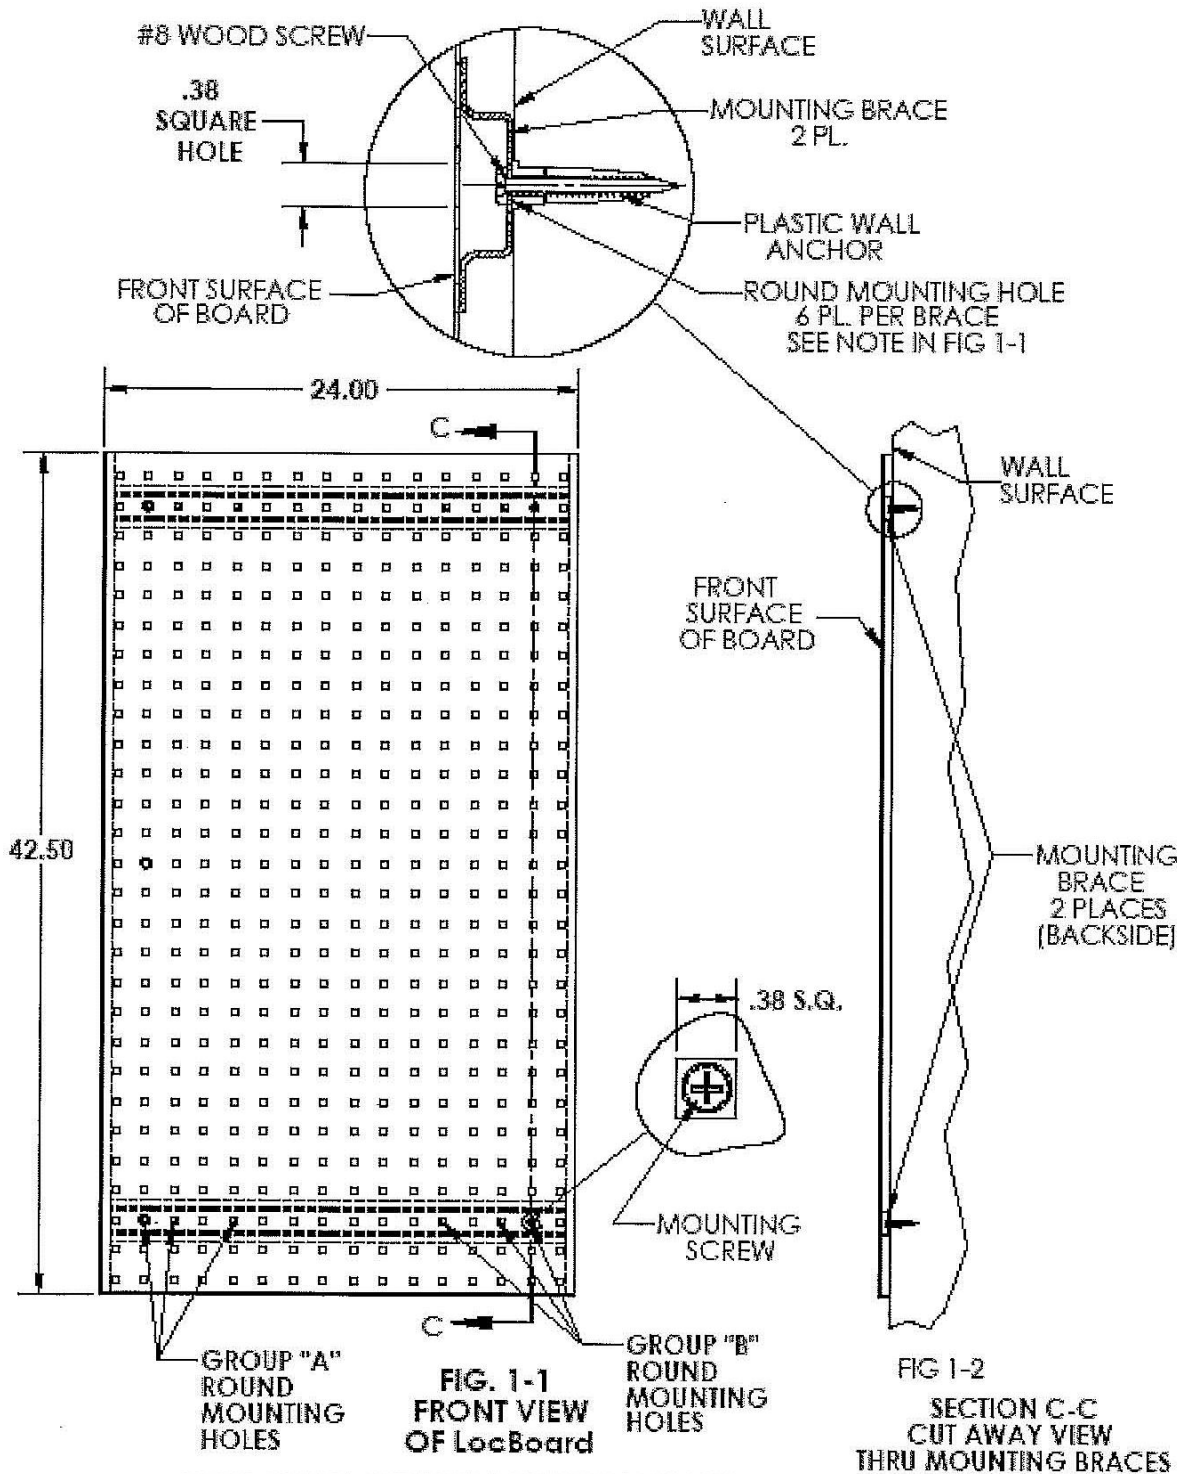

NOTE: USE (2) MOUNTING HOLES PER BRACE, ONE FROM EACH GROUP (4) PLACES TOTAL

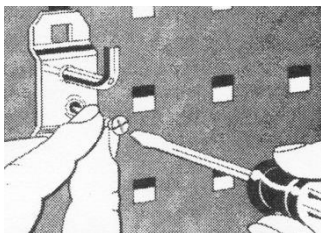

Please contact our Customer Service Division with any questions at:
Carter Street · Solon, OH 44139 · (P) 440.248.5480 · support@tritonproducts.com

For a full line of products visit www.tritonproducts.com