

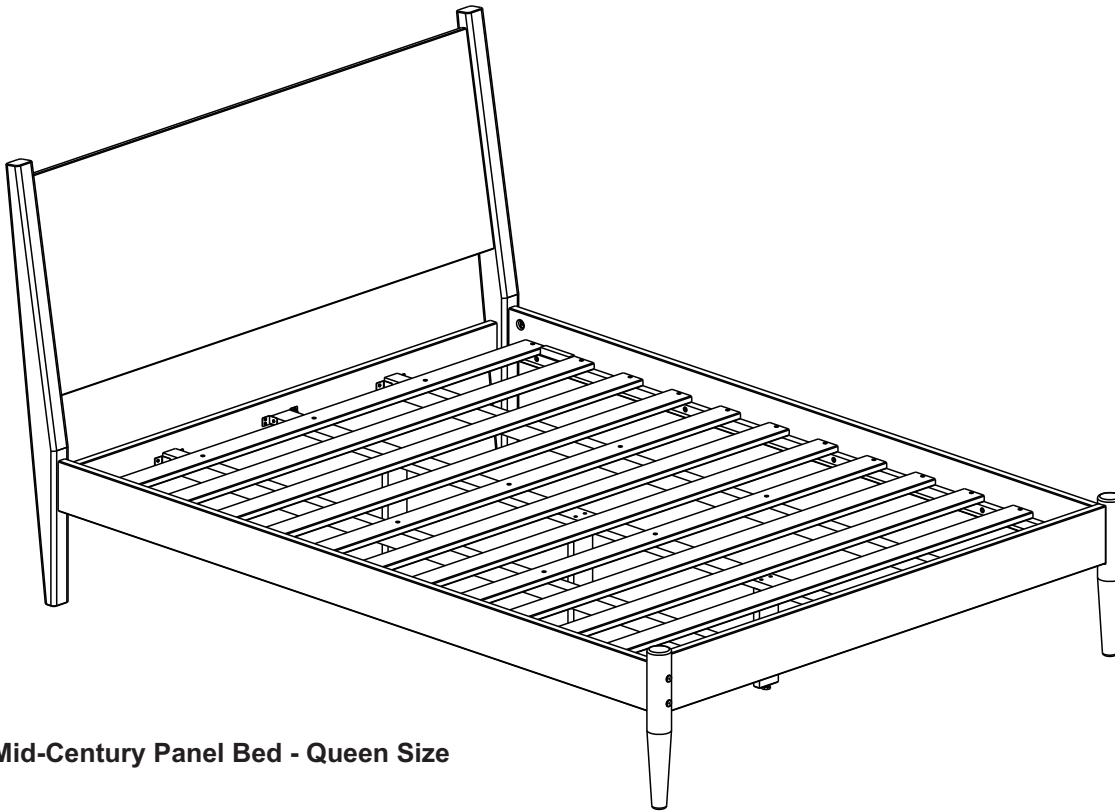
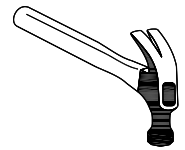


# ASSEMBLY INSTRUCTIONS

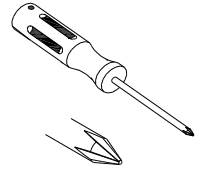


Mid-Century Panel Bed - Queen Size


01:00 Hs

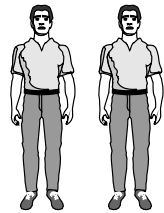


## HARDWARE INCLUDED



**A - 10,0x50 Wood Dowel**  
Qty. 20



**B - 4,0x40 Screw**  
Qty. 16




**C - 3,5x16 Screw**  
Qty. 40




**D - 3,5x30 Screw**  
Qty. 36




**E - Screw Nut**  
Qty. 08




**F - Allen Key**  
Qty. 01




**G - Support Bar**  
Qty. 02




**H - 1/4x100 Screw**  
Qty. 08



**I - 7,0x50 Screw**  
Qty. 06




**J - Bed Frame Separator 98mm**  
Qty. 02

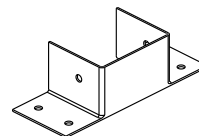


**K - Support Bar**  
Qty. 04


# PARTS INCLUDED

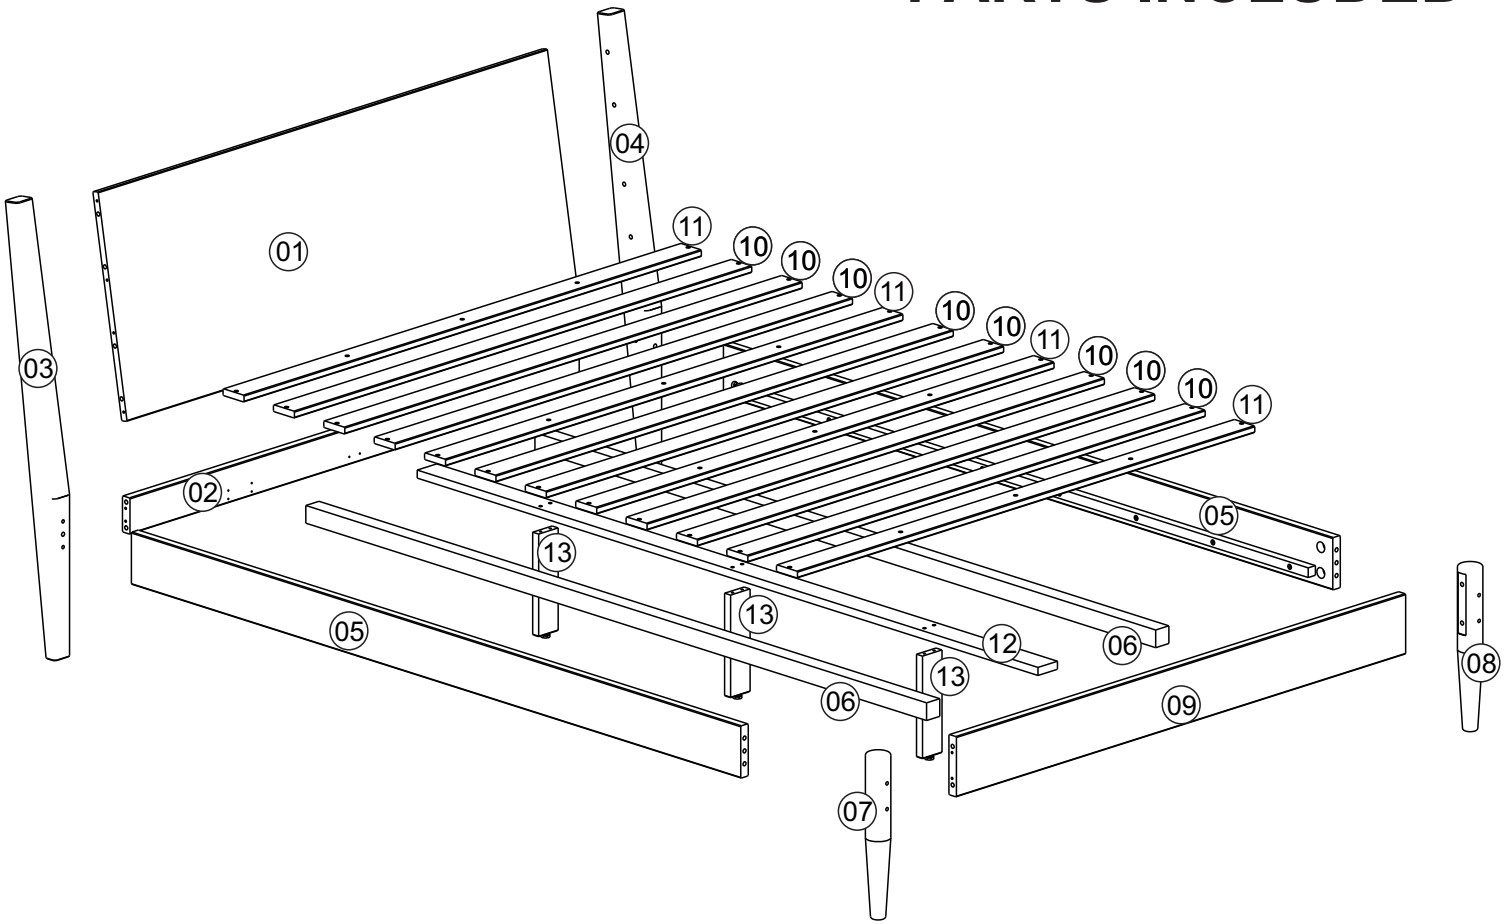

## STEP 1

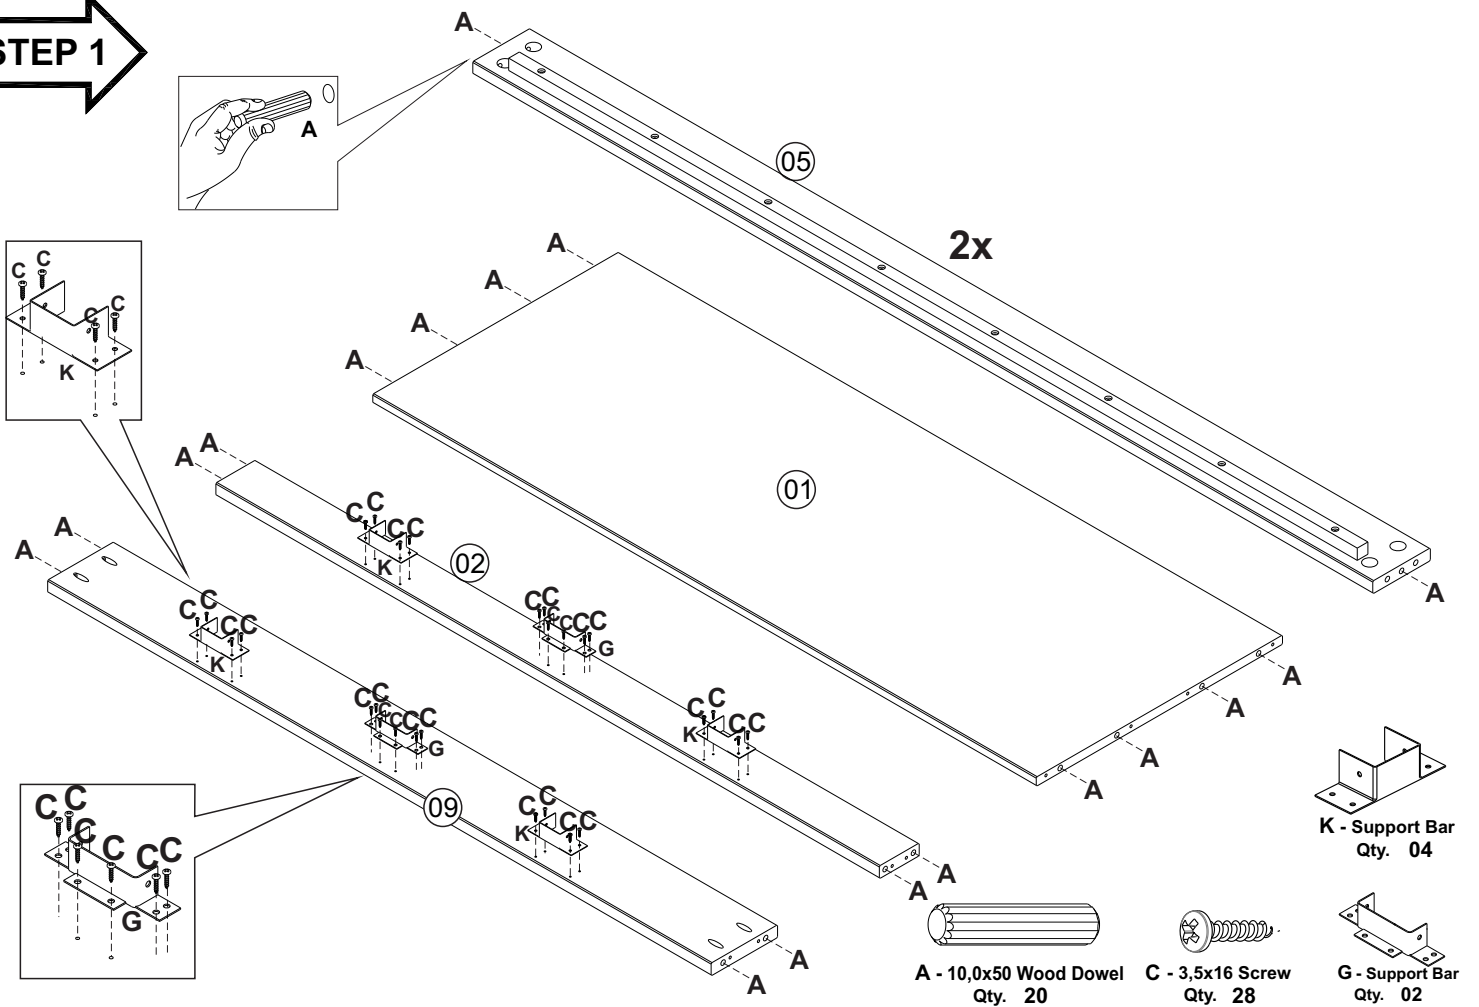


**STEP 2**

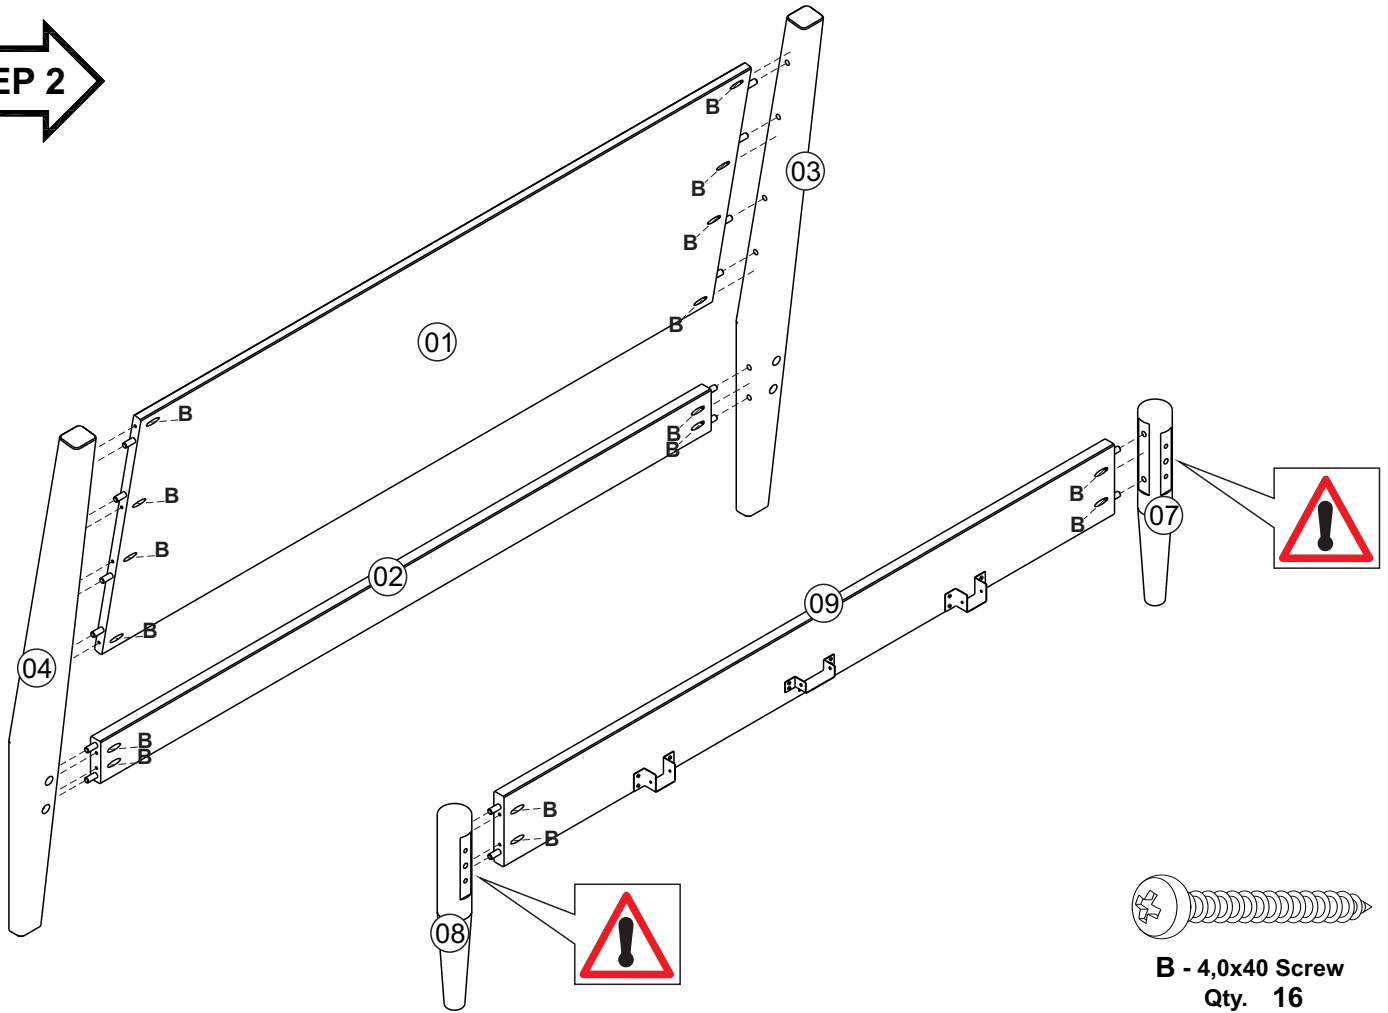

**B - 4,0x40 Screw**  
Qty. 16


**STEP 3**

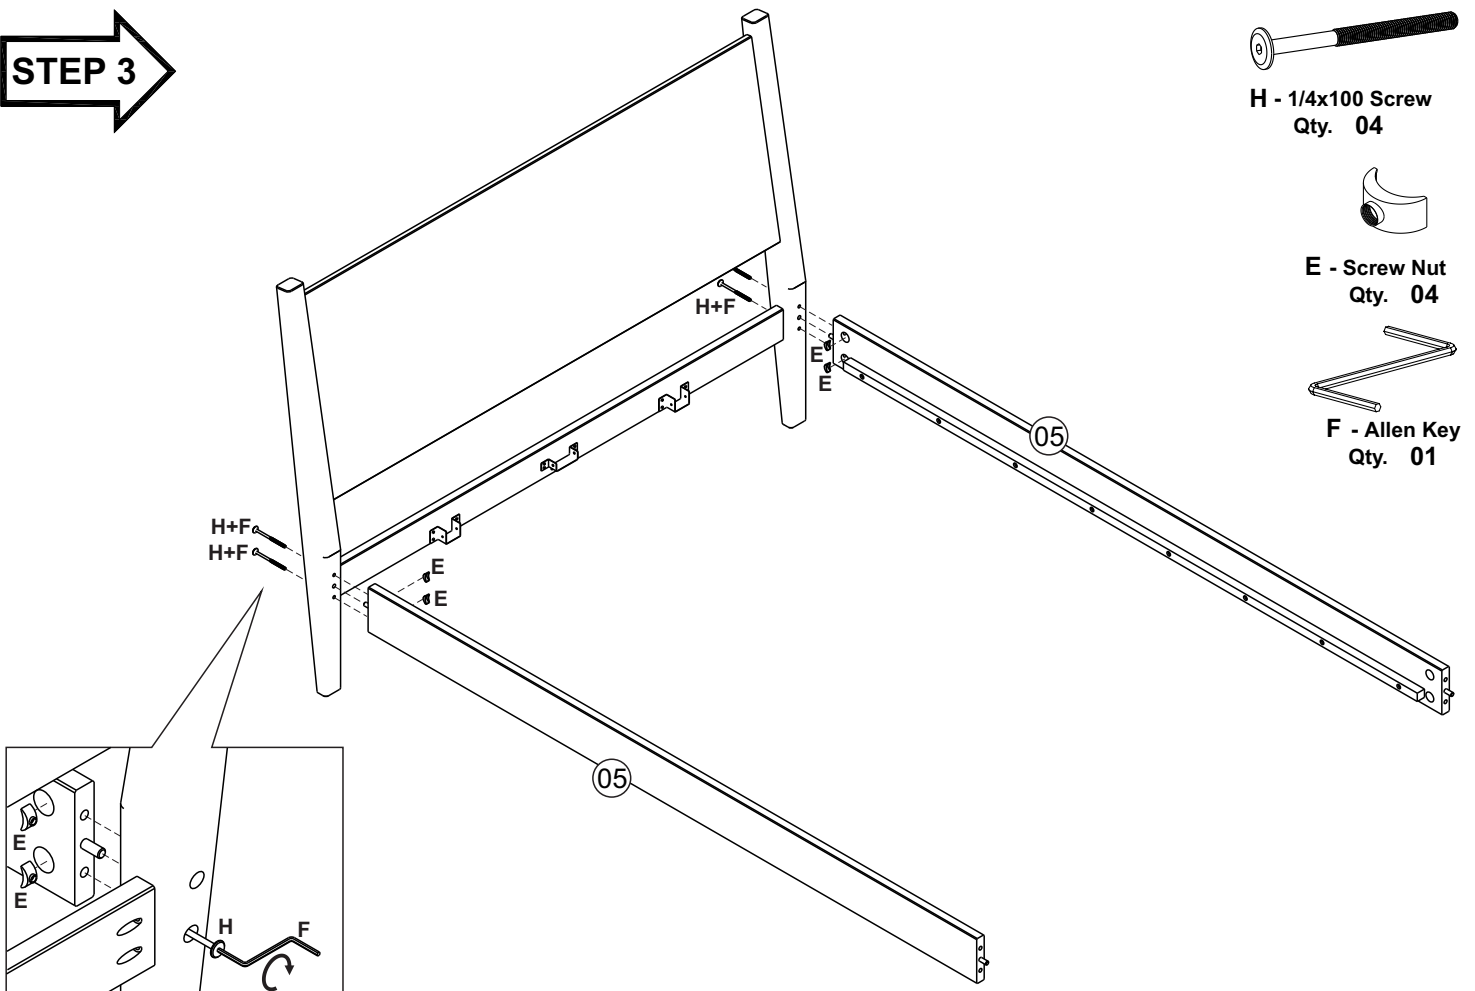

**H - 1/4x100 Screw**  
Qty. 04




**E - Screw Nut**  
Qty. 04



**F - Allen Key**  
Qty. 01

**STEP 4**

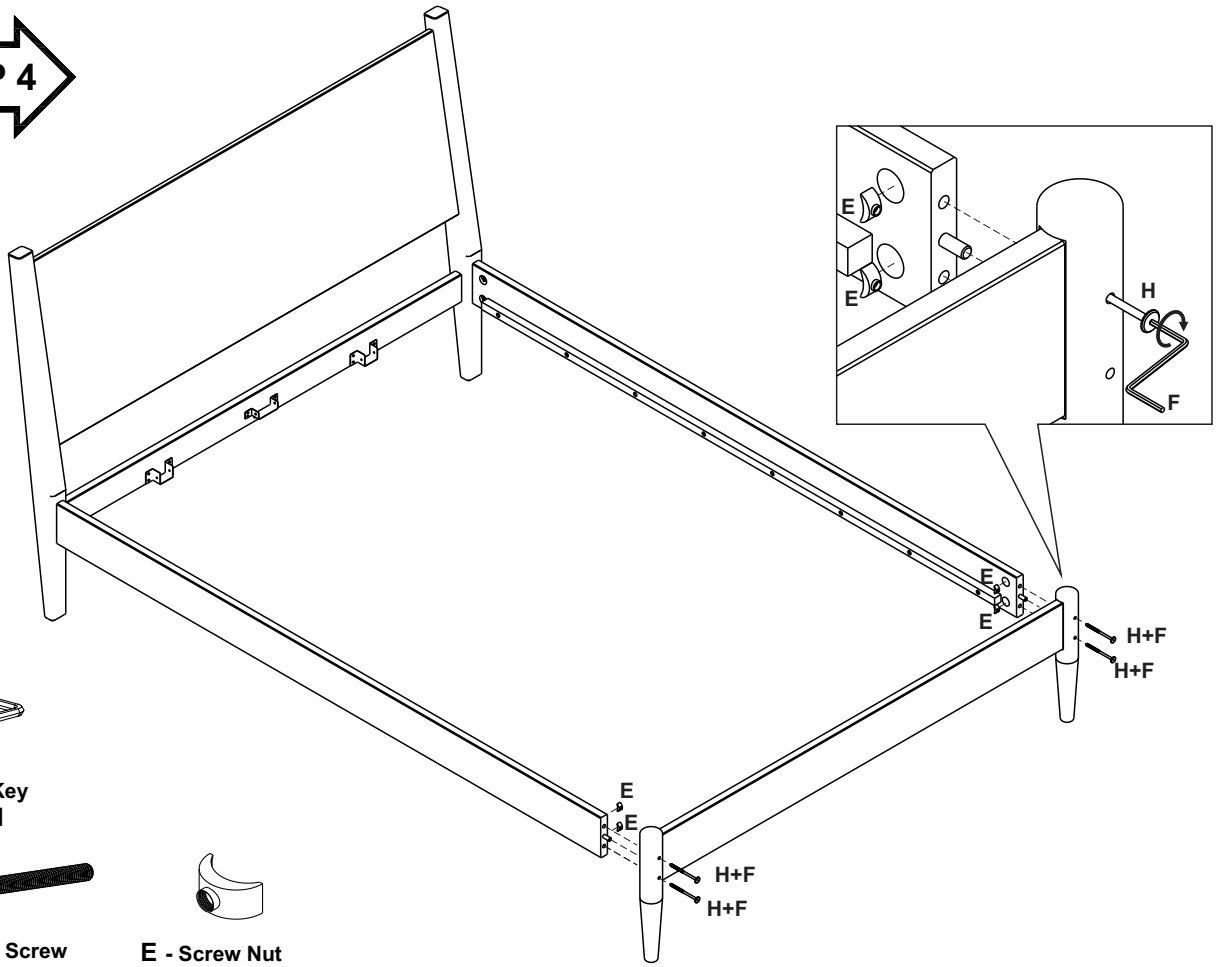


F - Allen Key  
Qty. 01

H - 1/4x100 Screw  
Qty. 04

E - Screw Nut  
Qty. 04



**STEP 5**

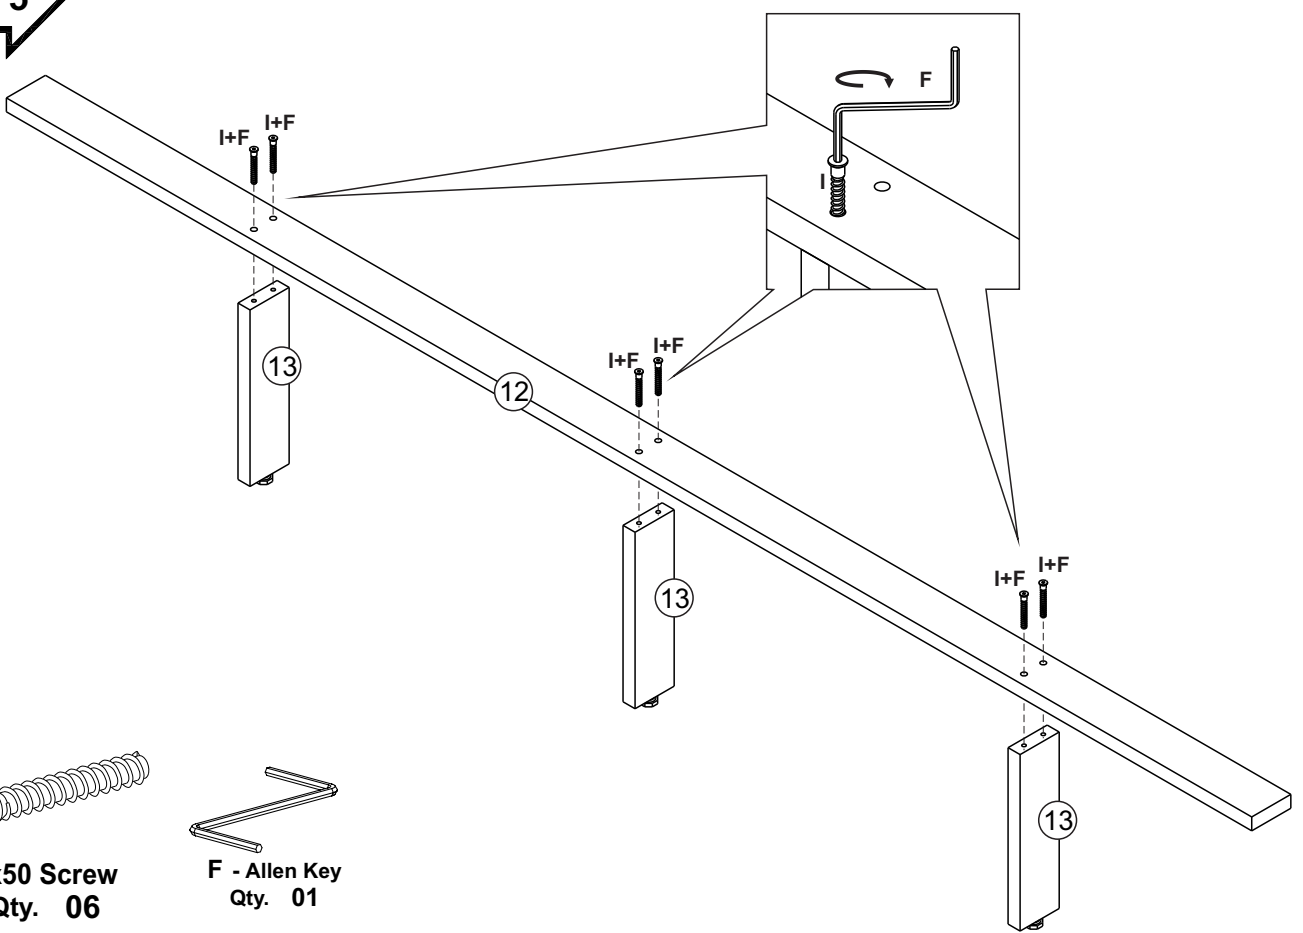

I - 7,0x50 Screw  
Qty. 06



F - Allen Key  
Qty. 01

**STEP 6**

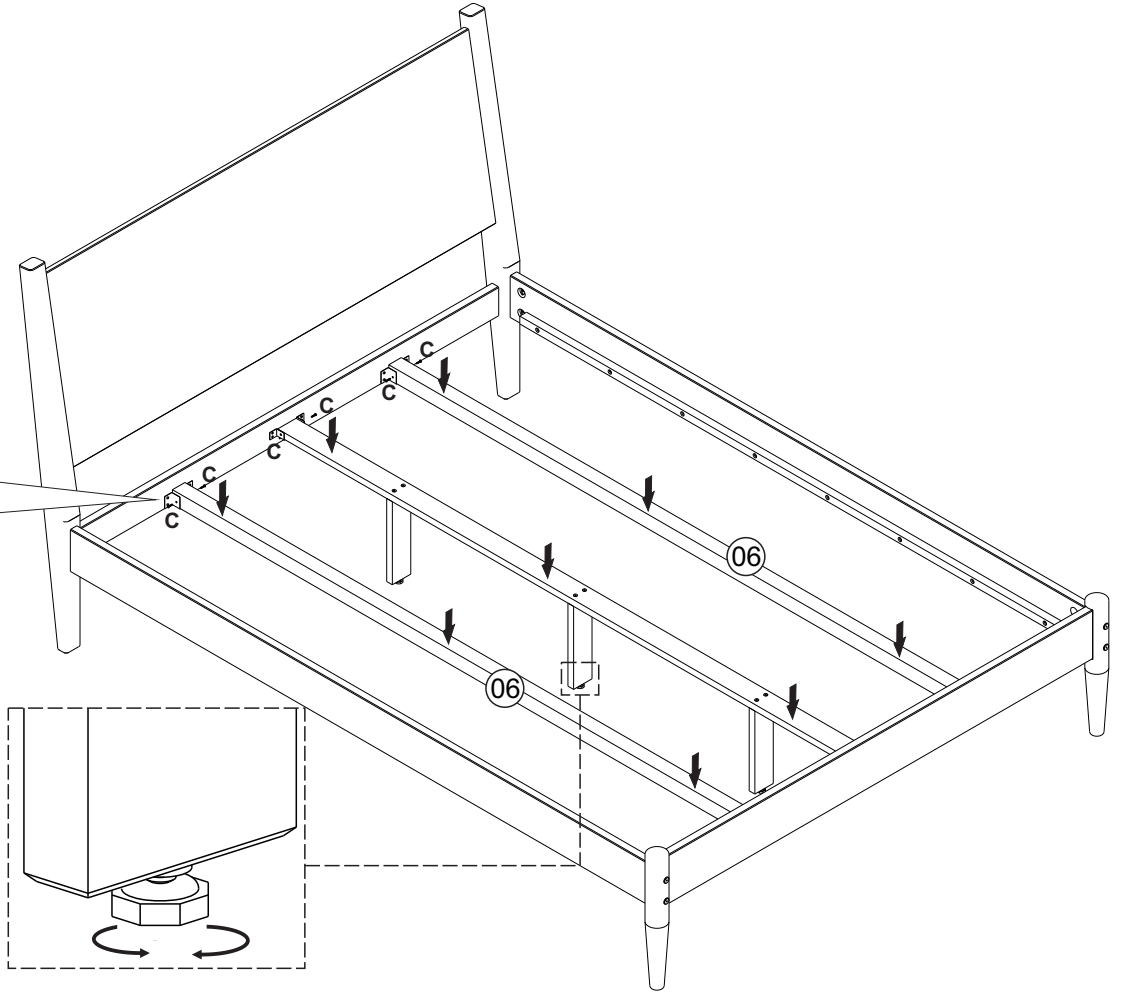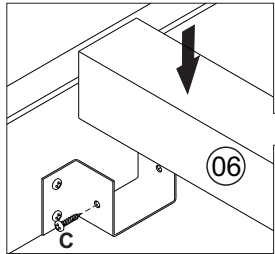


**C - 3,5x16 Screw**  
Qty. 12

**STEP 7**

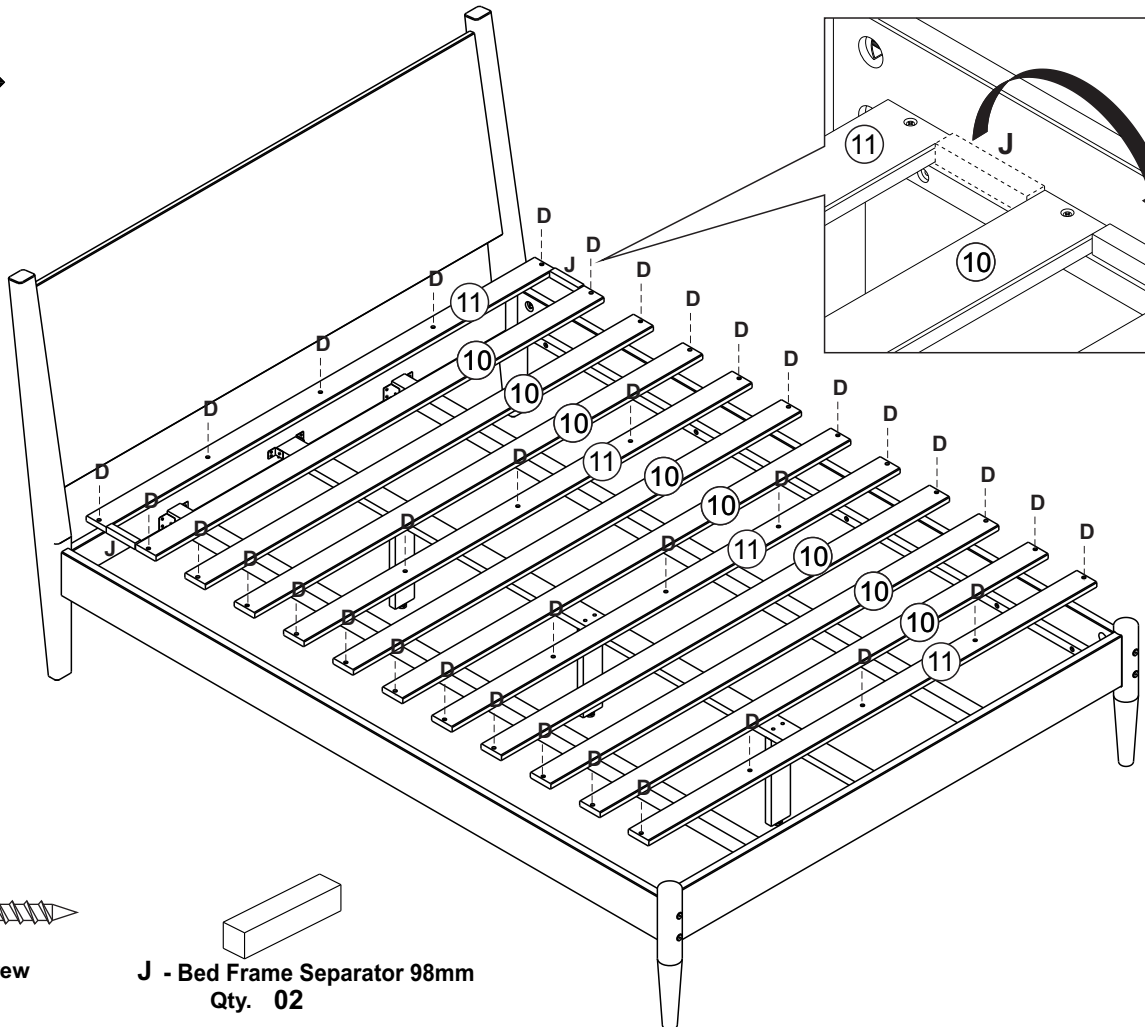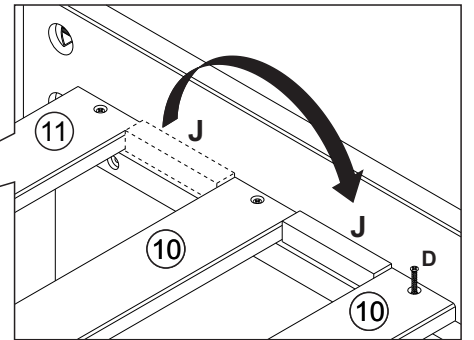

**D - 3,5x30 Screw**  
Qty. 36



**J - Bed Frame Separator 98mm**  
Qty. 02