


HOW TO INSTALL THIS TUBULAR LOCK

1

MARK DOOR & BORE HOLES


- Fold template over edge of door mark site 60mm(2 3/8") or 70mm(2 3/4") of holes.
- Bore $\phi 54$ mm(2 1/8") and $\phi 25$ mm(1") holes through door.
- Cut out a 58x26x3mm (2 9/32"x1"x 1/8") base.

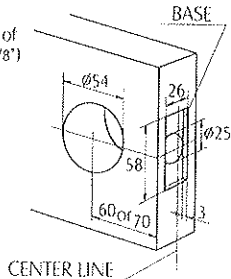

2


INSTALL LATCH

- Adjustable latch for 60mm(2 3/8") or 70mm(2 3/4") backset.

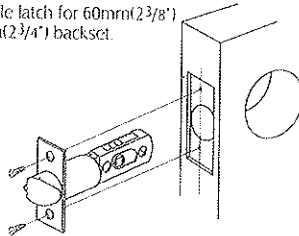


3

INSTALL BODY

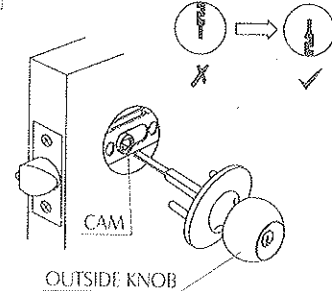


4

INSTALL INSIDE KNOB

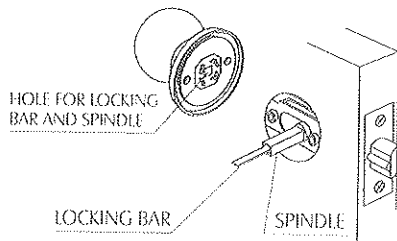

5

INSTALL STRIKE

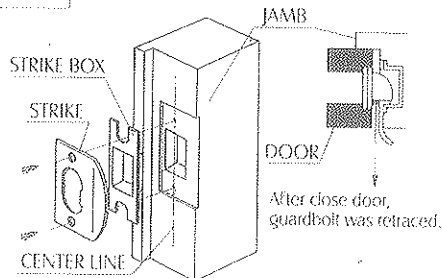

INSTRUCTION FOR ADJUSTABLE LATCH

