# IN41326, IN41327 INSTALLATION INSTRUCTIONS

Please read carefully and save these instructions, as you may need them at a later date.

#### CAUTION

WARNING: Risk of Fire. Consult a qualified electrician to ensure correct branch circuit conductor.

Turn off the main power at the circuit breaker before installing the fixture in order to prevent possible shock.

#### GENERAL


All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.


Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustration.

### ASSEMBLY AND INSTALLATION

- 1. Thread two machine screws (5) to the mounting bar (7) and secure with the hex nut (9).
- 2. Secure the mounting bar (7) to the outlet box (1) with mounting screw (10).
- 3. Pull out the outlet wire and ground wire from the outlet box (1). Make wire connections.
- --Ribbed wire (w/o marking) or white wire from light to White wire (2) from power source.
- --Smooth wire (w/o marking) or black wire from light to Black wire (3) from power source.
- --Attach the ground wire (4) to mounting bar (7) with a ground screw (8).
- 4. Attach the backplate (11) to the outlet box (1), secure with the ball nut (12).
- 5. Remove the socket ring (16) from the socket (13), then place the glass (15) and spacer (15) over the socket (13). Replace socket ring (16) and secure in place using socket wrench (17).
- 6. Install bulbs: (bulbs not include)
- (Don't exceed the maximum capacity recommended on the sockets).

## INSTALLATION IS NOW COMPLETED

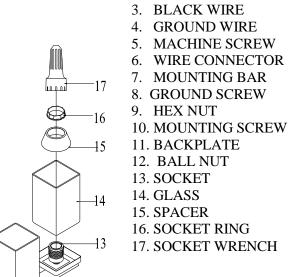



IN41326

2678

11

IN41327

1500 Cherokee Parkway, Suite 100, Acworth, GA 30102 Phone: (866) 845-5451 • Fax: (866) 816-6165 E: service@acclaim-lighting.com • www.acclaim-lighting.com



OUTLET BOX
WHITE WIRE

INTERIOR • OUTDOOR