


APPROXIMATE
ELEMENT CLIP
LOCATIONS

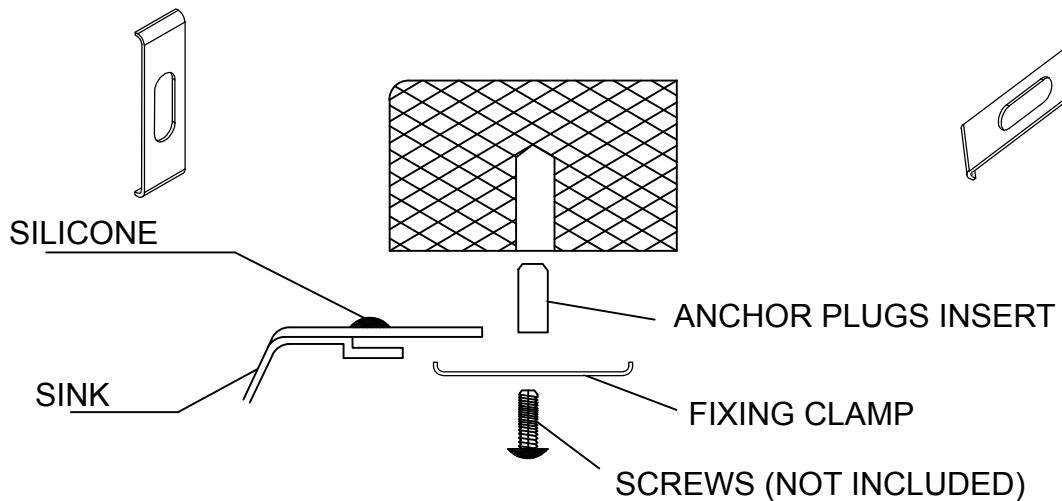

UNDERMOUNT INSTALLTION INSTRUCTION

This sink is specifically designed to be under-mounted in a solid surface countertop only

CAUTION: Sink edge may be sharp; handle with caution. Inspect sink carefully before installation

1. Cut out countertop using this " bowl size cutout template".
2. Determine placement of clip brackets as indicated by template. Pre-drill holes according to method desired based on countertop material.
3. Apply a bead of silicone evenly along edge on underside of countertop.
4. Position and align sink over opening. Press sink onto Silicone seal.
5. Double check alignment. Tighten clip brackets against sink edge.
6. Remove excess silicone.

NOTE: THIS TEMPLATE INSTALLTION INSTRUCTION IS ONLY A GUIDE. ACTUAL SINK SHOULD BE PRESENT TO ENSURE PERFECT CUT OUT.

UNDERMOUNT SINK
CUTOUT TEMPLETE

