

# Home Decorators

—Collection—


























BF-20932 Oxford Single bookcase Cabinet 72"Hx30"W

## ASSEMBLY INSTRUCTIONS

Made In China-1A

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Count all parts and material hardware. Compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department. For efficient and speedy service please indicate the model number and code letter of part (s) need.



**IMPORTANT NOTE:** Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST				
A  TOP PANEL-1PC	B  LEFT SIDE PANEL-1PC	C  RIGHT SIDE PANEL-1PC	D  BOTTOM PANEL-1PC	E  BACK PANEL-2PCS
F  LOW PANEL-1PC	G  SHELF-5PCS	H  ADORN PANEL-1PC	I  ACROSS PANEL-1PC	J  RIGHT DOOR-1PC
K  LEFT DOOR-1PC	N  CAM-LOCKS-12PCS	M  CAM-BOLTS-12PCS	L  SCREW-32PCS	O  SCREW-3PCS
P  SCREW-26PCS	Q  DOWELS-4PCS	R  SCREWS-1PC	S  LARGER MAGNET-1PC	T  HANDLE KNOB-4PCS
U  FEMALE MAGNET-2PCS	V  HANDLE KNOB-2PCS	W  SHELF SUPPORT-20PCS	X  SCREW-2PCS	Y  CAM TOOL-1PC

**NOTE:** Upon opening thoroughly clean all woods surfaces with furniture polish to remove dust and dirt that may have settled onto finish during shipment in order to protecting the product. Please assemble the product with at least two people.


### 1) Assemble the right side panel (C).

Insert the dowels (Q) into the low panel (F). Use the cam-tool (Y) rotate the cam-bolts (M) into the right side panel (C) and attach the bottom panel (D) and across panel (I) and low panel (F). Then use the cam-tool (Y) tightens cam-locks (N) clockwise into the bottom panel (D) and across panel (I), finally rotates the screws (R) through the holes of low panel (F) into the bottom panel (D). (See the right picture).

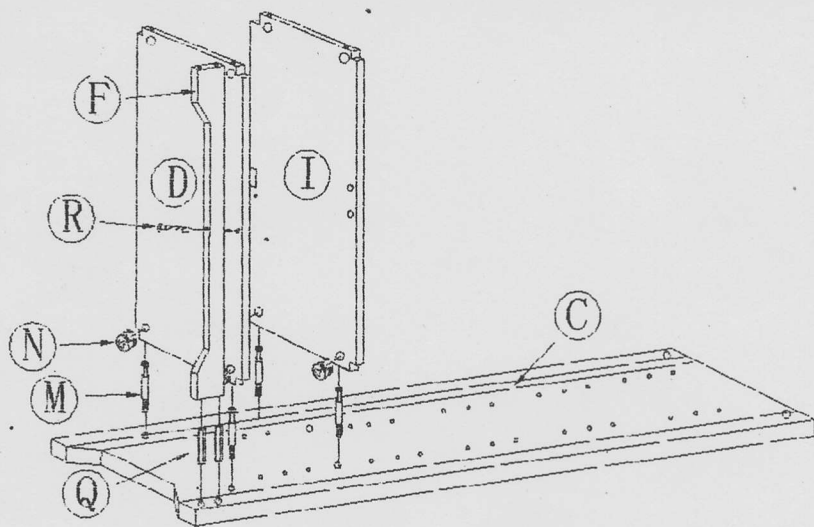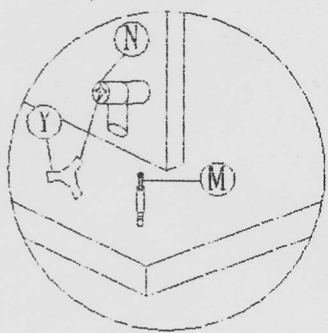


### 2.) Assemble the left side panel (B).

The assemble method as same as the step (1). (See the below picture).

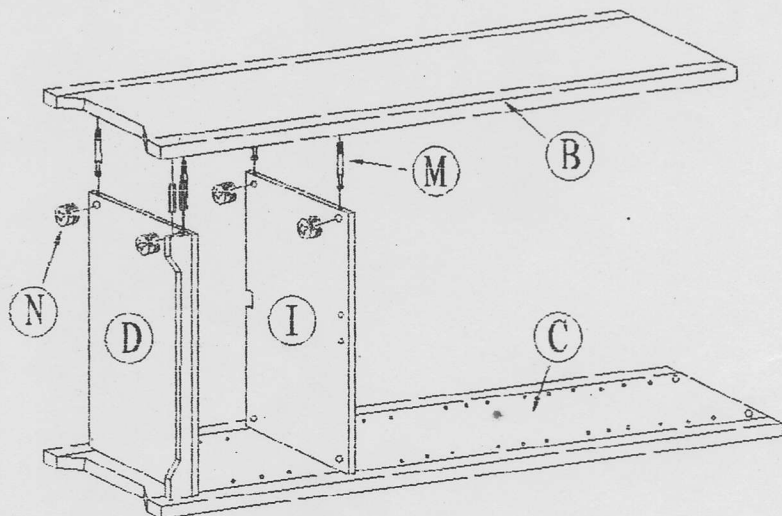


### 3). Assemble the top panel (A)

Use cam-tool (Y) rotates the cam-bolts (M) into the top panel (A) and attach side panel (C/D). Then use cam-tool (Y) tightens the cam-locks (N) clockwise into the holes of side panel (C/D). Rotate the screws (L) through the holes of magnet (S) into the holes of the across panel (I), finally, insert the shelf support (W) into the side panel (C/D). (See the right picture).

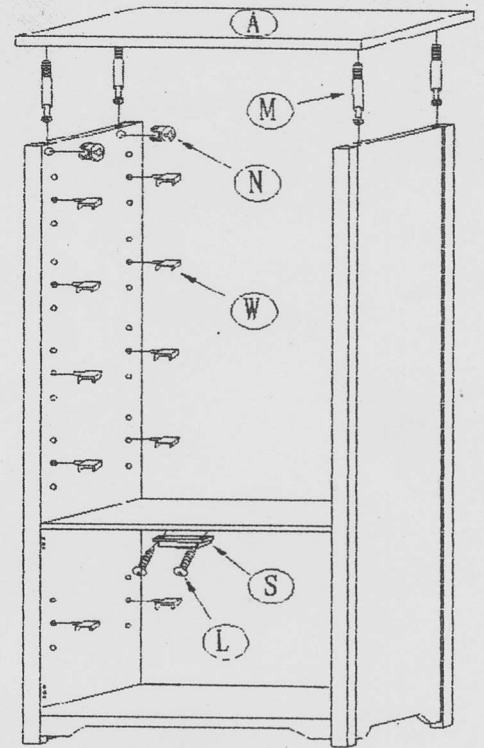


### 4). Assemble the door (K/J) and the shelf (G).

Rotate the screws (P) through the holes of hinge (T) into the holes of side panel (B/C) and door (K/J), then rotate the screws (P) through the holes of female magnet (U) into the holes of door (K/J) and rotate the screws (X) through the middle holes of door (K/J) into the knob (V). Finally, put the shelf (G) onto the shelf support (W). (See the left picture).

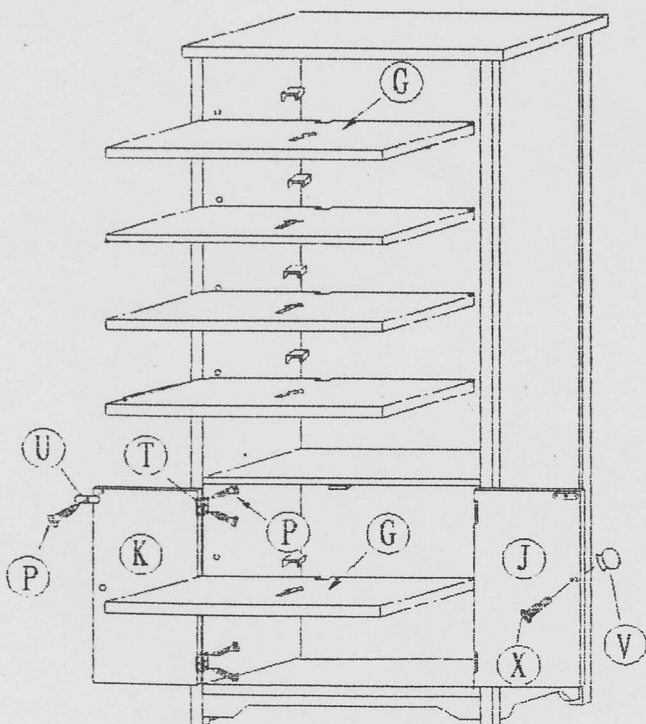

5). Assemble the back panel (E)

Rotate the screws (O) through the holes of adorn panel (H) into top/bottom panel (A/D) and across panel (I), then put the two pieces of back panel (E) into the slot of adorn panel (O) and with screws (L) to tighten them. (See the right picture).

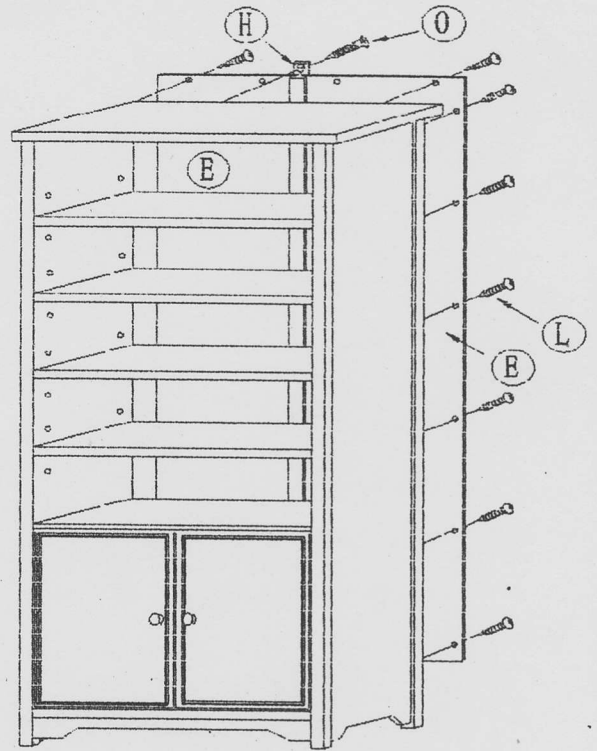

6.) OK! Assemble complete! (See the below picture).

