

AWNING WINDOW OPERATOR INSTALLATION INSTRUCTIONS

Select new operator by:

1. Matching mounting hole pattern of old operator to new operator.
2. Matching link length and style of old operator to new operator.

Installing new operator:

1. Attach link to torque bar with original fasteners.
2. Mount operator with original mounting screws.

NOTE: Bolts, bushings, E rings, screws and rivets, are sold separately.

Instrucciones para instalar operadoras de ventana tipo "Awning"


Para seleccionar su nuevo operador:

1. Compare los huecos que se usan para instalar el operador a la ventana.
2. Compare el largo del brazo del operador.

Para instalar el nuevo operador:

1. Conecte el brazo del operador a la barra que se mueve en la ventana.
2. Monte el operador a la ventana con los tornillos originales.

NOTA: Los tornillos para instalar el operador a la barra y a la ventana se venden por separado.

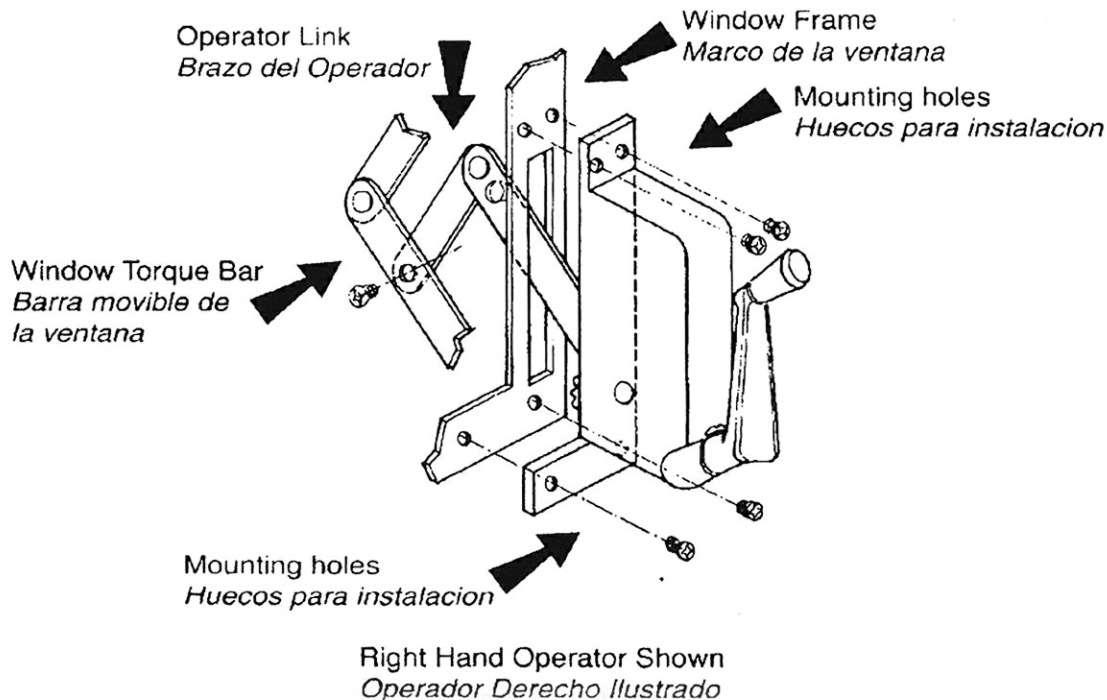

NOTE: Installation drawings are typical for this style of replacement part. They may not show a part identical to the one you are installing.

NOTA: Los dibujos para la instalación son genéricos para repuestos de este tipo; por lo que podrían no mostrar una pieza idéntica a la que usted esté instalando.

Barton Kramer, Inc.

Miami, Florida