


MSI


Making Dream Surfaces A Reality

Profile Specs


End caps are used to fill the gap between the floor and carpet, hearths or against sliding doors.

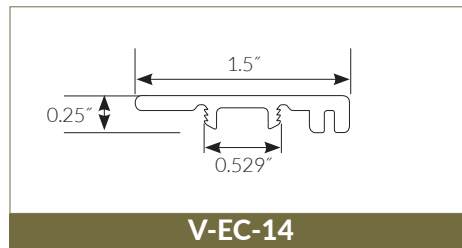


Installation

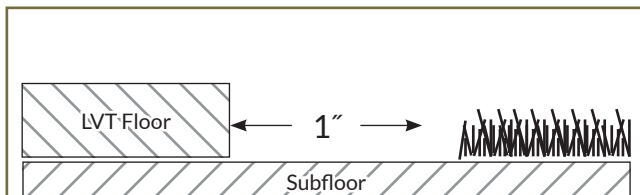


1. Install the flooring leaving a 1" gap between the two floors for the end cap installation.

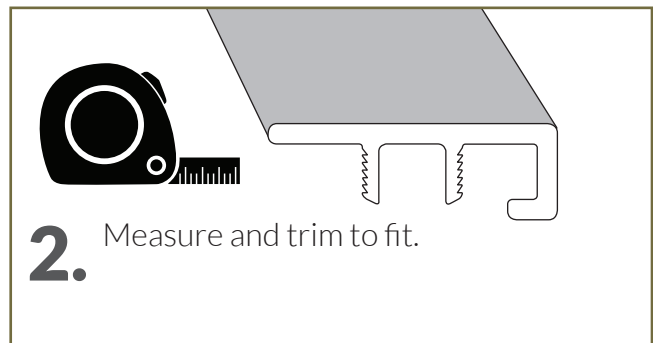

2. Measure and trim to fit.

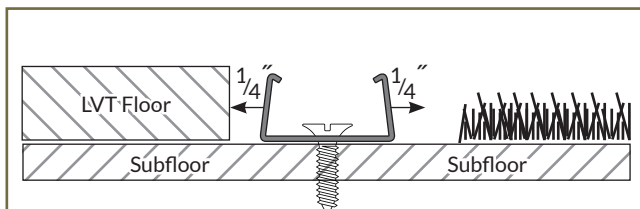

3. Center the track between the flooring leaving a 1/4" spacing between the track and floor planks. Screw track to subfloor (or glue down with construction adhesive).

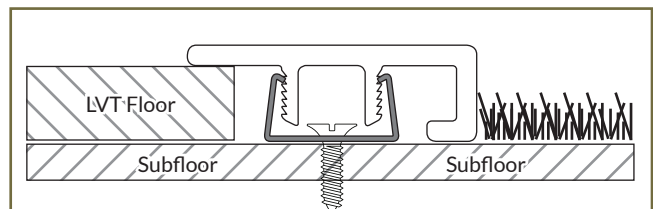

4. Starting at one end, press the molding into the track inching along the length of the molding.

You may also use a rubber mallet.