

Assembly Instructions

Item: HW56629

0.5hr

APPROXIMATE ASSEMBLY TIME 1 PEOPLE OF ASSEMBLY




**FLOOR AREA
1.0Mx1.M**




REQUIRED ASSEMBLY SPACE


REQUIRED ASSEMBLY TOOLS

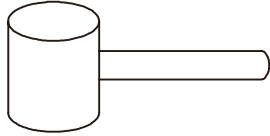


SOFT RUBBER HAMMER(Not Provided)



SLOTTED SCREWDRIVER(Not Provided)




POZI SCREWDRIVER(Not Provided)

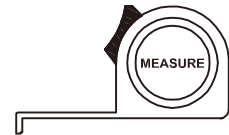








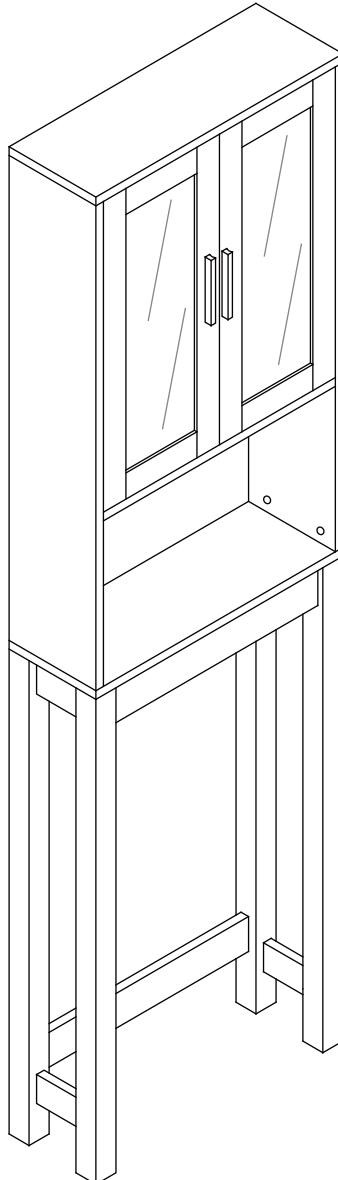










MEASURING TAPE (Not Provided)

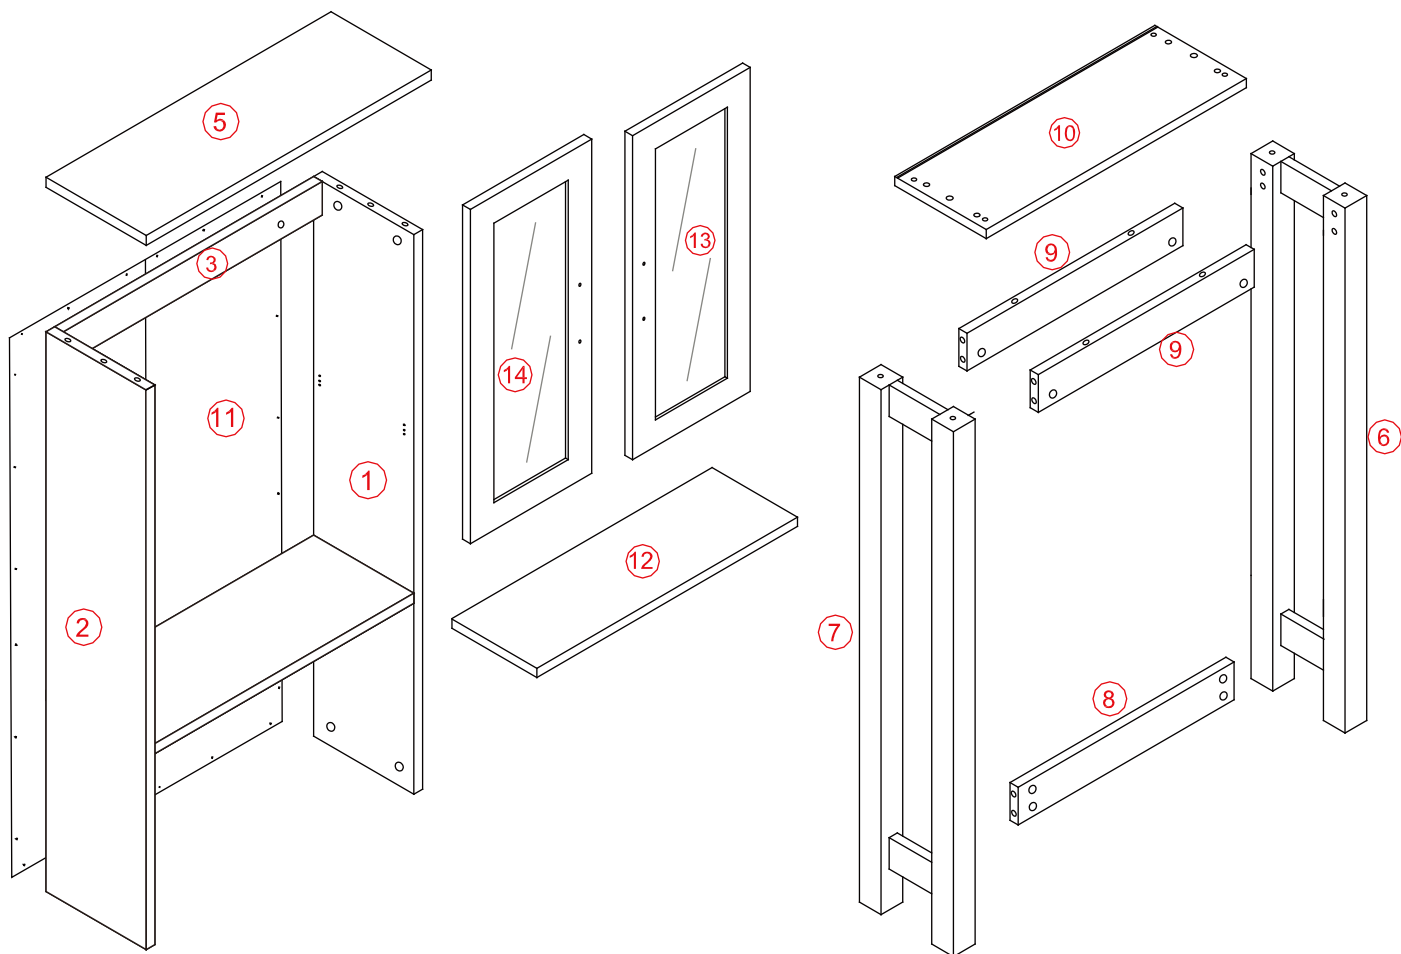ASSEMBLED DIMENSIONS




1-8




A  x20	B  x20	C  Ø6x30mm x18	D  Ø4x30mm x4
E  Ø3x12mm x18	F  x4	G  Ø2.5x10mm x24	H  Ø3x12mm x4
I  x2	J  x2	K  x1	L  x4
M  x2	N  x4	O  Ø4x35mm x2	P 
Q  Ø3x15mm x2	2-8		



STEP 1

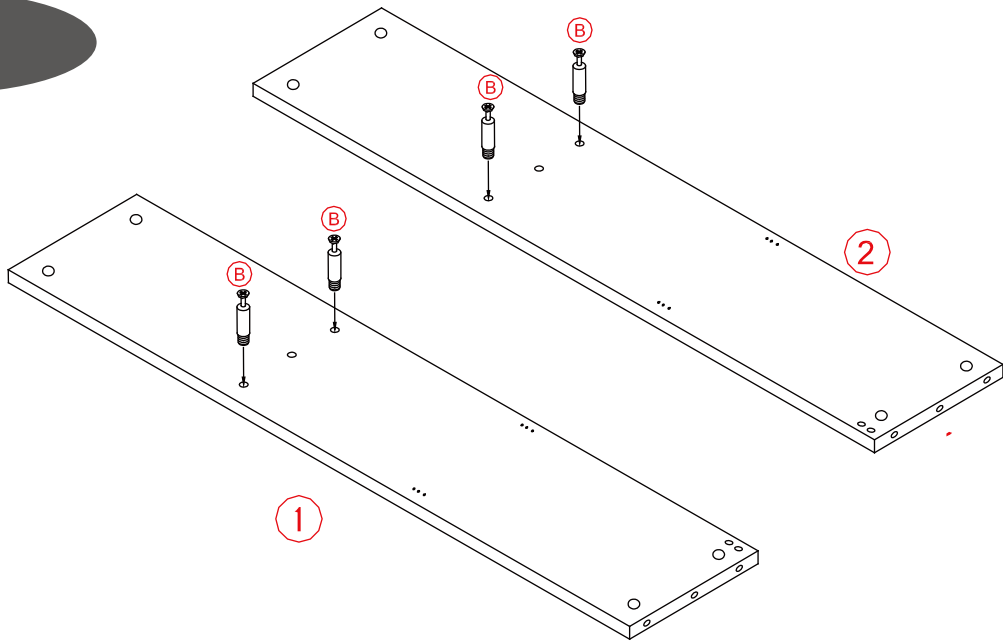


STEP 2

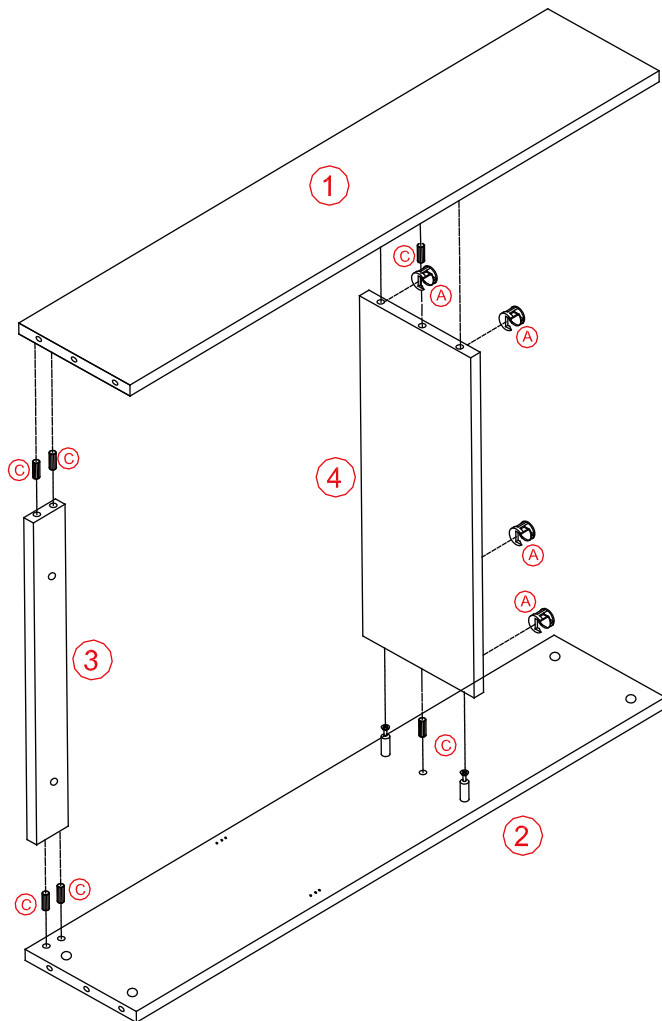


STEP 3

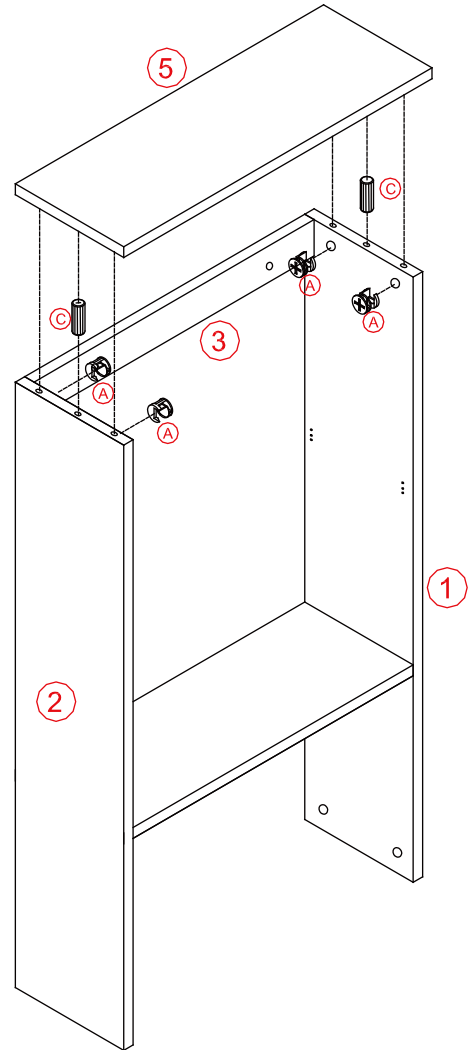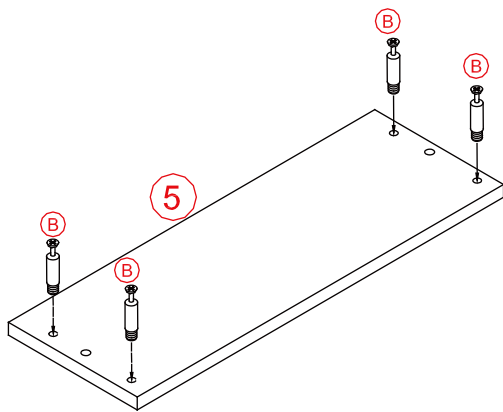


STEP 4

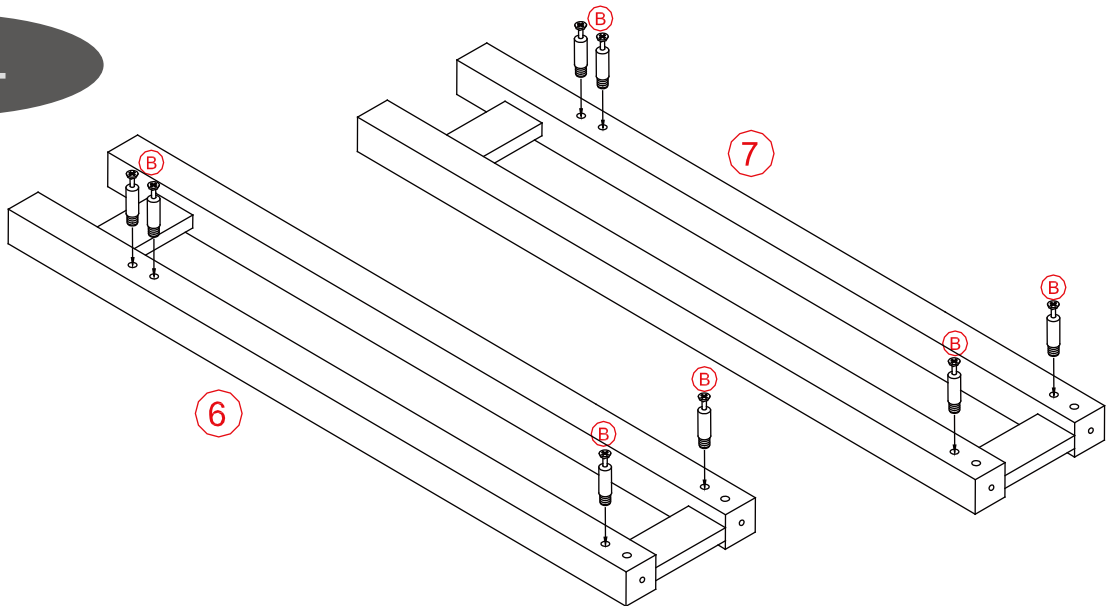


STEP 5

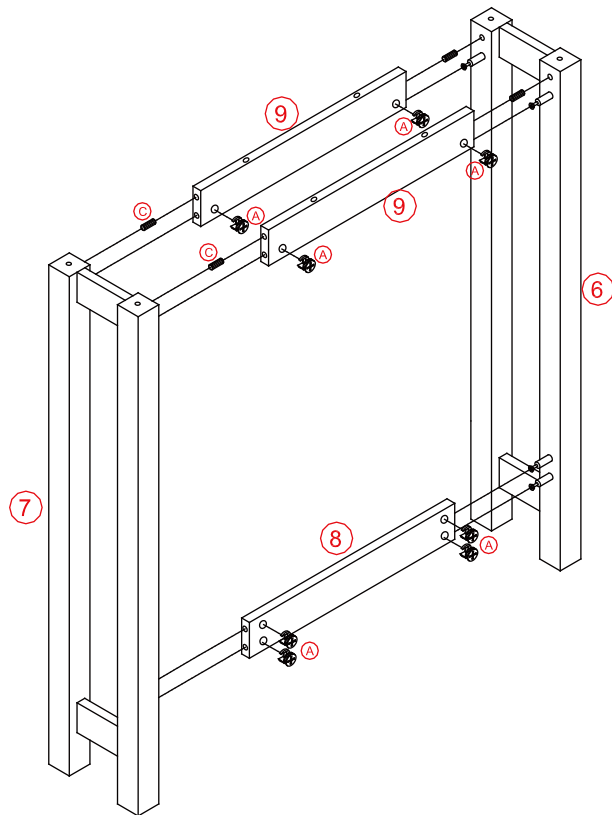


STEP 6

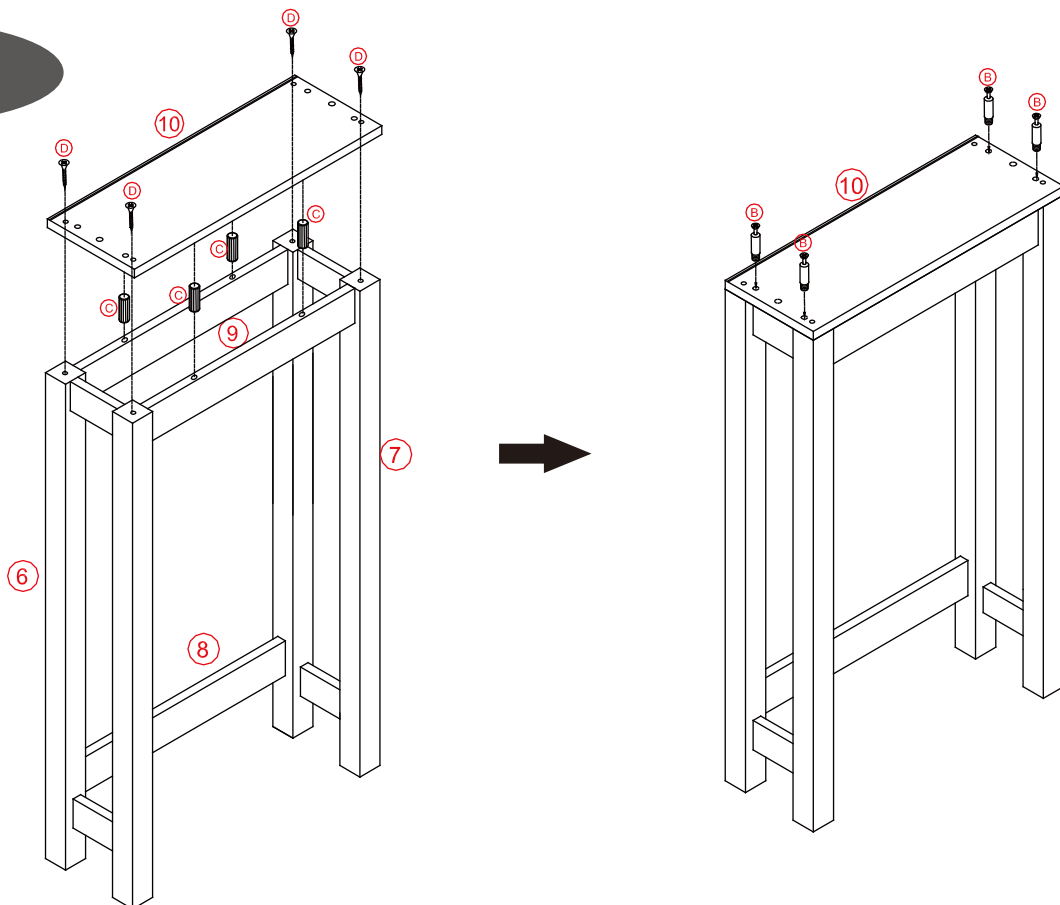


STEP 7

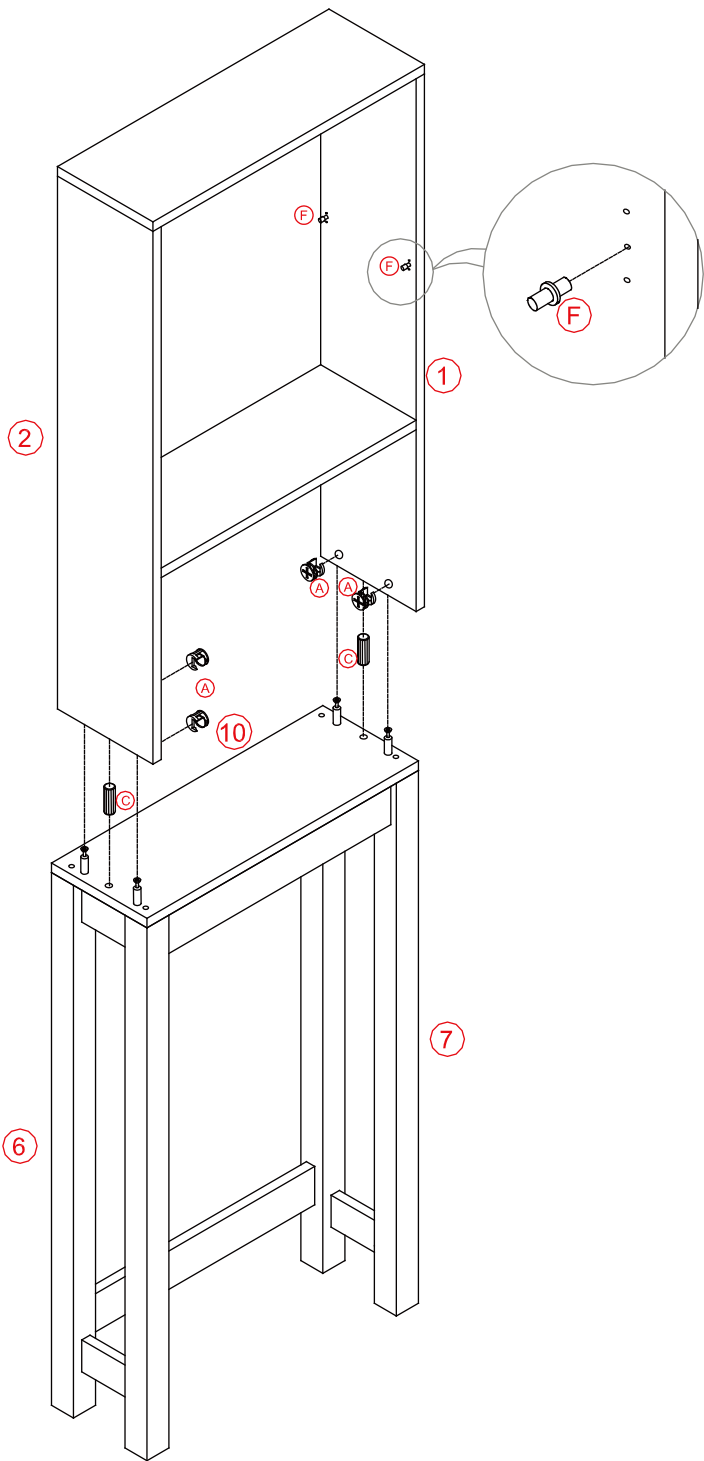


STEP 8

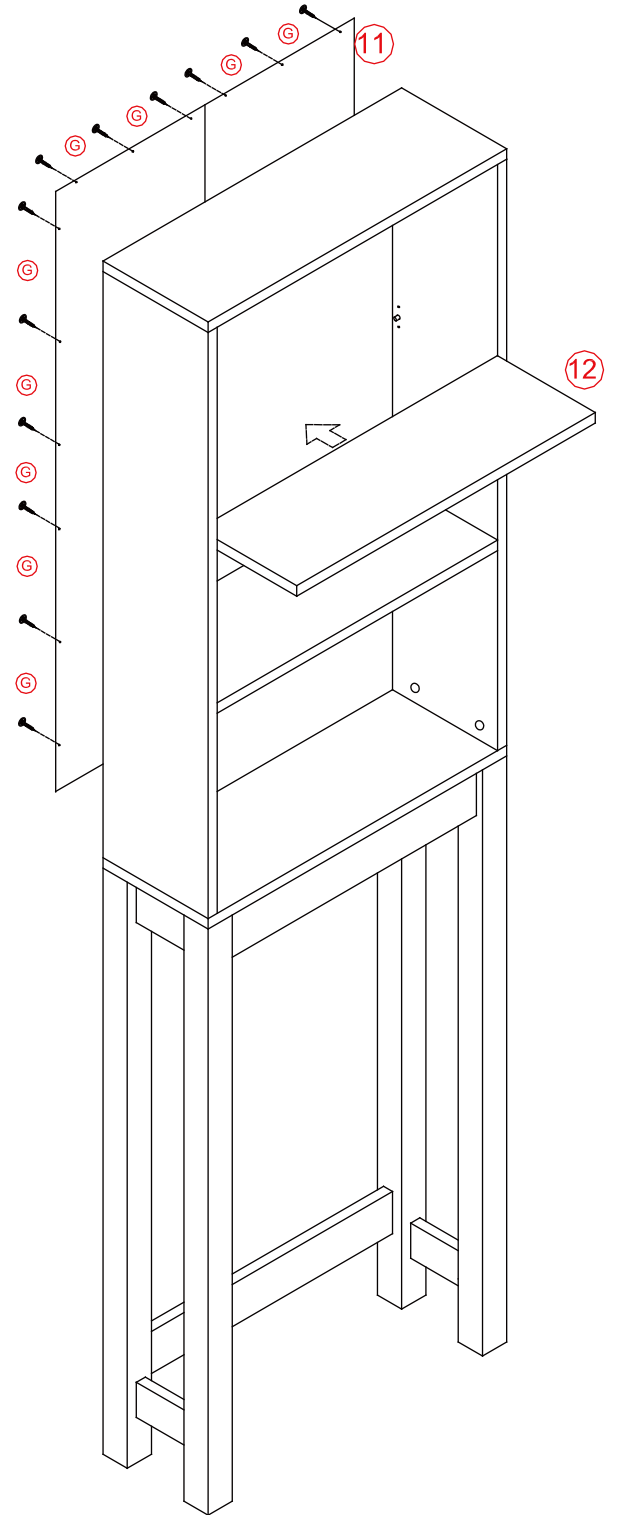



STEP 9

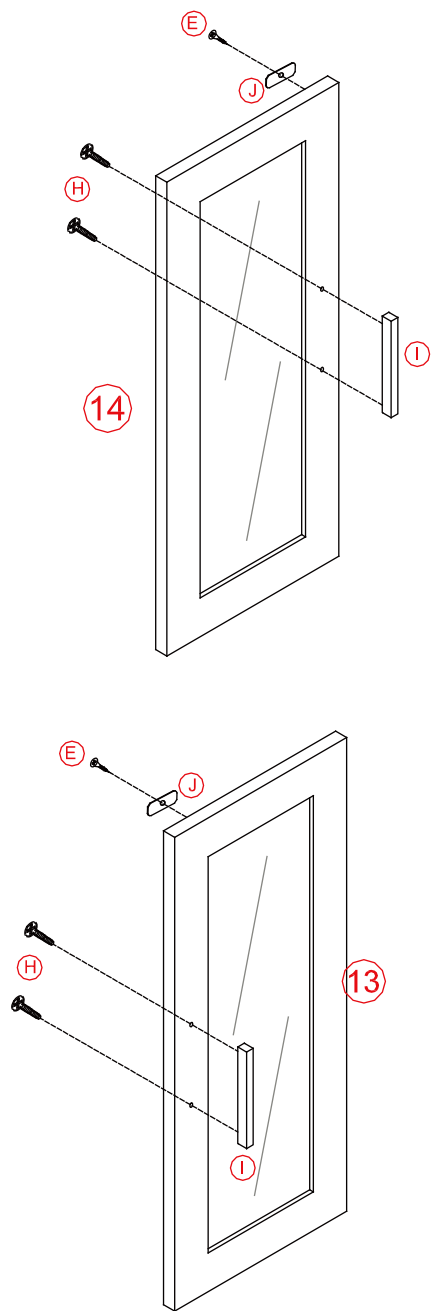

STEP 10

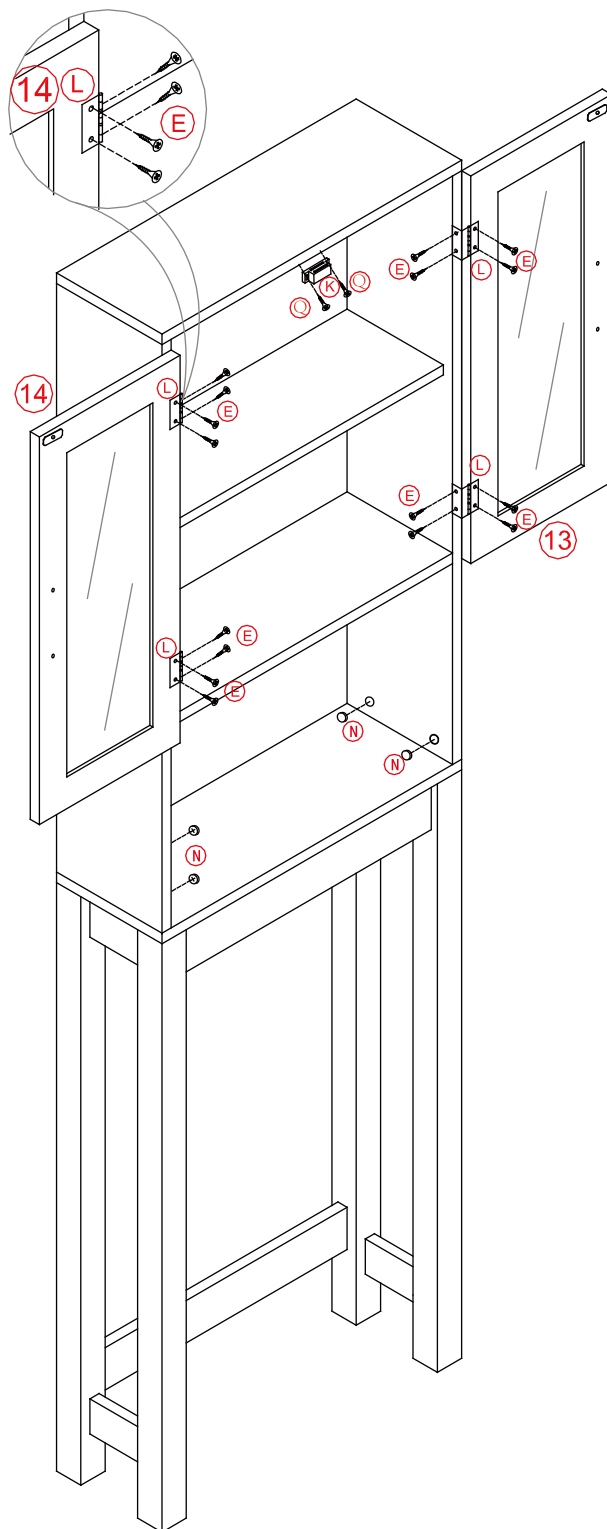

STEP 11

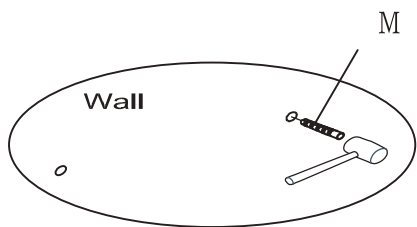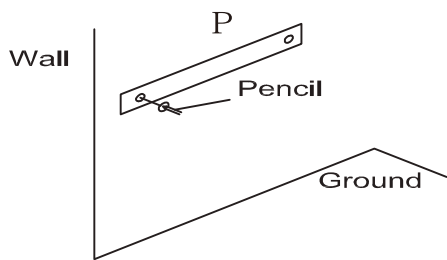

STEP 12

