

BOX MERCHANT PRE-DELIVERY GUIDE



***This guide contains everything you need to know
about the delivery and installation of your new
QCA Spa or USA Spa!***

QCA SPAS • 1021 STATE STREET • BETTENDORF, IOWA 52722
PHONE 888.729.7727 • FAX 800.568.4980 • WWW.QCASPAS.COM



BOX MERCHANT PRE-DELIVERY GUIDE

IMPORTANT INFORMATION

*Please make a record of the following information.
It will be valuable if service is required.*

.....

Spa Model: _____

Spa Serial Number: _____

Date Purchased: _____ Date Installed: _____

.....

Spa Purchased From: _____

Spa Merchant Address: _____

Spa Merchant Phone Number: _____

Sales Person's Name: _____

.....

IMPORTANT QCA SPAS CONTACT INFORMATION

QCA Spa Service: 888-727-7727 ext. 7382 or 7381: M-F 8AM-5PM

QCA Spa Service Email Address: support@qcaspas.com

QCA Spa Service Fax Number: 563-359-3018

.....

BOX MERCHANT PRE-DELIVERY GUIDE

Introduction

CONGRATULATIONS ON THE PURCHASE OF YOUR NEW QCA SPA!

With some advance preparation, delivery of your new spa will be a breeze. We've prepared this planning guide to provide you with the information necessary for you to be ready for your spa's delivery. We recommend reading this guide completely prior to the scheduled delivery of your QCA Spa. Proper preparation and care of your new QCA Spa will give your family years of relaxation and enjoyment.



TABLE OF CONTENTS

Section	Page
1. Things To Determine Before Spa Installation	4
2. Selecting The Best Location For Your Spa	6
3. Plan A Good Foundation For Your Spa	9
4. Plan The Delivery Of Your Spa.....	11
5. Electrical Requirements Before Spa Delivery	14
6. G.F.C.I. Wiring Diagram.....	16
7. Electrical Installation Of Spa After Spa Delivery	17
8. Wiring Placement Underneath Spa.....	18
9. Wiring Schematic.....	19
10. Spa Model Specifications	20

BOX MERCHANT PRE-DELIVERY GUIDE

1. Things To Determine Before Spa Installation

- Will my spa be located inside or outside?
- How much space do I have available for a spa?
(Size of room, or patio)
- What are the measurements of door openings, fence gates for getting your spa to its destination?
- What are the dimensions of the spa (length, width, and depth) to determine if it will pass through interior doors or exterior gates?
- What is the weight of the spa without water and when filled. Will your patio, or room floor support its considerable weight?
- Does your home have a dedicated 50 or 60 AMP GFCI breaker in the houses main breaker box or will one have to be added by an electrician?
- How far is it from your main breaker box to where your spa will be located?
- Is there a water source available nearby to fill and drain the spa with a garden hose?



BOX MERCHANT PRE-DELIVERY GUIDE

Commonly Asked Questions

- **DO I NEED A BUILDING PERMIT?**

Most cities and counties require permits for exterior construction and electrical circuits. Check with your county or city to see if a building permit is required for spa installation.

- **DO I NEED A FENCE OR A GATE AROUND MY SPA?**

Some communities have codes requiring residential barriers such as fencing and/or self closing gates on the property to prevent unsupervised access to a spa by children under five years of age. Consult your local or county building codes to determine the need for a fence or gate.

- **DO I NEED A PLUMBER?**

No plumbing is required; your QCA Spa is entirely self-contained. Fill the spa using a garden hose; to empty, siphon with a garden hose or use a submersible pump.

- **DO I NEED AN ELECTRICIAN?**

Yes, you will need to hire an electrician to install the 240 volt 50 or 60 AMP neutrally protected G.F.C.I. (Ground Fault Circuit Interrupter) which are sold separately. Your main breaker box will also need to have a 50 or 60 AMP breaker. Your spa is hard wired through the floor or side wall of the spa cabinet, directly into the spa's control pack. The G.F.C.I. is installed next to the spa on an exterior wall at least 10 feet from the spa. *(Exception: Models 0, 0HSM, 1, 1P, 30, 31, 2S, 10, 14, and 14P come with a 15' G.F.C.I. protected cord and plug into any 120 V / 15 AMP wall outlet.)*

BOX MERCHANT PRE-DELIVERY GUIDE

2. *Selecting The Best Location For Your Spa*

Indoors or outdoors, its up to you. But there are some things you will need to consider when determining your spa's placement.

Outdoor Spa Placement

Outdoor spa placement on a sound, level, unbroken concrete foundation is required. Do not place your spa on grass, patio blocks, pavers, or bare ground.

Note: Damage caused by inadequate or improper foundation support is not covered by the manufacturer's warranty. A spa should rest completely flush with its foundation, therefore, do not endeavor to hand level your spa. The spa should not be shimmed in any way in an effort to level it. This may crack your spa shell or cause other internal damage. It is the responsibility of the spa owner to provide a proper foundation for the spa. Any attempt to manually level your spa, will void the warranty.

DO NOT place your spa directly under or within 12 feet of overhead power, telephone or cable lines.

Make sure the spa is positioned so you have full access to the spa equipment compartments located below the spa controls. Be sure to leave at least 30" around all sides and back panels for easy service access if needed.

BOX MERCHANT PRE-DELIVERY GUIDE

Weather

If you live in a climate with a cold snowy winter and hot summer, you may want to place your spa close to an exterior door for easy spa access. A bathroom or changing room located close to your spa, can also be convenient. A warmer climate may require shade from the hot sun. Consider placement of your spa next to trees, shrubs, patio cover, under a gazebo or spa umbrella.

Privacy

Keep in mind your spa's surroundings (trees, shrubs, fences) during all seasons to determine your best privacy. Consider the view of your neighbors and plan your location accordingly.

View

Think about the direction you will be facing when sitting in your spa. Facing the exterior siding of your house would not be very enjoyable. Place your spa where you will be facing a special landscaped area of your yard or a lovely evening sunset.

Keep Dirt and Debris Out of Your Spa

Check the location of trees and spill paths from gutters to see if wind or rain will sweep debris into your spa. Prevent dirt and foliage from being tracked into your spa by providing a concrete path.

BOX MERCHANT PRE-DELIVERY GUIDE

Indoor Spa Placement

For indoor spa placement, regular, code-compliant floors or level basement concrete are adequate to support the weight.

Indoor installation requires adequate ventilation. When the cover is off and the spa is in use, considerable amounts of humidity and moisture are put into the air. This moisture can damage, walls, ceilings, carpeting, draperies and furniture. You will need to install a ventilation exhaust fan either above the spa in the ceiling or in a side wall or window, next to and above the spa water. We also recommend a humidistat that will automatically turn on the exhaust fan when moisture is present.

Exhaust fans are rated by CFM's (cubic feet per minute). The fan must be powerful enough to remove all the air in the room in 3 minutes. To determine what size fan you will need, measure the rooms length x width x height and divide by 3 = CFM's. *Example: 20' x 10' x 8' = 1600 cubic ft. / 3 = 533 CFM's. You would need at least a 533 CFM fan for this room.*

We do not recommend placing your spa directly on household carpet or a wood floor. We recommend placing your spa on a ceramic tile or water resistant floor material. Extend this water resistant material at least 2 feet around the spa, in case of over splash and to catch water from bathers exiting the spa.

3. Plan A Good Foundation For Your Spa

Your spa needs a solid, level concrete foundation. The area that your spa sits on must be able to support the weight of the spa, the water in it, and those who use it. If the foundation is inadequate, it may shift or settle after the spa is in place, causing stress to the spa's shell.

Note: Damage caused by inadequate or improper foundation support is not covered by the manufacturer's warranty. A spa should rest completely flush with its foundation, therefore, do not endeavor to hand level your spa. The spa should not be shimmed in any way in an effort to level it. This may crack your spa shell or cause other internal damage. It is the responsibility of the spa owner to provide a proper concrete foundation for the spa. Any attempt to manually level your spa, will void the warranty.

A spa filled with water is very heavy. Existing concrete patios must be inspected by a licensed contractor to determine adequate support. Your base must have a minimum of 150 pounds per sq. ft. load bearing capacity.

Place the spa on an elevated concrete foundation so that water drains away from it. Proper drainage will keep components protected from rain and wet weather.

BOX MERCHANT PRE-DELIVERY GUIDE



DO NOT PLACE YOUR SPA ON BARE GROUND!

New concrete patios must be a 4" minimum depth with reinforced wire placed in the concrete.

4. Plan The Delivery Of Your Spa

Check the dimensions of your spa


The Spa Specification chart on the back page lists your spa model and its dimensions. Compare the dimensions to the width of gates, sidewalks, and doorways along the delivery route used to bring the spa into your yard. It may be necessary for you to remove a gate or partially remove a fence in order to provide an unobstructed passageway to the installation location.

Curbside Delivery

Your spa will be delivered by common carrier or freight truck to your home curbside. Your spa will be shipped within 21 business days and usually arrives within 10 business days after it ships. Independent delivery carrier will unload the spa from the truck and place it curbside next to a public street or highway. The driver ***IS NOT*** authorized to unwrap, set up, or do installation. The driver ***WILL NOT*** move your spa to the backyard or place it inside your home.



Sample Spa Route Diagram

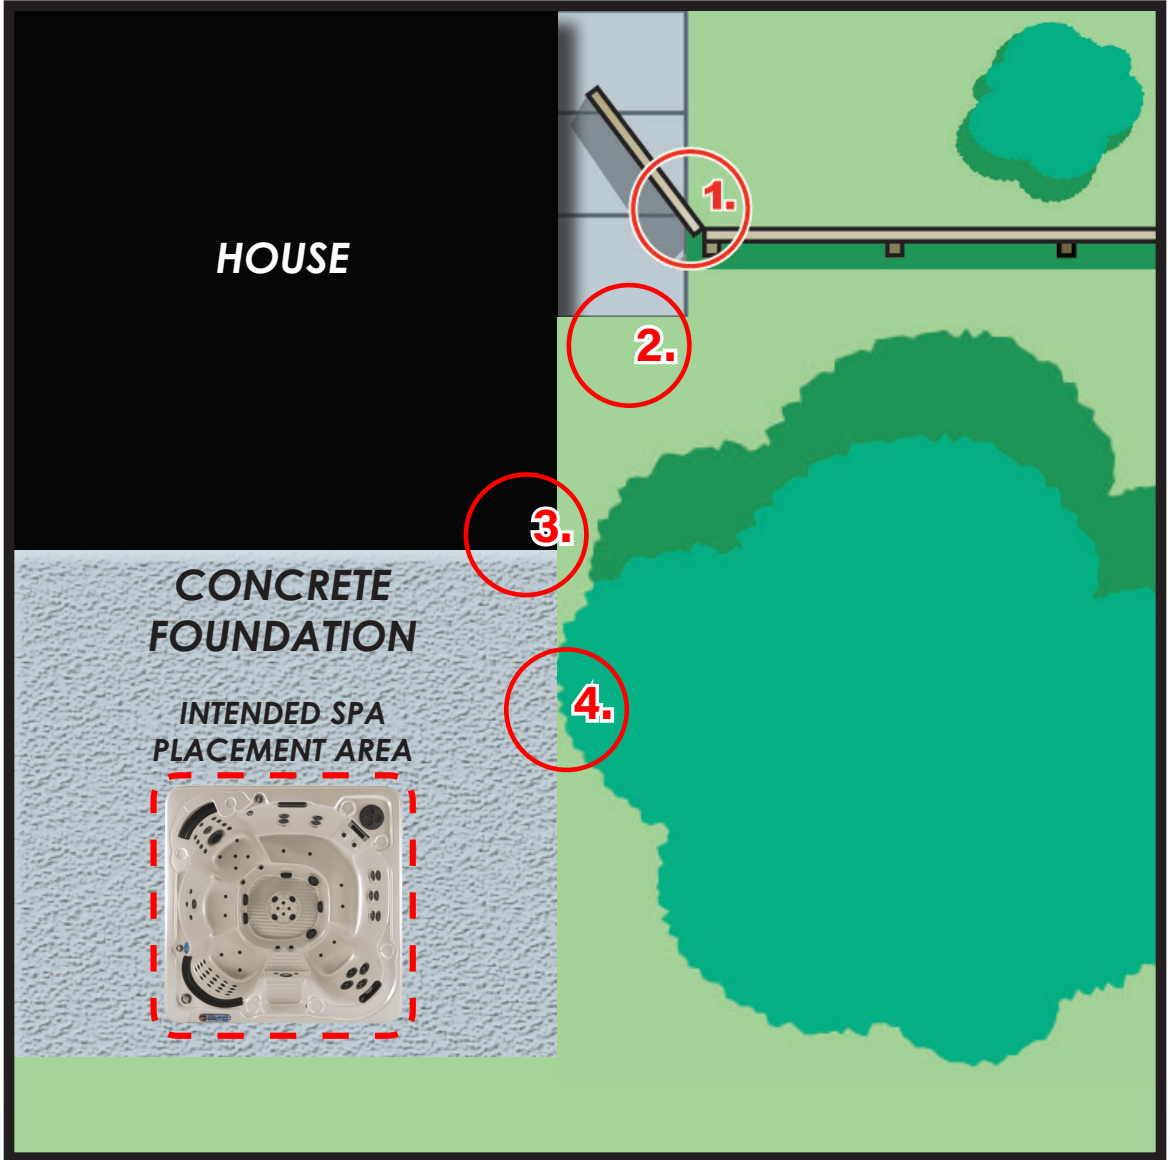



Plan your spa route

Create a diagram to plan your spa route. Consider the following when planning your own spa route in the sample illustration diagram (left):

Check the width of gates (#1), doors, steps (#2) and sidewalks to make sure your spa will pass through unobstructed. You may have to remove a gate or part of a fence to allow for adequate width clearance.

If the route will require a 90° turn, check the measurements at the turn to ensure the spa will fit. (#3)

Are there protruding gas meters, water meters or A/C units on your home which will be an obstruction along the path to your yard?

Are there low roof eaves, overhanging branches (#4) or rain gutters that could be an obstruction to overhead clearance?

Are there more than six (6) consecutive stairs without a landing in your route?

5. Electrical Requirements Before Spa Delivery

IMPORTANT PLEASE READ!

When installed in the United States or Canada, the electrical wiring of this spa must meet the requirements of the National Electric Code (NEC) and any applicable state, providence, or local codes. The electrical circuit must be installed by an electrical contractor or licensed electrician, and approved by a local building/electrical inspector.

Electrical setup before delivery of your spa

1. All 240 Volt spas must be permanently connected (hard wired) to the power supply. Supplying power to the spa which is not in accordance with these instructions will void both the independent testing agencies listing and the manufacturer's warranty.
2. The power supplied to the spa must be a dedicated circuit with no other appliances or lights sharing the power.
3. To determine the current, voltage and wire size required for the spa configuration to be connected:
 - Wire size must be appropriate per NEC and/or local codes. (Minimum #6 wire Required)
 - Wire size is determined by length of run from breaker box to spa and maximum current draw.
 - Minimum #6 copper wire with THHN insulation.
 - All wiring must be copper to ensure adequate connections. Do not use aluminum wire.

BOX MERCHANT PRE-DELIVERY GUIDE




4. The electrical supply for the spa must include a suitable rated switch or circuit breaker to open all ungrounded supply conductors to comply with Section 422-20 of the National Electric Code, ANSI/NFPA 70. The disconnecting means must be readily accessible to the spa's occupant but installed within 10 feet from the spa water. Check with local municipalities for additional code requirements.
5. The electrical circuit for the spa must include a suitable ground fault circuit interrupter (GFCI) as required by NEC Article 680-42. Your spa requires a Neutrally Protected (GFCI) Ground Fault Circuit Interrupter, see the illustration on the following page for the proper wiring for your spa's GFCI.

BOX MERCHANT PRE-DELIVERY GUIDE

6. GFCI Wiring Diagram

This diagram shows a "Three Wire Plus Ground" installation. It has a load Neutral connection, commonly required for spas containing both 120 and 240 volt equipment. They need the load neutral connection to produce the 120 volt power. The GFCI is usually 50 or 60 amps, depending on the amperage of your spa. A GFCI can be purchased at most Home Centers, Hardware Stores, or directly from QCA Spas. Refer to the table on page 20 to see what amperage your spa requires.

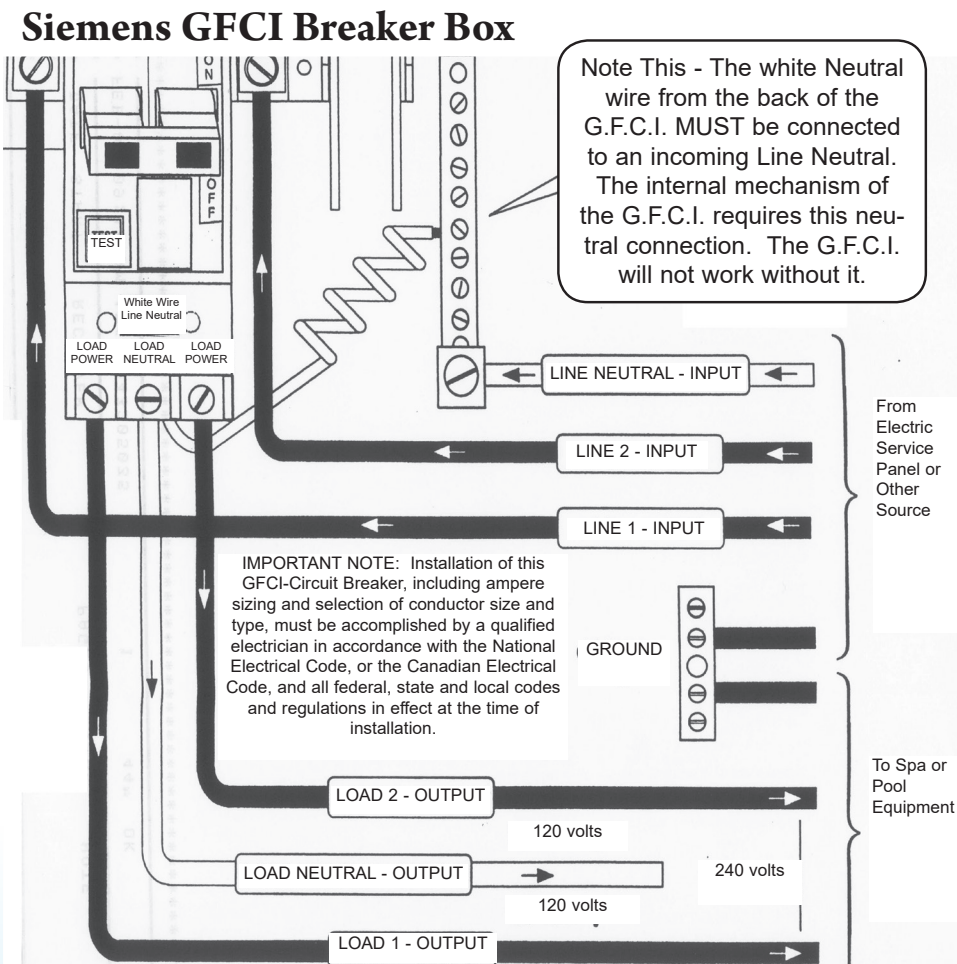

BOX MERCHANT PRE-DELIVERY GUIDE

7. Electrical Installation Of Spa After Delivery

(220/240 VOLT SPAS) IMPORTANT SAFETY NOTICE FOR ALL MODELS!

Proper grounding is extremely important.


**For QCA Spas
Control Packs**

VS 100

VS 300

VS 501

IN.YJ

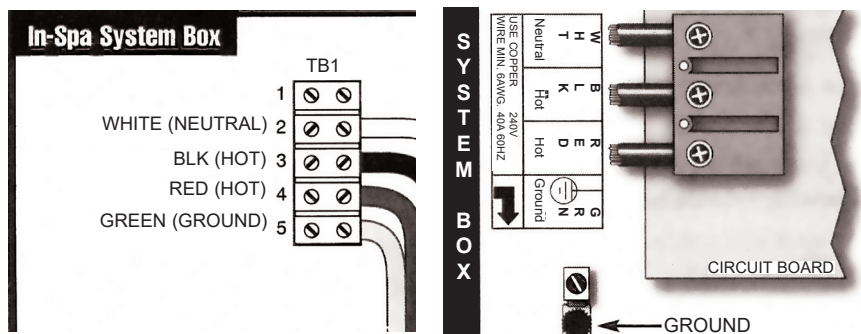


1. To gain access to the spa's control box, remove the cabinet access panel on the front of the spa, under the spas topside control. After removing the access panel, remove the two control box cover screws and cover.
2. Select the power wire inlet through the spa cabinet you want to use. (Either drill a hole through the cabinet or run wire in conduit through the base of the spa.) Then feed the power cable through it to the left side of the control box.
3. Run power wire through the circular hole on the left side of the control box.
4. Connect wires, color to color, into the terminal openings and tighten securely. Connect ground wire to the ground terminal and tighten securely.
5. Secure the control box door by installing its screws, then re-install the cabinet access panel under the topside control. Electrical installation is now complete.



BOX MERCHANT PRE-DELIVERY GUIDE

8. Wiring Placement Underneath Spa

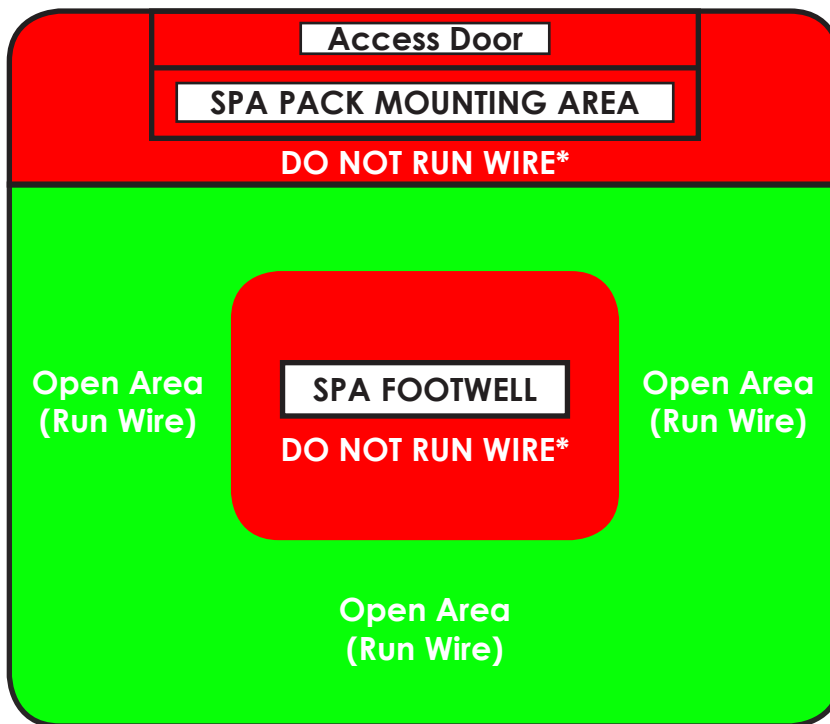THROUGH BASE OF SPA
FRONT OF SPA



THIS VIEW IS THE BOTTOM SIDE OF THE SPA


-  Do Not Run Wire Up Through Bottom of Spa
-  Open Area Acceptable to Run Wire Through Bottom of Spa

*** Do Not Put Wires Through Footwell or Spa Pack Area**

BOX MERCHANT PRE-DELIVERY GUIDE

9. Wiring Schematic

VS 100/300/501/IN.YJ

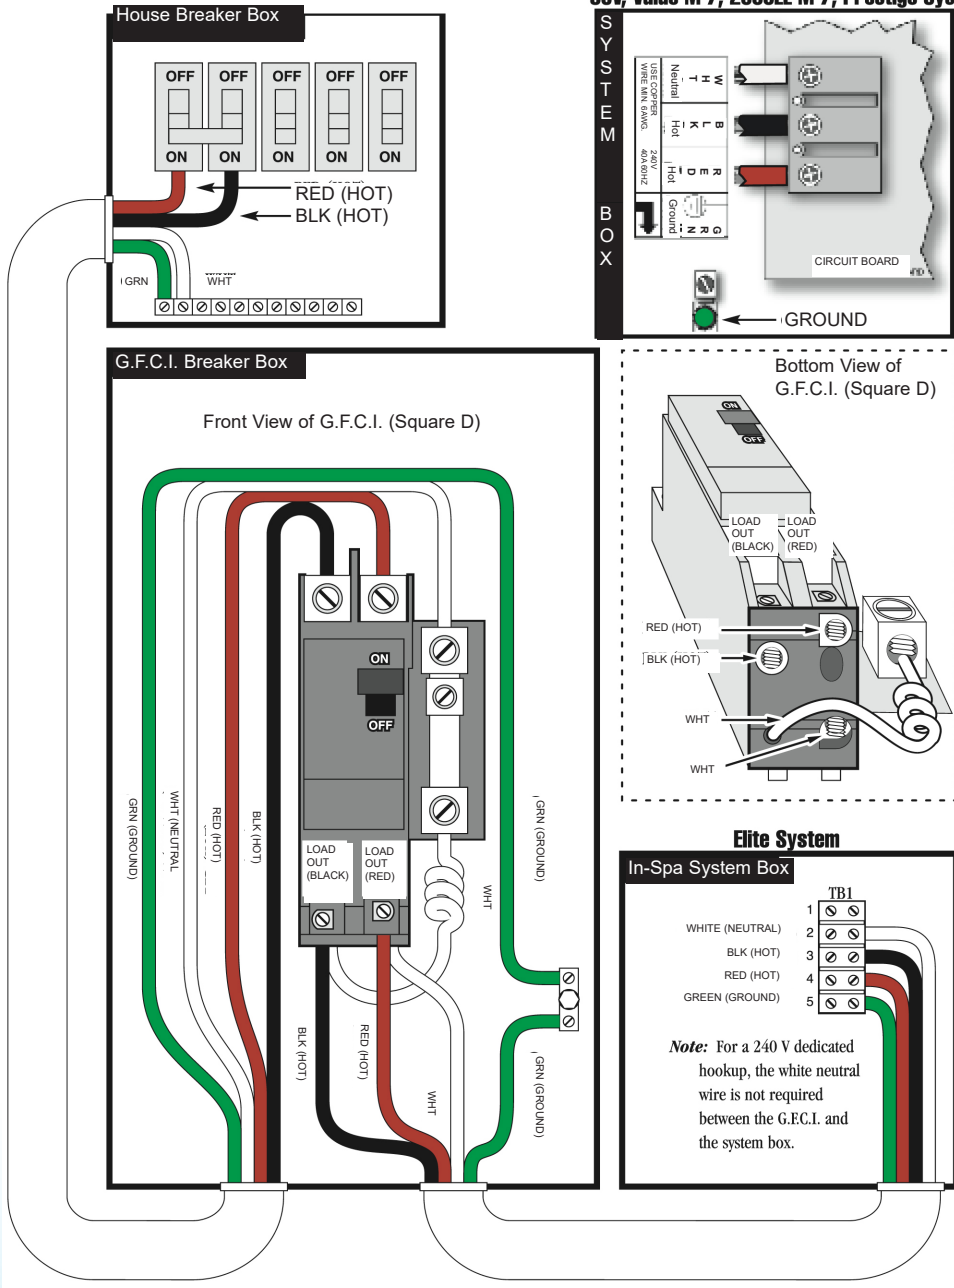

BOX MERCHANT PRE-DELIVERY GUIDE

10. Spa Model Specifications

Model Number	Outside Dimensions (LxWxD)	Gallons	Dry Weight	Filled Weight	Power in Volts/Amps
37P & 14P	80"x74"x30"	300	328	2974	120V/15Amp
33	78"x60"x34"	230	420	2338	120V/15Amp
34	78"x60"x34"	260	485	2653	120V/15Amp
35	78"x78"x36"	360	560	3562	240V/50Amp
36	78"x78"x38"	385	580	3791	240V/50Amp
38	72"x84"x36"	277	750	5000	240V/50Amp
0	91"x42"x29"	190	214	1799	120V/15Amp
OHSM	91"x42"x29"	190	214	1799	120V/15Amp
1	81"x57"x30"	240	309	2310	120V/15Amp
2L	82"x79"x36"	400	563	3899	240V/50Amp
10	88"x60"x30"	275	300	2594	240V/50Amp
14	80"x74"x30"	300	328	2974	120V/15Amp
3	82"x82"x36"	475	533	4552	240V/50Amp
4L	82"x82"x36"	425	586	4108	240V/50Amp
5 & 5A	82"x82"x36"	475	589/595	4552	240V/50Amp



©Copyright 2019-2020 | QCA Spas, Inc. | All Rights Reserved

