

# 88 5022 26


## Upholstered Bench

### IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damage occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

*Home  
Styles*

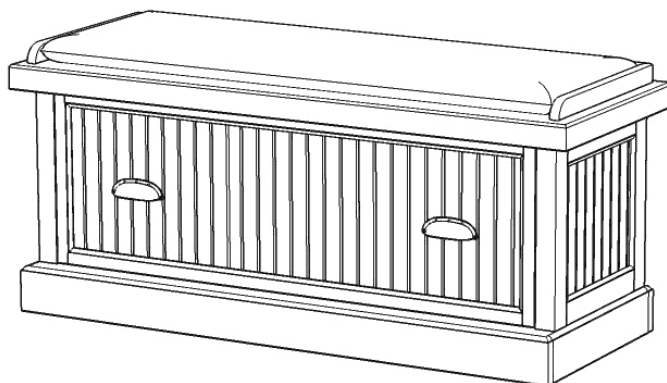


### Part List




**A.**  
**Cushion**  
1 pc.



**B.**  
**Top**  
1 pc.

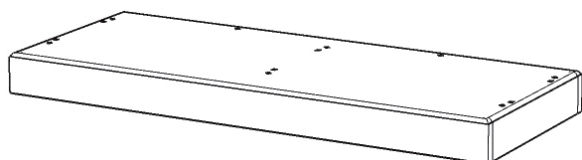

**F.**  
**Base**  
1 Pc.

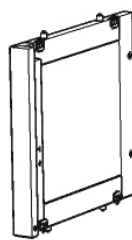


**C.**  
**Side Panel**  
1 Pc.




**D.**  
**Side Panel**  
1 Pc.



**E.**  
**Middle Panel**  
1 Pc.

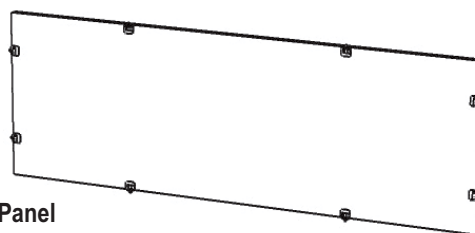


**G.**  
**Back Panel**  
1 Pc.

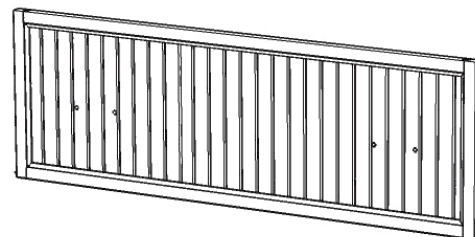

**H.**  
**Door**  
1 Pc.

### Hardware List

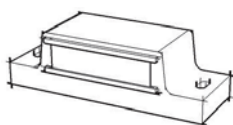

**Magnet**  
2 pcs.



**Pull Handle**  
2 pcs.




**M3x15  
Wood Screw  
for Magnet**  
4 pcs. (+1 extra)



**M4x12  
Machine Screw**  
4 pcs.



**M3x12  
Wood Screw  
for Hinge**  
8 pcs. (+1 extra)

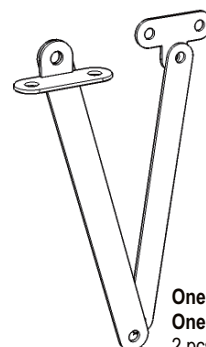

**One Left Hinge  
One Right Hinge**  
2 pcs.

**Tools required for assembly :** Phillips screwdriver

**Tools recommended for assembly :** Level

**Home Styles Consumer Assistance :** [www.homestyles-furniture.com](http://www.homestyles-furniture.com),  
[servicedesk@homestyles-furniture.com](mailto:servicedesk@homestyles-furniture.com), 888-680-7460, 877-831-0319

## IMPORTANT

\* Use a soft cloth between these parts and the floor.

\* After assembly, item must be level to work properly. Use the included adjustable levelers to level.

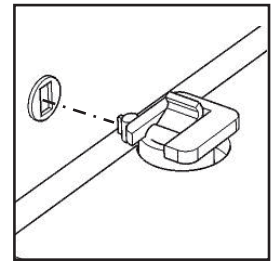
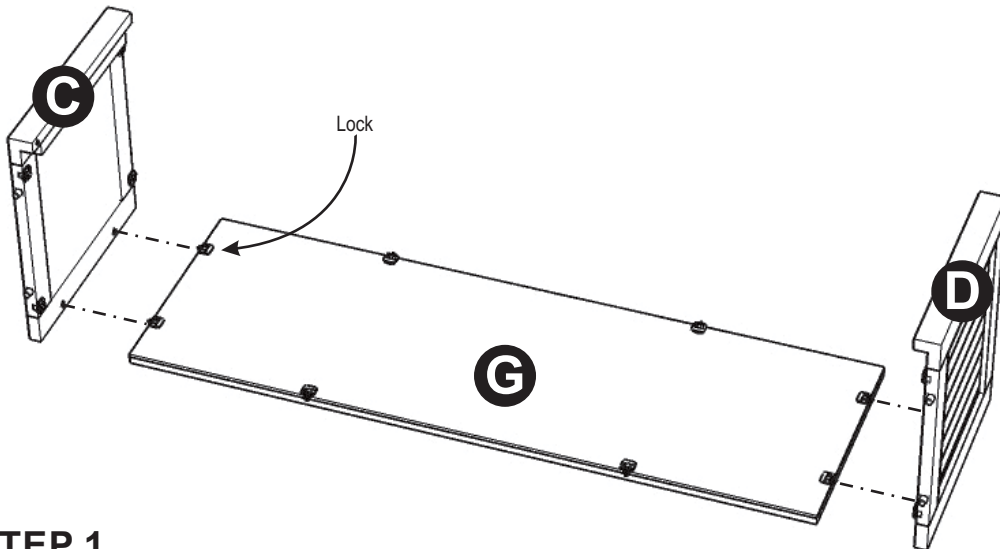


Figure 1


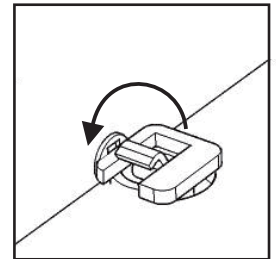


Figure 2

## STEP 1

Attach Side Panels (C) and (D) to Back Panel (G), then flip the Locks. (See Figures 1 and 2)

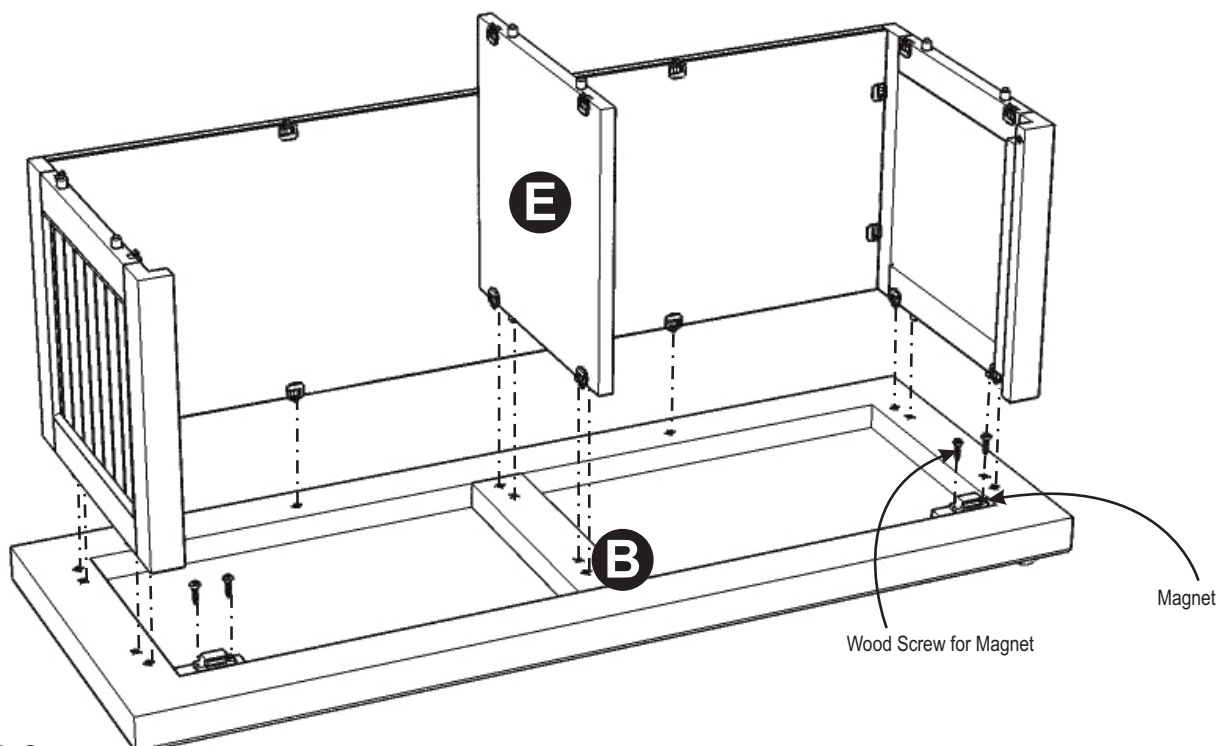

## STEP 2

Place Top (B) upside down on a soft cloth.

Attach Magnets to Top (B) with Wood Screws for Magnet. (See Figure 3)

Attach unit to Top (B), then flip the Locks.

Attach Middle Panel (E) to unit, then flip the Locks.


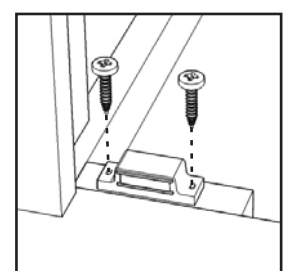



Figure 3



**Figure 4**

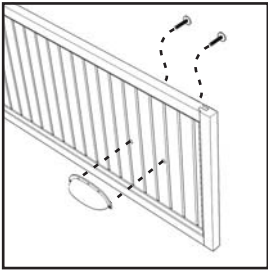


**Figure 5**

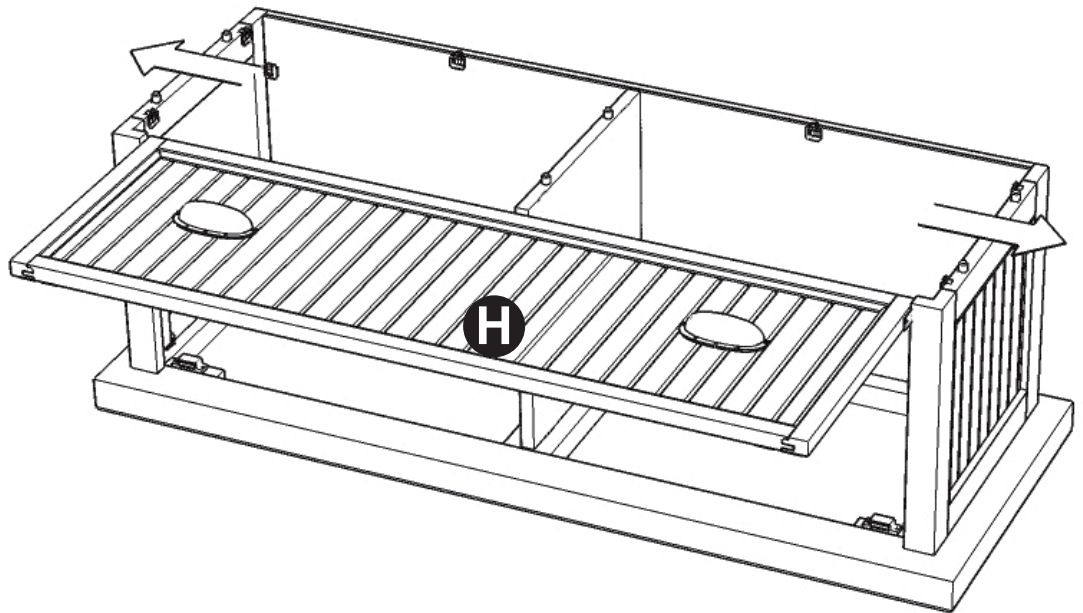

Attach Pull Handles to Door (H) with Machine Screws. (See Figure 4)

Attach Door (H) into pre-drilled holes of unit. (See Figure 5)

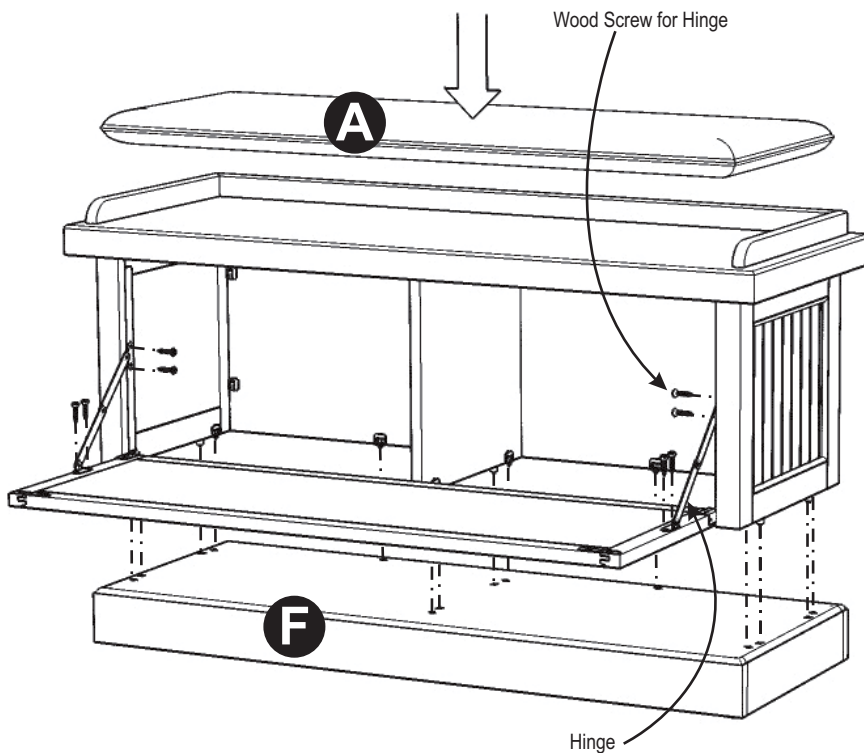

## STEP 4


Turn the unit over to its' upright position.

Attach unit to Base (F), then flip the Locks.


Attach Hinges to unit with Wood Screws for Hinge. (See Figure 6)

Place Cushion (A) into position.

To level the unit, adjust the adjustable levelers on the bottom of unit. (See Figure 7)

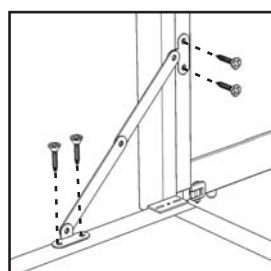

**Figure 6**

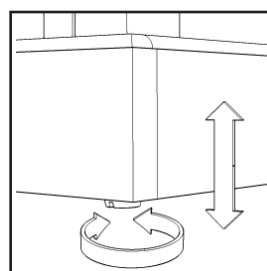

**Figure 7**