



Channel Lock Privacy Slats

Owner's Manual

Included in box:

84 slats
3 channel locks

For the Following Models


330148SBG
330148SBL
330148SBR
330148SGR
33018SWH

© Copyright 2018
Midwest Air Technologies, Inc
6700 Wildlife Way, Long Grove, IL 60047

Channel Lock Privacy Slats



Bottom Lock Instructions

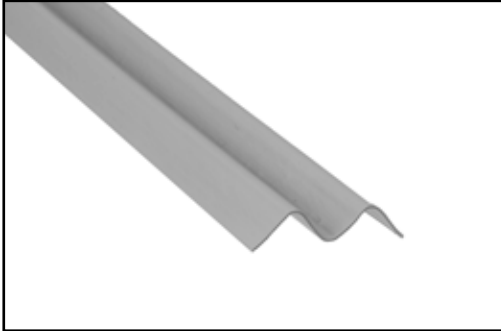


1. Begin by identifying the 84 slats and 3 channel locks.



2. Then insert locking channels into bottom of fence, one space above bottom of fence line.



3. Insert Channel-lock privacy slat through top of fence with tapered end being down. Gently slide Channel-lock slat downwards until locking slit securely locks into locking channel.

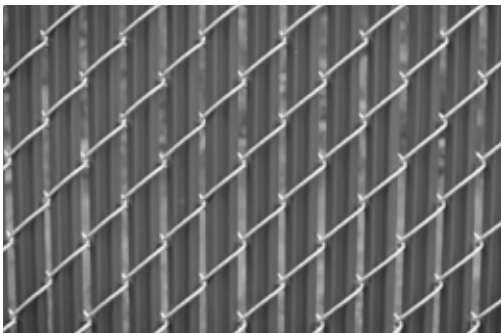

4. Continue inserting Channel-lock privacy slats individually until desired section is covered


Channel Lock Privacy Slats



Top Lock Instructions



1. Insert Channel-lock privacy slat tapered end up into fence channel, until bottom of slat reaches the ground.

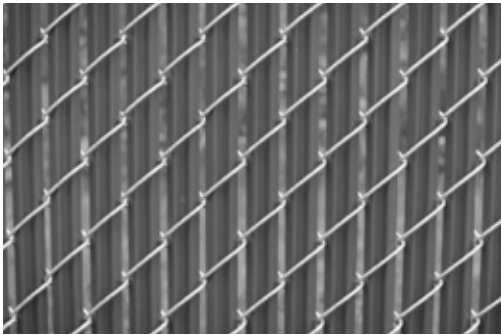

2. Continue inserting Channel-lock privacy slats individually until desired section is covered